

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate

www.vevor.com/support

Greenhouse Heater

MODEL: BGP1506-150/BGP1506-02-2

We continue to be committed to provide you tools with competitive price.

"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

VEVOR®

TOUGH TOOLS, HALF PRICE

MODEL: BGP1506-150/BGP1506-02-2



NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

Technical Support and E-Warranty Certificate
www.vevor.com/support

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

IMPORTANT INSTRUCTIONS

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electrical shock, and injury to persons, including the following:

1. Read all instructions before using this heater.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes and curtains at least 3 feet (0.9m) from the heater.
3. Extreme caution is necessary when any heater is used by or near children, pets or invalids and whenever the heater is left operating unattended.
4. If possible always unplug this appliance when not in use.
5. Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner.
6. Any repairs to this appliance should be carried out by a qualified service person.
7. Under no circumstances should this appliance be modified. Parts having to be removed for servicing must be replaced prior to operating this appliance again.
8. Do not use outdoors.
9. Use your heater only in dry environments. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate the heater where it may fall into a bathtub or other water container. Do not use your heater outdoors. Do not use near sinks, swimming pools or other damp areas such as flooded basements, garages, etc or anyplace where the heater could come in contact with water.
10. Do not use this heater in elevated locations, such as on shelves, raised platforms, etc.

11. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
12. To disconnect heater, first turn controls to off, then remove plug from outlet. Always unplug the heater when not in use.
13. Connect to a properly grounded outlets only.
14. During installation, the equipment must be electrically grounded in accordance with local regulations, local regulations, and national electrical standards.
15. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electrical shock or fire, or damage the heater.
16. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
17. This appliance has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint or flammable liquids are used or stored. This appliance should not be used as a drying rack for clothing, nor should Christmas stockings or decorations be hung or near it.
18. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
19. Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power strip.
20. Do not use this heater with missing, damaged, or broken legs.
21. "SAVE THESE INSTRUCTIONS"

ALWAYS OBSERVE THESE SAFETY PRECAUTIONS WHEN OPERATING YOUR ELECTRIC HEATER

ALWAYS Read all instructions before operating.

ALWAYS Locate your electric heater away from furniture or loose hanging drapes.

ALWAYS Keep the rear grill away from walls or drapes so as not to block the air intake. (If applicable)

ALWAYS Unplug electric heater when not in use.

ALWAYS Use electric heater on a flat dry surface.

ALWAYS Route the cord so it will not be walked on tripped over or pinched by furniture.

ALWAYS Keep electrical cords, drapes and other furnishings away from your electric heater.

ALWAYS Keep your electric heater clean and the filter free of dust. (If applicable)

ALWAYS Use indoors only.

NEVER Place drapes, clothing or towels over electric heater to dry.

NEVER Use in the presence of explosive or flammable vapors such as gas or paint.

NEVER Plug another electrical appliance into the same circuit. Blown fuses, tripped circuits and fire hazards may result.

NEVER Use water or liquids to clean your electric heater.

NEVER Let bare skin touch hot surfaces as this may cause burns.

NEVER Leave electric heater unattended.

NEVER Leave electric heater when children or pets are present.

NEVER Locate electric heater where it may fall into a bath tub or other water containers.

NEVER Operate electric heater with a damaged cord, plug or after the heater malfunctions, or has been dropped or damaged in any manner.

NEVER Run cord under carpeting or cover with throw rugs or runners.

NEVER Insert or allow foreign objects to enter any ventilation or exhaust openings, as this may cause an electrical shock, fire or damage.

SAVE THESE INSTRUCTIONS







IMPORTANT: Read all instructions and warnings carefully before installation and use. Failure to follow these instructions may result

in a possible electric shock, injury to persons, fire hazard and will void the warranty

OPERATING INSTRUCTIONS

Note: When using the heater for the first time, you may notice a slight emission of smoke. This is normal and will stop after a short time. The heating element is made of steel and was coated with a layer of protective oil during production.

| Setting | Function |
|---|----------------------------|
|  | Unit is off |
|  | Fan Runs – No Heat |
|  | Fan Runs –Half Power Heat |
|  | Fan Runs – Full Power Heat |

- 1.Position the fan heater so that it stands on a firm level surface (When used as portable) and at a safe distance from wet locations and flammable objects.
- 2.Connect the fan heater to the proper electrical power. See grounding instructions.
- 3.Set the power settings knob to fan or heating Position.
- 4.Set the thermostat dial to the maximum temperature.
- 5.Once the room reaches the desired temperature, turn the thermostat dial back until heating element turns off. The heater will cycle automatically around this present temperature. To increase temperature, turn the thermostat knob clockwise. To lower temperature, turn the thermostat counterclockwise.



 
Electrical outlet wiring must comply with local building codes and other applicable regulations to reduce the risk of fire, electrical shock and injury to persons.



Do not use this appliance if any part of it has been underwater. Immediately call a qualified service technician to inspect the appliance and replace any part of the electrical system which has been under water.

Grounding Instructions:

Make sure the heater is switched OFF before plugging the heater into the outlet. Connect to properly grounded outlets only.

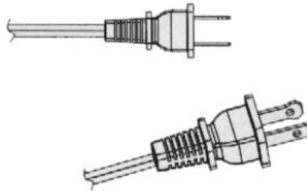

American standard plug

Note: The power cord has a polarized plug (with one blade wider than the other) that will only fit in a polarized outlet one way. If it does not insert easily try reversing the plug. If it still does not fit contact your electrician to replace your outlet.



DO NOT defeat the safety purpose of the polarized plug.



European standard plug

Automatic Overheat Safety Control

This heater is equipped with an internal heat limiting thermostat and overheats protection circuit. When a potential overheat temperature is reached, the system will automatically shut the heater off. Unplug heater allow to cool down for 10 minutes, and then restart.

| | | |
|---|--|---|
|  | CAUTION: RISK OF ELECTRIC SHOCK DO NOT OPEN NO SERVICEABLE PARTS INSIDE |  |
|---|--|---|

Cleaning and Maintenance

Any electrical repairs or rewiring of this unit should be carried out by a licensed electrician and accordance with national and local codes.

Before cleaning the appliance, disconnect it from the power outlet and let it cool down.

In order to protect the enclosure, don't splash water onto the heater, and never use a solvent like gasoline, isoamyl acetate, toluene, etc. to clean the heater.

DO NOT open the heater or attempt to clean the inside of this appliance.

TROUBLE SHOOTING

| PROBLEM | CAUSE | SOLUTION |
|-----------------------------------|--|---|
| Heating element does not glow red | Stainless steel elements won't glow red to produce heat. | Heater is operating correctly |
| Do not feel heat or air flow | No power to heater | Check power connection to heater |
| | Desired room temperature reached. | Thermostat will shut off heater once desired room temperature is reached. |

| | | |
|--|------------------------------|--|
| | Auto-Reset has tripped | Unplug heater allow to cool down for 10 minutes, then restart. |
| | Heater has fan only setting. | Set to run on full power for heating. |

SPECIFICATIONS

| | | |
|----------------|-----------------|-------------|
| Model | BGP1506-02-2 | BGP1506-150 |
| Voltage | AC220-240V 50Hz | AC120V 60Hz |
| Watts | 2000W | 1500W |

Manufacturer: Shanghaimuxinmuyeyouxiangongsi

Address: Baoshanqu Shuangchenglu 803long 11hao 1602A-1609shi
Shanghai

Imported to AUS: SIHAO PTY LTD.1 ROKEVA STREETEASTWOOD
NSW 2122 Australia

Imported to USA: Sanven Technology Ltd. Suite 250,9166 Anaheim
Place,Rancho Cucamonga,CA91730

| | |
|-----------|------------|
| UK | REP |
|-----------|------------|

Pooledas Group Ltd
Unit 5 Albert Edward House, The Pavilions
Preston, United Kingdom

| | |
|-----------|------------|
| EC | REP |
|-----------|------------|

SHUNSHUN GmbH
Römeräcker 9 Z2021, 76351
Linkenheim-Hochstetten, Germany

Made In China

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate

www.vevor.com/support

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate

www.vevor.com/support

Greenhouse Heater

MODEL: BGP1506-150/BGP1506-02-2

We continue to be committed to provide you tools with competitive price.

"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

VEVOR®

TOUGH TOOLS, HALF PRICE

MODEL: BGP1506-150/BGP1506-02-2



NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

Technical Support and E-Warranty Certificate
www.vevor.com/support

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

IMPORTANT INSTRUCTIONS

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electrical shock, and injury to persons, including the following:

1. Read all instructions before using this heater.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes and curtains at least 3 feet (0.9m) from the heater.
3. Extreme caution is necessary when any heater is used by or near children, pets or invalids and whenever the heater is left operating unattended.
4. If possible always unplug this appliance when not in use.
5. Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner.
6. Any repairs to this appliance should be carried out by a qualified service person.
7. Under no circumstances should this appliance be modified. Parts having to be removed for servicing must be replaced prior to operating this appliance again.
8. Do not use outdoors.
9. Use your heater only in dry environments. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate the heater where it may fall into a bathtub or other water container. Do not use your heater outdoors. Do not use near sinks, swimming pools or other damp areas such as flooded basements, garages, etc or anyplace where the heater could come in contact with water.
10. Do not use this heater in elevated locations, such as on shelves, raised platforms, etc.

11. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
12. To disconnect heater, first turn controls to off, then remove plug from outlet. Always unplug the heater when not in use.
13. Connect to a properly grounded outlets only.
14. During installation, the equipment must be electrically grounded in accordance with local regulations, local regulations, and national electrical standards.
15. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electrical shock or fire, or damage the heater.
16. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
17. This appliance has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint or flammable liquids are used or stored. This appliance should not be used as a drying rack for clothing, nor should Christmas stockings or decorations be hung or near it.
18. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
19. Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power strip.
20. Do not use this heater with missing, damaged, or broken legs.
21. "SAVE THESE INSTRUCTIONS"

ALWAYS OBSERVE THESE SAFETY PRECAUTIONS WHEN OPERATING YOUR ELECTRIC HEATER

ALWAYS Read all instructions before operating.

ALWAYS Locate your electric heater away from furniture or loose hanging drapes.

ALWAYS Keep the rear grill away from walls or drapes so as not to block the air intake. (If applicable)

ALWAYS Unplug electric heater when not in use.

ALWAYS Use electric heater on a flat dry surface.

ALWAYS Route the cord so it will not be walked on tripped over or pinched by furniture.

ALWAYS Keep electrical cords, drapes and other furnishings away from your electric heater.

ALWAYS Keep your electric heater clean and the filter free of dust. (If applicable)

ALWAYS Use indoors only.

NEVER Place drapes, clothing or towels over electric heater to dry.

NEVER Use in the presence of explosive or flammable vapors such as gas or paint.

NEVER Plug another electrical appliance into the same circuit. Blown fuses, tripped circuits and fire hazards may result.

NEVER Use water or liquids to clean your electric heater.

NEVER Let bare skin touch hot surfaces as this may cause burns.

NEVER Leave electric heater unattended.

NEVER Leave electric heater when children or pets are present.

NEVER Locate electric heater where it may fall into a bath tub or other water containers.

NEVER Operate electric heater with a damaged cord, plug or after the heater malfunctions, or has been dropped or damaged in any manner.

NEVER Run cord under carpeting or cover with throw rugs or runners.

NEVER Insert or allow foreign objects to enter any ventilation or exhaust openings, as this may cause an electrical shock, fire or damage.

SAVE THESE INSTRUCTIONS







IMPORTANT: Read all instructions and warnings carefully before installation and use. Failure to follow these instructions may result

in a possible electric shock, injury to persons, fire hazard and will void the warranty

OPERATING INSTRUCTIONS

Note: When using the heater for the first time, you may notice a slight emission of smoke. This is normal and will stop after a short time. The heating element is made of steel and was coated with a layer of protective oil during production.

| Setting | Function |
|---|----------------------------|
|  | Unit is off |
|  | Fan Runs – No Heat |
|  | Fan Runs –Half Power Heat |
|  | Fan Runs – Full Power Heat |

- 1.Position the fan heater so that it stands on a firm level surface (When used as portable) and at a safe distance from wet locations and flammable objects.
- 2.Connect the fan heater to the proper electrical power. See grounding instructions.
- 3.Set the power settings knob to fan or heating Position.
- 4.Set the thermostat dial to the maximum temperature.
- 5.Once the room reaches the desired temperature, turn the thermostat dial back until heating element turns off. The heater will cycle automatically around this present temperature. To increase temperature, turn the thermostat knob clockwise. To lower temperature, turn the thermostat counterclockwise.



 
Electrical outlet wiring must comply with local building codes and other applicable regulations to reduce the risk of fire, electrical shock and injury to persons.



Do not use this appliance if any part of it has been underwater. Immediately call a qualified service technician to inspect the appliance and replace any part of the electrical system which has been under water.

Grounding Instructions:

Make sure the heater is switched OFF before plugging the heater into the outlet. Connect to properly grounded outlets only.

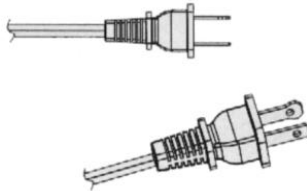

American standard plug

Note: The power cord has a polarized plug (with one blade wider than the other) that will only fit in a polarized outlet one way. If it does not insert easily try reversing the plug. If it still does not fit contact your electrician to replace your outlet.



DO NOT defeat the safety purpose of the polarized plug.



European standard plug

Automatic Overheat Safety Control

This heater is equipped with an internal heat limiting thermostat and overheats protection circuit. When a potential overheat temperature is reached, the system will automatically shut the heater off. Unplug heater allow to cool down for 10 minutes, and then restart.

| | | |
|---|--|---|
|  | CAUTION: RISK OF ELECTRIC SHOCK DO NOT OPEN NO SERVICEABLE PARTS INSIDE |  |
|---|--|---|

Cleaning and Maintenance

Any electrical repairs or rewiring of this unit should be carried out by a licensed electrician and accordance with national and local codes.

Before cleaning the appliance, disconnect it from the power outlet and let it cool down.

In order to protect the enclosure, don't splash water onto the heater, and never use a solvent like gasoline, isoamyl acetate, toluene, etc. to clean the heater.

DO NOT open the heater or attempt to clean the inside of this appliance.

TROUBLE SHOOTING

| PROBLEM | CAUSE | SOLUTION |
|-----------------------------------|--|---|
| Heating element does not glow red | Stainless steel elements won't glow red to produce heat. | Heater is operating correctly |
| Do not feel heat or air flow | No power to heater | Check power connection to heater |
| | Desired room temperature reached. | Thermostat will shut off heater once desired room temperature is reached. |

| | | |
|--|------------------------------|--|
| | Auto-Reset has tripped | Unplug heater allow to cool down for 10 minutes, then restart. |
| | Heater has fan only setting. | Set to run on full power for heating. |

SPECIFICATIONS

| | | |
|----------------|-----------------|-------------|
| Model | BGP1506-02-2 | BGP1506-150 |
| Voltage | AC220-240V 50Hz | AC120V 60Hz |
| Watts | 2000W | 1500W |

Manufacturer: Shanghaimuxinmuyeyouxiangongsi

Address: Baoshanqu Shuangchenglu 803long 11hao 1602A-1609shi
Shanghai

Imported to AUS: SIHAO PTY LTD.1 ROKEVA STREETEASTWOOD
NSW 2122 Australia

Imported to USA: Sanven Technology Ltd. Suite 250,9166 Anaheim
Place,Rancho Cucamonga,CA91730

| | |
|-----------|------------|
| UK | REP |
|-----------|------------|

Pooledas Group Ltd
Unit 5 Albert Edward House, The Pavilions
Preston, United Kingdom

| | |
|-----------|------------|
| EC | REP |
|-----------|------------|

SHUNSHUN GmbH
Römeräcker 9 Z2021, 76351
Linkenheim-Hochstetten, Germany

Made In China

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate

www.vevor.com/support

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate

www.vevor.com/support

Greenhouse Heater

MODEL: BGP1506-150/BGP1506-02-2

We continue to be committed to provide you tools with competitive price.

"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

VEVOR®

TOUGH TOOLS, HALF PRICE

MODEL: BGP1506-150/BGP1506-02-2



NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

Technical Support and E-Warranty Certificate
www.vevor.com/support

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

IMPORTANT INSTRUCTIONS

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electrical shock, and injury to persons, including the following:

1. Read all instructions before using this heater.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes and curtains at least 3 feet (0.9m) from the heater.
3. Extreme caution is necessary when any heater is used by or near children, pets or invalids and whenever the heater is left operating unattended.
4. If possible always unplug this appliance when not in use.
5. Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner.
6. Any repairs to this appliance should be carried out by a qualified service person.
7. Under no circumstances should this appliance be modified. Parts having to be removed for servicing must be replaced prior to operating this appliance again.
8. Do not use outdoors.
9. Use your heater only in dry environments. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate the heater where it may fall into a bathtub or other water container. Do not use your heater outdoors. Do not use near sinks, swimming pools or other damp areas such as flooded basements, garages, etc or anyplace where the heater could come in contact with water.
10. Do not use this heater in elevated locations, such as on shelves, raised platforms, etc.

11. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
12. To disconnect heater, first turn controls to off, then remove plug from outlet. Always unplug the heater when not in use.
13. Connect to a properly grounded outlets only.
14. During installation, the equipment must be electrically grounded in accordance with local regulations, local regulations, and national electrical standards.
15. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electrical shock or fire, or damage the heater.
16. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
17. This appliance has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint or flammable liquids are used or stored. This appliance should not be used as a drying rack for clothing, nor should Christmas stockings or decorations be hung or near it.
18. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
19. Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power strip.
20. Do not use this heater with missing, damaged, or broken legs.
21. "SAVE THESE INSTRUCTIONS"

ALWAYS OBSERVE THESE SAFETY PRECAUTIONS WHEN OPERATING YOUR ELECTRIC HEATER

ALWAYS Read all instructions before operating.

ALWAYS Locate your electric heater away from furniture or loose hanging drapes.

ALWAYS Keep the rear grill away from walls or drapes so as not to block the air intake. (If applicable)

ALWAYS Unplug electric heater when not in use.

ALWAYS Use electric heater on a flat dry surface.

ALWAYS Route the cord so it will not be walked on tripped over or pinched by furniture.

ALWAYS Keep electrical cords, drapes and other furnishings away from your electric heater.

ALWAYS Keep your electric heater clean and the filter free of dust. (If applicable)

ALWAYS Use indoors only.

NEVER Place drapes, clothing or towels over electric heater to dry.

NEVER Use in the presence of explosive or flammable vapors such as gas or paint.

NEVER Plug another electrical appliance into the same circuit. Blown fuses, tripped circuits and fire hazards may result.

NEVER Use water or liquids to clean your electric heater.

NEVER Let bare skin touch hot surfaces as this may cause burns.

NEVER Leave electric heater unattended.

NEVER Leave electric heater when children or pets are present.

NEVER Locate electric heater where it may fall into a bath tub or other water containers.

NEVER Operate electric heater with a damaged cord, plug or after the heater malfunctions, or has been dropped or damaged in any manner.

NEVER Run cord under carpeting or cover with throw rugs or runners.

NEVER Insert or allow foreign objects to enter any ventilation or exhaust openings, as this may cause an electrical shock, fire or damage.

SAVE THESE INSTRUCTIONS







IMPORTANT: Read all instructions and warnings carefully before installation and use. Failure to follow these instructions may result

in a possible electric shock, injury to persons, fire hazard and will void the warranty

OPERATING INSTRUCTIONS

Note: When using the heater for the first time, you may notice a slight emission of smoke. This is normal and will stop after a short time. The heating element is made of steel and was coated with a layer of protective oil during production.

| Setting | Function |
|---|----------------------------|
|  | Unit is off |
|  | Fan Runs – No Heat |
|  | Fan Runs –Half Power Heat |
|  | Fan Runs – Full Power Heat |

- 1.Position the fan heater so that it stands on a firm level surface (When used as portable) and at a safe distance from wet locations and flammable objects.
- 2.Connect the fan heater to the proper electrical power. See grounding instructions.
- 3.Set the power settings knob to fan or heating Position.
- 4.Set the thermostat dial to the maximum temperature.
- 5.Once the room reaches the desired temperature, turn the thermostat dial back until heating element turns off. The heater will cycle automatically around this present temperature. To increase temperature, turn the thermostat knob clockwise. To lower temperature, turn the thermostat counterclockwise.



 
Electrical outlet wiring must comply with local building codes and other applicable regulations to reduce the risk of fire, electrical shock and injury to persons.



Do not use this appliance if any part of it has been underwater. Immediately call a qualified service technician to inspect the appliance and replace any part of the electrical system which has been under water.

Grounding Instructions:

Make sure the heater is switched OFF before plugging the heater into the outlet. Connect to properly grounded outlets only.

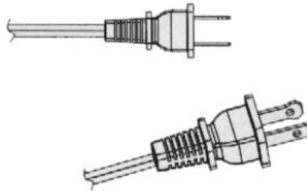

American standard plug

Note: The power cord has a polarized plug (with one blade wider than the other) that will only fit in a polarized outlet one way. If it does not insert easily try reversing the plug. If it still does not fit contact your electrician to replace your outlet.



DO NOT defeat the safety purpose of the polarized plug.



European standard plug

Automatic Overheat Safety Control

This heater is equipped with an internal heat limiting thermostat and overheats protection circuit. When a potential overheat temperature is reached, the system will automatically shut the heater off. Unplug heater allow to cool down for 10 minutes, and then restart.

| | | |
|---|--|---|
|  | CAUTION: RISK OF ELECTRIC SHOCK DO NOT OPEN NO SERVICEABLE PARTS INSIDE |  |
|---|--|---|

Cleaning and Maintenance

Any electrical repairs or rewiring of this unit should be carried out by a licensed electrician and accordance with national and local codes.

Before cleaning the appliance, disconnect it from the power outlet and let it cool down.

In order to protect the enclosure, don't splash water onto the heater, and never use a solvent like gasoline, isoamyl acetate, toluene, etc. to clean the heater.

DO NOT open the heater or attempt to clean the inside of this appliance.

TROUBLE SHOOTING

| PROBLEM | CAUSE | SOLUTION |
|-----------------------------------|--|---|
| Heating element does not glow red | Stainless steel elements won't glow red to produce heat. | Heater is operating correctly |
| Do not feel heat or air flow | No power to heater | Check power connection to heater |
| | Desired room temperature reached. | Thermostat will shut off heater once desired room temperature is reached. |

| | | |
|--|------------------------------|--|
| | Auto-Reset has tripped | Unplug heater allow to cool down for 10 minutes, then restart. |
| | Heater has fan only setting. | Set to run on full power for heating. |

SPECIFICATIONS

| | | |
|----------------|-----------------|-------------|
| Model | BGP1506-02-2 | BGP1506-150 |
| Voltage | AC220-240V 50Hz | AC120V 60Hz |
| Watts | 2000W | 1500W |

Manufacturer: Shanghaimuxinmuyeyouxiangongsi

Address: Baoshanqu Shuangchenglu 803long 11hao 1602A-1609shi
Shanghai

Imported to AUS: SIHAO PTY LTD.1 ROKEVA STREETEASTWOOD
NSW 2122 Australia

Imported to USA: Sanven Technology Ltd. Suite 250,9166 Anaheim
Place,Rancho Cucamonga,CA91730

| | |
|-----------|------------|
| UK | REP |
|-----------|------------|

Pooledas Group Ltd
Unit 5 Albert Edward House, The Pavilions
Preston, United Kingdom

| | |
|-----------|------------|
| EC | REP |
|-----------|------------|

SHUNSHUN GmbH
Römeräcker 9 Z2021, 76351
Linkenheim-Hochstetten, Germany

Made In China

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate

www.vevor.com/support

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate

www.vevor.com/support

Greenhouse Heater

MODEL: BGP1506-150/BGP1506-02-2

We continue to be committed to provide you tools with competitive price.

"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

VEVOR®

TOUGH TOOLS, HALF PRICE

MODEL: BGP1506-150/BGP1506-02-2



NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

Technical Support and E-Warranty Certificate
www.vevor.com/support

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

IMPORTANT INSTRUCTIONS

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electrical shock, and injury to persons, including the following:

1. Read all instructions before using this heater.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes and curtains at least 3 feet (0.9m) from the heater.
3. Extreme caution is necessary when any heater is used by or near children, pets or invalids and whenever the heater is left operating unattended.
4. If possible always unplug this appliance when not in use.
5. Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner.
6. Any repairs to this appliance should be carried out by a qualified service person.
7. Under no circumstances should this appliance be modified. Parts having to be removed for servicing must be replaced prior to operating this appliance again.
8. Do not use outdoors.
9. Use your heater only in dry environments. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate the heater where it may fall into a bathtub or other water container. Do not use your heater outdoors. Do not use near sinks, swimming pools or other damp areas such as flooded basements, garages, etc or anyplace where the heater could come in contact with water.
10. Do not use this heater in elevated locations, such as on shelves, raised platforms, etc.

11. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
12. To disconnect heater, first turn controls to off, then remove plug from outlet. Always unplug the heater when not in use.
13. Connect to a properly grounded outlets only.
14. During installation, the equipment must be electrically grounded in accordance with local regulations, local regulations, and national electrical standards.
15. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electrical shock or fire, or damage the heater.
16. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
17. This appliance has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint or flammable liquids are used or stored. This appliance should not be used as a drying rack for clothing, nor should Christmas stockings or decorations be hung or near it.
18. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
19. Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power strip.
20. Do not use this heater with missing, damaged, or broken legs.
21. "SAVE THESE INSTRUCTIONS"

ALWAYS OBSERVE THESE SAFETY PRECAUTIONS WHEN OPERATING YOUR ELECTRIC HEATER

ALWAYS Read all instructions before operating.

ALWAYS Locate your electric heater away from furniture or loose hanging drapes.

ALWAYS Keep the rear grill away from walls or drapes so as not to block the air intake. (If applicable)

ALWAYS Unplug electric heater when not in use.

ALWAYS Use electric heater on a flat dry surface.

ALWAYS Route the cord so it will not be walked on tripped over or pinched by furniture.

ALWAYS Keep electrical cords, drapes and other furnishings away from your electric heater.

ALWAYS Keep your electric heater clean and the filter free of dust. (If applicable)

ALWAYS Use indoors only.

NEVER Place drapes, clothing or towels over electric heater to dry.

NEVER Use in the presence of explosive or flammable vapors such as gas or paint.

NEVER Plug another electrical appliance into the same circuit. Blown fuses, tripped circuits and fire hazards may result.

NEVER Use water or liquids to clean your electric heater.

NEVER Let bare skin touch hot surfaces as this may cause burns.

NEVER Leave electric heater unattended.

NEVER Leave electric heater when children or pets are present.

NEVER Locate electric heater where it may fall into a bath tub or other water containers.

NEVER Operate electric heater with a damaged cord, plug or after the heater malfunctions, or has been dropped or damaged in any manner.

NEVER Run cord under carpeting or cover with throw rugs or runners.

NEVER Insert or allow foreign objects to enter any ventilation or exhaust openings, as this may cause an electrical shock, fire or damage.

SAVE THESE INSTRUCTIONS







IMPORTANT: Read all instructions and warnings carefully before installation and use. Failure to follow these instructions may result

in a possible electric shock, injury to persons, fire hazard and will void the warranty

OPERATING INSTRUCTIONS

Note: When using the heater for the first time, you may notice a slight emission of smoke. This is normal and will stop after a short time. The heating element is made of steel and was coated with a layer of protective oil during production.

| Setting | Function |
|---|----------------------------|
|  | Unit is off |
|  | Fan Runs – No Heat |
|  | Fan Runs –Half Power Heat |
|  | Fan Runs – Full Power Heat |

- 1.Position the fan heater so that it stands on a firm level surface (When used as portable) and at a safe distance from wet locations and flammable objects.
- 2.Connect the fan heater to the proper electrical power. See grounding instructions.
- 3.Set the power settings knob to fan or heating Position.
- 4.Set the thermostat dial to the maximum temperature.
- 5.Once the room reaches the desired temperature, turn the thermostat dial back until heating element turns off. The heater will cycle automatically around this present temperature. To increase temperature, turn the thermostat knob clockwise. To lower temperature, turn the thermostat counterclockwise.



 
Electrical outlet wiring must comply with local building codes and other applicable regulations to reduce the risk of fire, electrical shock and injury to persons.



Do not use this appliance if any part of it has been underwater. Immediately call a qualified service technician to inspect the appliance and replace any part of the electrical system which has been under water.

Grounding Instructions:

Make sure the heater is switched OFF before plugging the heater into the outlet. Connect to properly grounded outlets only.

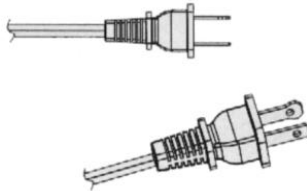

American standard plug

Note: The power cord has a polarized plug (with one blade wider than the other) that will only fit in a polarized outlet one way. If it does not insert easily try reversing the plug. If it still does not fit contact your electrician to replace your outlet.



DO NOT defeat the safety purpose of the polarized plug.



European standard plug

Automatic Overheat Safety Control

This heater is equipped with an internal heat limiting thermostat and overheats protection circuit. When a potential overheat temperature is reached, the system will automatically shut the heater off. Unplug heater allow to cool down for 10 minutes, and then restart.

| | | |
|---|--|---|
|  | CAUTION: RISK OF ELECTRIC SHOCK DO NOT OPEN NO SERVICEABLE PARTS INSIDE |  |
|---|--|---|

Cleaning and Maintenance

Any electrical repairs or rewiring of this unit should be carried out by a licensed electrician and accordance with national and local codes.

Before cleaning the appliance, disconnect it from the power outlet and let it cool down.

In order to protect the enclosure, don't splash water onto the heater, and never use a solvent like gasoline, isoamyl acetate, toluene, etc. to clean the heater.

DO NOT open the heater or attempt to clean the inside of this appliance.

TROUBLE SHOOTING

| PROBLEM | CAUSE | SOLUTION |
|-----------------------------------|--|---|
| Heating element does not glow red | Stainless steel elements won't glow red to produce heat. | Heater is operating correctly |
| Do not feel heat or air flow | No power to heater | Check power connection to heater |
| | Desired room temperature reached. | Thermostat will shut off heater once desired room temperature is reached. |

| | | |
|--|------------------------------|--|
| | Auto-Reset has tripped | Unplug heater allow to cool down for 10 minutes, then restart. |
| | Heater has fan only setting. | Set to run on full power for heating. |

SPECIFICATIONS

| | | |
|----------------|-----------------|-------------|
| Model | BGP1506-02-2 | BGP1506-150 |
| Voltage | AC220-240V 50Hz | AC120V 60Hz |
| Watts | 2000W | 1500W |

Manufacturer: Shanghaimuxinmuyeyouxiangongsi

Address: Baoshanqu Shuangchenglu 803long 11hao 1602A-1609shi
Shanghai

Imported to AUS: SIHAO PTY LTD.1 ROKEVA STREETEASTWOOD
NSW 2122 Australia

Imported to USA: Sanven Technology Ltd. Suite 250,9166 Anaheim
Place,Rancho Cucamonga,CA91730

| | |
|-----------|------------|
| UK | REP |
|-----------|------------|

Pooledas Group Ltd
Unit 5 Albert Edward House, The Pavilions
Preston, United Kingdom

| | |
|-----------|------------|
| EC | REP |
|-----------|------------|

SHUNSHUN GmbH
Römeräcker 9 Z2021, 76351
Linkenheim-Hochstetten, Germany

Made In China

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate

www.vevor.com/support

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate

www.vevor.com/support

Greenhouse Heater

MODEL: BGP1506-150/BGP1506-02-2

We continue to be committed to provide you tools with competitive price.

"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

VEVOR®

TOUGH TOOLS, HALF PRICE

MODEL: BGP1506-150/BGP1506-02-2



NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

Technical Support and E-Warranty Certificate
www.vevor.com/support

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

IMPORTANT INSTRUCTIONS

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electrical shock, and injury to persons, including the following:

1. Read all instructions before using this heater.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes and curtains at least 3 feet (0.9m) from the heater.
3. Extreme caution is necessary when any heater is used by or near children, pets or invalids and whenever the heater is left operating unattended.
4. If possible always unplug this appliance when not in use.
5. Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner.
6. Any repairs to this appliance should be carried out by a qualified service person.
7. Under no circumstances should this appliance be modified. Parts having to be removed for servicing must be replaced prior to operating this appliance again.
8. Do not use outdoors.
9. Use your heater only in dry environments. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate the heater where it may fall into a bathtub or other water container. Do not use your heater outdoors. Do not use near sinks, swimming pools or other damp areas such as flooded basements, garages, etc or anyplace where the heater could come in contact with water.
10. Do not use this heater in elevated locations, such as on shelves, raised platforms, etc.

11. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
12. To disconnect heater, first turn controls to off, then remove plug from outlet. Always unplug the heater when not in use.
13. Connect to a properly grounded outlets only.
14. During installation, the equipment must be electrically grounded in accordance with local regulations, local regulations, and national electrical standards.
15. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electrical shock or fire, or damage the heater.
16. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
17. This appliance has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint or flammable liquids are used or stored. This appliance should not be used as a drying rack for clothing, nor should Christmas stockings or decorations be hung or near it.
18. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
19. Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power strip.
20. Do not use this heater with missing, damaged, or broken legs.
21. "SAVE THESE INSTRUCTIONS"

ALWAYS OBSERVE THESE SAFETY PRECAUTIONS WHEN OPERATING YOUR ELECTRIC HEATER

ALWAYS Read all instructions before operating.

ALWAYS Locate your electric heater away from furniture or loose hanging drapes.

ALWAYS Keep the rear grill away from walls or drapes so as not to block the air intake. (If applicable)

ALWAYS Unplug electric heater when not in use.

ALWAYS Use electric heater on a flat dry surface.

ALWAYS Route the cord so it will not be walked on tripped over or pinched by furniture.

ALWAYS Keep electrical cords, drapes and other furnishings away from your electric heater.

ALWAYS Keep your electric heater clean and the filter free of dust. (If applicable)

ALWAYS Use indoors only.

NEVER Place drapes, clothing or towels over electric heater to dry.

NEVER Use in the presence of explosive or flammable vapors such as gas or paint.

NEVER Plug another electrical appliance into the same circuit. Blown fuses, tripped circuits and fire hazards may result.

NEVER Use water or liquids to clean your electric heater.

NEVER Let bare skin touch hot surfaces as this may cause burns.

NEVER Leave electric heater unattended.

NEVER Leave electric heater when children or pets are present.

NEVER Locate electric heater where it may fall into a bath tub or other water containers.

NEVER Operate electric heater with a damaged cord, plug or after the heater malfunctions, or has been dropped or damaged in any manner.

NEVER Run cord under carpeting or cover with throw rugs or runners.

NEVER Insert or allow foreign objects to enter any ventilation or exhaust openings, as this may cause an electrical shock, fire or damage.

SAVE THESE INSTRUCTIONS







IMPORTANT: Read all instructions and warnings carefully before installation and use. Failure to follow these instructions may result

in a possible electric shock, injury to persons, fire hazard and will void the warranty

OPERATING INSTRUCTIONS

Note: When using the heater for the first time, you may notice a slight emission of smoke. This is normal and will stop after a short time. The heating element is made of steel and was coated with a layer of protective oil during production.

| Setting | Function |
|---|----------------------------|
|  | Unit is off |
|  | Fan Runs – No Heat |
|  | Fan Runs –Half Power Heat |
|  | Fan Runs – Full Power Heat |

- 1.Position the fan heater so that it stands on a firm level surface (When used as portable) and at a safe distance from wet locations and flammable objects.
- 2.Connect the fan heater to the proper electrical power. See grounding instructions.
- 3.Set the power settings knob to fan or heating Position.
- 4.Set the thermostat dial to the maximum temperature.
- 5.Once the room reaches the desired temperature, turn the thermostat dial back until heating element turns off. The heater will cycle automatically around this present temperature. To increase temperature, turn the thermostat knob clockwise. To lower temperature, turn the thermostat counterclockwise.



 
Electrical outlet wiring must comply with local building codes and other applicable regulations to reduce the risk of fire, electrical shock and injury to persons.



Do not use this appliance if any part of it has been underwater. Immediately call a qualified service technician to inspect the appliance and replace any part of the electrical system which has been under water.

Grounding Instructions:

Make sure the heater is switched OFF before plugging the heater into the outlet. Connect to properly grounded outlets only.

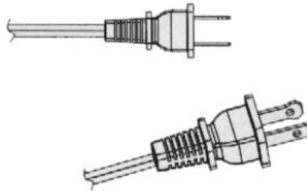

American standard plug

Note: The power cord has a polarized plug (with one blade wider than the other) that will only fit in a polarized outlet one way. If it does not insert easily try reversing the plug. If it still does not fit contact your electrician to replace your outlet.



DO NOT defeat the safety purpose of the polarized plug.



European standard plug

Automatic Overheat Safety Control

This heater is equipped with an internal heat limiting thermostat and overheats protection circuit. When a potential overheat temperature is reached, the system will automatically shut the heater off. Unplug heater allow to cool down for 10 minutes, and then restart.

| | | |
|---|--|---|
|  | CAUTION: RISK OF ELECTRIC SHOCK DO NOT OPEN NO SERVICEABLE PARTS INSIDE |  |
|---|--|---|

Cleaning and Maintenance

Any electrical repairs or rewiring of this unit should be carried out by a licensed electrician and accordance with national and local codes.

Before cleaning the appliance, disconnect it from the power outlet and let it cool down.

In order to protect the enclosure, don't splash water onto the heater, and never use a solvent like gasoline, isoamyl acetate, toluene, etc. to clean the heater.

DO NOT open the heater or attempt to clean the inside of this appliance.

TROUBLE SHOOTING

| PROBLEM | CAUSE | SOLUTION |
|-----------------------------------|--|---|
| Heating element does not glow red | Stainless steel elements won't glow red to produce heat. | Heater is operating correctly |
| Do not feel heat or air flow | No power to heater | Check power connection to heater |
| | Desired room temperature reached. | Thermostat will shut off heater once desired room temperature is reached. |

| | | |
|--|------------------------------|--|
| | Auto-Reset has tripped | Unplug heater allow to cool down for 10 minutes, then restart. |
| | Heater has fan only setting. | Set to run on full power for heating. |

SPECIFICATIONS

| | | |
|----------------|-----------------|-------------|
| Model | BGP1506-02-2 | BGP1506-150 |
| Voltage | AC220-240V 50Hz | AC120V 60Hz |
| Watts | 2000W | 1500W |

Manufacturer: Shanghaimuxinmuyeyouxiangongsi

Address: Baoshanqu Shuangchenglu 803long 11hao 1602A-1609shi
Shanghai

Imported to AUS: SIHAO PTY LTD.1 ROKEVA STREETEASTWOOD
NSW 2122 Australia

Imported to USA: Sanven Technology Ltd. Suite 250,9166 Anaheim
Place,Rancho Cucamonga,CA91730

| | |
|-----------|------------|
| UK | REP |
|-----------|------------|

Pooledas Group Ltd
Unit 5 Albert Edward House, The Pavilions
Preston, United Kingdom

| | |
|-----------|------------|
| EC | REP |
|-----------|------------|

SHUNSHUN GmbH
Römeräcker 9 Z2021, 76351
Linkenheim-Hochstetten, Germany

Made In China

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate

www.vevor.com/support

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate

www.vevor.com/support

Greenhouse Heater

MODEL: BGP1506-150/BGP1506-02-2

We continue to be committed to provide you tools with competitive price.

"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

VEVOR®

TOUGH TOOLS, HALF PRICE

MODEL: BGP1506-150/BGP1506-02-2



NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

Technical Support and E-Warranty Certificate
www.vevor.com/support

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

IMPORTANT INSTRUCTIONS

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electrical shock, and injury to persons, including the following:

1. Read all instructions before using this heater.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes and curtains at least 3 feet (0.9m) from the heater.
3. Extreme caution is necessary when any heater is used by or near children, pets or invalids and whenever the heater is left operating unattended.
4. If possible always unplug this appliance when not in use.
5. Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner.
6. Any repairs to this appliance should be carried out by a qualified service person.
7. Under no circumstances should this appliance be modified. Parts having to be removed for servicing must be replaced prior to operating this appliance again.
8. Do not use outdoors.
9. Use your heater only in dry environments. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate the heater where it may fall into a bathtub or other water container. Do not use your heater outdoors. Do not use near sinks, swimming pools or other damp areas such as flooded basements, garages, etc or anyplace where the heater could come in contact with water.
10. Do not use this heater in elevated locations, such as on shelves, raised platforms, etc.

11. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
12. To disconnect heater, first turn controls to off, then remove plug from outlet. Always unplug the heater when not in use.
13. Connect to a properly grounded outlets only.
14. During installation, the equipment must be electrically grounded in accordance with local regulations, local regulations, and national electrical standards.
15. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electrical shock or fire, or damage the heater.
16. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
17. This appliance has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint or flammable liquids are used or stored. This appliance should not be used as a drying rack for clothing, nor should Christmas stockings or decorations be hung or near it.
18. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
19. Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power strip.
20. Do not use this heater with missing, damaged, or broken legs.
21. "SAVE THESE INSTRUCTIONS"

ALWAYS OBSERVE THESE SAFETY PRECAUTIONS WHEN OPERATING YOUR ELECTRIC HEATER

ALWAYS Read all instructions before operating.

ALWAYS Locate your electric heater away from furniture or loose hanging drapes.

ALWAYS Keep the rear grill away from walls or drapes so as not to block the air intake. (If applicable)

ALWAYS Unplug electric heater when not in use.

ALWAYS Use electric heater on a flat dry surface.

ALWAYS Route the cord so it will not be walked on tripped over or pinched by furniture.

ALWAYS Keep electrical cords, drapes and other furnishings away from your electric heater.

ALWAYS Keep your electric heater clean and the filter free of dust. (If applicable)

ALWAYS Use indoors only.

NEVER Place drapes, clothing or towels over electric heater to dry.

NEVER Use in the presence of explosive or flammable vapors such as gas or paint.

NEVER Plug another electrical appliance into the same circuit. Blown fuses, tripped circuits and fire hazards may result.

NEVER Use water or liquids to clean your electric heater.

NEVER Let bare skin touch hot surfaces as this may cause burns.

NEVER Leave electric heater unattended.

NEVER Leave electric heater when children or pets are present.

NEVER Locate electric heater where it may fall into a bath tub or other water containers.

NEVER Operate electric heater with a damaged cord, plug or after the heater malfunctions, or has been dropped or damaged in any manner.

NEVER Run cord under carpeting or cover with throw rugs or runners.

NEVER Insert or allow foreign objects to enter any ventilation or exhaust openings, as this may cause an electrical shock, fire or damage.

SAVE THESE INSTRUCTIONS







IMPORTANT: Read all instructions and warnings carefully before installation and use. Failure to follow these instructions may result

in a possible electric shock, injury to persons, fire hazard and will void the warranty

OPERATING INSTRUCTIONS

Note: When using the heater for the first time, you may notice a slight emission of smoke. This is normal and will stop after a short time. The heating element is made of steel and was coated with a layer of protective oil during production.

| Setting | Function |
|---|----------------------------|
|  | Unit is off |
|  | Fan Runs – No Heat |
|  | Fan Runs –Half Power Heat |
|  | Fan Runs – Full Power Heat |

- 1.Position the fan heater so that it stands on a firm level surface (When used as portable) and at a safe distance from wet locations and flammable objects.
- 2.Connect the fan heater to the proper electrical power. See grounding instructions.
- 3.Set the power settings knob to fan or heating Position.
- 4.Set the thermostat dial to the maximum temperature.
- 5.Once the room reaches the desired temperature, turn the thermostat dial back until heating element turns off. The heater will cycle automatically around this present temperature. To increase temperature, turn the thermostat knob clockwise. To lower temperature, turn the thermostat counterclockwise.



 
Electrical outlet wiring must comply with local building codes and other applicable regulations to reduce the risk of fire, electrical shock and injury to persons.



Do not use this appliance if any part of it has been underwater. Immediately call a qualified service technician to inspect the appliance and replace any part of the electrical system which has been under water.

Grounding Instructions:

Make sure the heater is switched OFF before plugging the heater into the outlet. Connect to properly grounded outlets only.

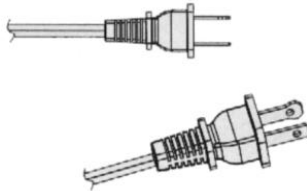

American standard plug

Note: The power cord has a polarized plug (with one blade wider than the other) that will only fit in a polarized outlet one way. If it does not insert easily try reversing the plug. If it still does not fit contact your electrician to replace your outlet.



DO NOT defeat the safety purpose of the polarized plug.



European standard plug

Automatic Overheat Safety Control

This heater is equipped with an internal heat limiting thermostat and overheats protection circuit. When a potential overheat temperature is reached, the system will automatically shut the heater off. Unplug heater allow to cool down for 10 minutes, and then restart.

| | | |
|---|--|---|
|  | CAUTION: RISK OF ELECTRIC SHOCK DO NOT OPEN NO SERVICEABLE PARTS INSIDE |  |
|---|--|---|

Cleaning and Maintenance

Any electrical repairs or rewiring of this unit should be carried out by a licensed electrician and accordance with national and local codes.

Before cleaning the appliance, disconnect it from the power outlet and let it cool down.

In order to protect the enclosure, don't splash water onto the heater, and never use a solvent like gasoline, isoamyl acetate, toluene, etc. to clean the heater.

DO NOT open the heater or attempt to clean the inside of this appliance.

TROUBLE SHOOTING

| PROBLEM | CAUSE | SOLUTION |
|-----------------------------------|--|---|
| Heating element does not glow red | Stainless steel elements won't glow red to produce heat. | Heater is operating correctly |
| Do not feel heat or air flow | No power to heater | Check power connection to heater |
| | Desired room temperature reached. | Thermostat will shut off heater once desired room temperature is reached. |

| | | |
|--|------------------------------|--|
| | Auto-Reset has tripped | Unplug heater allow to cool down for 10 minutes, then restart. |
| | Heater has fan only setting. | Set to run on full power for heating. |

SPECIFICATIONS

| | | |
|----------------|-----------------|-------------|
| Model | BGP1506-02-2 | BGP1506-150 |
| Voltage | AC220-240V 50Hz | AC120V 60Hz |
| Watts | 2000W | 1500W |

Manufacturer: Shanghaimuxinmuyeyouxiangongsi

Address: Baoshanqu Shuangchenglu 803long 11hao 1602A-1609shi
Shanghai

Imported to AUS: SIHAO PTY LTD.1 ROKEVA STREETEASTWOOD
NSW 2122 Australia

Imported to USA: Sanven Technology Ltd. Suite 250,9166 Anaheim
Place,Rancho Cucamonga,CA91730

| | |
|-----------|------------|
| UK | REP |
|-----------|------------|

Pooledas Group Ltd
Unit 5 Albert Edward House, The Pavilions
Preston, United Kingdom

| | |
|-----------|------------|
| EC | REP |
|-----------|------------|

SHUNSHUN GmbH
Römeräcker 9 Z2021, 76351
Linkenheim-Hochstetten, Germany

Made In China

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate

www.vevor.com/support

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate

www.vevor.com/support

Greenhouse Heater

MODEL: BGP1506-150/BGP1506-02-2

We continue to be committed to provide you tools with competitive price.

"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

VEVOR®

TOUGH TOOLS, HALF PRICE

MODEL: BGP1506-150/BGP1506-02-2



NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

Technical Support and E-Warranty Certificate
www.vevor.com/support

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

IMPORTANT INSTRUCTIONS

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electrical shock, and injury to persons, including the following:

1. Read all instructions before using this heater.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes and curtains at least 3 feet (0.9m) from the heater.
3. Extreme caution is necessary when any heater is used by or near children, pets or invalids and whenever the heater is left operating unattended.
4. If possible always unplug this appliance when not in use.
5. Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner.
6. Any repairs to this appliance should be carried out by a qualified service person.
7. Under no circumstances should this appliance be modified. Parts having to be removed for servicing must be replaced prior to operating this appliance again.
8. Do not use outdoors.
9. Use your heater only in dry environments. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate the heater where it may fall into a bathtub or other water container. Do not use your heater outdoors. Do not use near sinks, swimming pools or other damp areas such as flooded basements, garages, etc or anyplace where the heater could come in contact with water.
10. Do not use this heater in elevated locations, such as on shelves, raised platforms, etc.

11. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
12. To disconnect heater, first turn controls to off, then remove plug from outlet. Always unplug the heater when not in use.
13. Connect to a properly grounded outlets only.
14. During installation, the equipment must be electrically grounded in accordance with local regulations, local regulations, and national electrical standards.
15. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electrical shock or fire, or damage the heater.
16. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
17. This appliance has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint or flammable liquids are used or stored. This appliance should not be used as a drying rack for clothing, nor should Christmas stockings or decorations be hung or near it.
18. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
19. Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power strip.
20. Do not use this heater with missing, damaged, or broken legs.
21. "SAVE THESE INSTRUCTIONS"

ALWAYS OBSERVE THESE SAFETY PRECAUTIONS WHEN OPERATING YOUR ELECTRIC HEATER

ALWAYS Read all instructions before operating.

ALWAYS Locate your electric heater away from furniture or loose hanging drapes.

ALWAYS Keep the rear grill away from walls or drapes so as not to block the air intake. (If applicable)

ALWAYS Unplug electric heater when not in use.

ALWAYS Use electric heater on a flat dry surface.

ALWAYS Route the cord so it will not be walked on tripped over or pinched by furniture.

ALWAYS Keep electrical cords, drapes and other furnishings away from your electric heater.

ALWAYS Keep your electric heater clean and the filter free of dust. (If applicable)

ALWAYS Use indoors only.

NEVER Place drapes, clothing or towels over electric heater to dry.

NEVER Use in the presence of explosive or flammable vapors such as gas or paint.

NEVER Plug another electrical appliance into the same circuit. Blown fuses, tripped circuits and fire hazards may result.

NEVER Use water or liquids to clean your electric heater.

NEVER Let bare skin touch hot surfaces as this may cause burns.

NEVER Leave electric heater unattended.

NEVER Leave electric heater when children or pets are present.

NEVER Locate electric heater where it may fall into a bath tub or other water containers.

NEVER Operate electric heater with a damaged cord, plug or after the heater malfunctions, or has been dropped or damaged in any manner.

NEVER Run cord under carpeting or cover with throw rugs or runners.

NEVER Insert or allow foreign objects to enter any ventilation or exhaust openings, as this may cause an electrical shock, fire or damage.

SAVE THESE INSTRUCTIONS







IMPORTANT: Read all instructions and warnings carefully before installation and use. Failure to follow these instructions may result

in a possible electric shock, injury to persons, fire hazard and will void the warranty

OPERATING INSTRUCTIONS

Note: When using the heater for the first time, you may notice a slight emission of smoke. This is normal and will stop after a short time. The heating element is made of steel and was coated with a layer of protective oil during production.

| Setting | Function |
|---|----------------------------|
|  | Unit is off |
|  | Fan Runs – No Heat |
|  | Fan Runs –Half Power Heat |
|  | Fan Runs – Full Power Heat |

- 1.Position the fan heater so that it stands on a firm level surface (When used as portable) and at a safe distance from wet locations and flammable objects.
- 2.Connect the fan heater to the proper electrical power. See grounding instructions.
- 3.Set the power settings knob to fan or heating Position.
- 4.Set the thermostat dial to the maximum temperature.
- 5.Once the room reaches the desired temperature, turn the thermostat dial back until heating element turns off. The heater will cycle automatically around this present temperature. To increase temperature, turn the thermostat knob clockwise. To lower temperature, turn the thermostat counterclockwise.



 
Electrical outlet wiring must comply with local building codes and other applicable regulations to reduce the risk of fire, electrical shock and injury to persons.



Do not use this appliance if any part of it has been underwater. Immediately call a qualified service technician to inspect the appliance and replace any part of the electrical system which has been under water.

Grounding Instructions:

Make sure the heater is switched OFF before plugging the heater into the outlet. Connect to properly grounded outlets only.

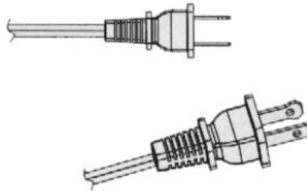

American standard plug

Note: The power cord has a polarized plug (with one blade wider than the other) that will only fit in a polarized outlet one way. If it does not insert easily try reversing the plug. If it still does not fit contact your electrician to replace your outlet.



DO NOT defeat the safety purpose of the polarized plug.



European standard plug

Automatic Overheat Safety Control

This heater is equipped with an internal heat limiting thermostat and overheats protection circuit. When a potential overheat temperature is reached, the system will automatically shut the heater off. Unplug heater allow to cool down for 10 minutes, and then restart.

| | | |
|---|--|---|
|  | CAUTION: RISK OF ELECTRIC SHOCK DO NOT OPEN NO SERVICEABLE PARTS INSIDE |  |
|---|--|---|

Cleaning and Maintenance

Any electrical repairs or rewiring of this unit should be carried out by a licensed electrician and accordance with national and local codes.

Before cleaning the appliance, disconnect it from the power outlet and let it cool down.

In order to protect the enclosure, don't splash water onto the heater, and never use a solvent like gasoline, isoamyl acetate, toluene, etc. to clean the heater.

DO NOT open the heater or attempt to clean the inside of this appliance.

TROUBLE SHOOTING

| PROBLEM | CAUSE | SOLUTION |
|-----------------------------------|--|---|
| Heating element does not glow red | Stainless steel elements won't glow red to produce heat. | Heater is operating correctly |
| Do not feel heat or air flow | No power to heater | Check power connection to heater |
| | Desired room temperature reached. | Thermostat will shut off heater once desired room temperature is reached. |

| | | |
|--|------------------------------|--|
| | Auto-Reset has tripped | Unplug heater allow to cool down for 10 minutes, then restart. |
| | Heater has fan only setting. | Set to run on full power for heating. |

SPECIFICATIONS

| | | |
|----------------|-----------------|-------------|
| Model | BGP1506-02-2 | BGP1506-150 |
| Voltage | AC220-240V 50Hz | AC120V 60Hz |
| Watts | 2000W | 1500W |

Manufacturer: Shanghaimuxinmuyeyouxiangongsi

Address: Baoshanqu Shuangchenglu 803long 11hao 1602A-1609shi
Shanghai

Imported to AUS: SIHAO PTY LTD.1 ROKEVA STREETEASTWOOD
NSW 2122 Australia

Imported to USA: Sanven Technology Ltd. Suite 250,9166 Anaheim
Place,Rancho Cucamonga,CA91730

| | |
|-----------|------------|
| UK | REP |
|-----------|------------|

Pooledas Group Ltd
Unit 5 Albert Edward House, The Pavilions
Preston, United Kingdom

| | |
|-----------|------------|
| EC | REP |
|-----------|------------|

SHUNSHUN GmbH
Römeräcker 9 Z2021, 76351
Linkenheim-Hochstetten, Germany

Made In China

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate

www.vevor.com/support

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate

www.vevor.com/support

Greenhouse Heater

MODEL: BGP1506-150/BGP1506-02-2

We continue to be committed to provide you tools with competitive price.

"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

VEVOR®

TOUGH TOOLS, HALF PRICE

MODEL: BGP1506-150/BGP1506-02-2



NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

Technical Support and E-Warranty Certificate
www.vevor.com/support

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

IMPORTANT INSTRUCTIONS

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electrical shock, and injury to persons, including the following:

1. Read all instructions before using this heater.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes and curtains at least 3 feet (0.9m) from the heater.
3. Extreme caution is necessary when any heater is used by or near children, pets or invalids and whenever the heater is left operating unattended.
4. If possible always unplug this appliance when not in use.
5. Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner.
6. Any repairs to this appliance should be carried out by a qualified service person.
7. Under no circumstances should this appliance be modified. Parts having to be removed for servicing must be replaced prior to operating this appliance again.
8. Do not use outdoors.
9. Use your heater only in dry environments. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate the heater where it may fall into a bathtub or other water container. Do not use your heater outdoors. Do not use near sinks, swimming pools or other damp areas such as flooded basements, garages, etc or anyplace where the heater could come in contact with water.
10. Do not use this heater in elevated locations, such as on shelves, raised platforms, etc.

11. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
12. To disconnect heater, first turn controls to off, then remove plug from outlet. Always unplug the heater when not in use.
13. Connect to a properly grounded outlets only.
14. During installation, the equipment must be electrically grounded in accordance with local regulations, local regulations, and national electrical standards.
15. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electrical shock or fire, or damage the heater.
16. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
17. This appliance has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint or flammable liquids are used or stored. This appliance should not be used as a drying rack for clothing, nor should Christmas stockings or decorations be hung or near it.
18. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
19. Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power strip.
20. Do not use this heater with missing, damaged, or broken legs.
21. "SAVE THESE INSTRUCTIONS"

ALWAYS OBSERVE THESE SAFETY PRECAUTIONS WHEN OPERATING YOUR ELECTRIC HEATER

ALWAYS Read all instructions before operating.

ALWAYS Locate your electric heater away from furniture or loose hanging drapes.

ALWAYS Keep the rear grill away from walls or drapes so as not to block the air intake. (If applicable)

ALWAYS Unplug electric heater when not in use.

ALWAYS Use electric heater on a flat dry surface.

ALWAYS Route the cord so it will not be walked on tripped over or pinched by furniture.

ALWAYS Keep electrical cords, drapes and other furnishings away from your electric heater.

ALWAYS Keep your electric heater clean and the filter free of dust. (If applicable)

ALWAYS Use indoors only.

NEVER Place drapes, clothing or towels over electric heater to dry.

NEVER Use in the presence of explosive or flammable vapors such as gas or paint.

NEVER Plug another electrical appliance into the same circuit. Blown fuses, tripped circuits and fire hazards may result.

NEVER Use water or liquids to clean your electric heater.

NEVER Let bare skin touch hot surfaces as this may cause burns.

NEVER Leave electric heater unattended.

NEVER Leave electric heater when children or pets are present.

NEVER Locate electric heater where it may fall into a bath tub or other water containers.

NEVER Operate electric heater with a damaged cord, plug or after the heater malfunctions, or has been dropped or damaged in any manner.

NEVER Run cord under carpeting or cover with throw rugs or runners.

NEVER Insert or allow foreign objects to enter any ventilation or exhaust openings, as this may cause an electrical shock, fire or damage.

SAVE THESE INSTRUCTIONS







IMPORTANT: Read all instructions and warnings carefully before installation and use. Failure to follow these instructions may result

in a possible electric shock, injury to persons, fire hazard and will void the warranty

OPERATING INSTRUCTIONS

Note: When using the heater for the first time, you may notice a slight emission of smoke. This is normal and will stop after a short time. The heating element is made of steel and was coated with a layer of protective oil during production.

| Setting | Function |
|---|----------------------------|
|  | Unit is off |
|  | Fan Runs – No Heat |
|  | Fan Runs –Half Power Heat |
|  | Fan Runs – Full Power Heat |

- 1.Position the fan heater so that it stands on a firm level surface (When used as portable) and at a safe distance from wet locations and flammable objects.
- 2.Connect the fan heater to the proper electrical power. See grounding instructions.
- 3.Set the power settings knob to fan or heating Position.
- 4.Set the thermostat dial to the maximum temperature.
- 5.Once the room reaches the desired temperature, turn the thermostat dial back until heating element turns off. The heater will cycle automatically around this present temperature. To increase temperature, turn the thermostat knob clockwise. To lower temperature, turn the thermostat counterclockwise.



 
Electrical outlet wiring must comply with local building codes and other applicable regulations to reduce the risk of fire, electrical shock and injury to persons.



Do not use this appliance if any part of it has been underwater. Immediately call a qualified service technician to inspect the appliance and replace any part of the electrical system which has been under water.

Grounding Instructions:

Make sure the heater is switched OFF before plugging the heater into the outlet. Connect to properly grounded outlets only.

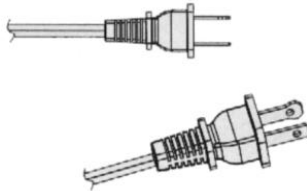

American standard plug

Note: The power cord has a polarized plug (with one blade wider than the other) that will only fit in a polarized outlet one way. If it does not insert easily try reversing the plug. If it still does not fit contact your electrician to replace your outlet.



DO NOT defeat the safety purpose of the polarized plug.



European standard plug

Automatic Overheat Safety Control

This heater is equipped with an internal heat limiting thermostat and overheats protection circuit. When a potential overheat temperature is reached, the system will automatically shut the heater off. Unplug heater allow to cool down for 10 minutes, and then restart.

| | | |
|---|--|---|
|  | CAUTION: RISK OF ELECTRIC SHOCK DO NOT OPEN NO SERVICEABLE PARTS INSIDE |  |
|---|--|---|

Cleaning and Maintenance

Any electrical repairs or rewiring of this unit should be carried out by a licensed electrician and accordance with national and local codes.

Before cleaning the appliance, disconnect it from the power outlet and let it cool down.

In order to protect the enclosure, don't splash water onto the heater, and never use a solvent like gasoline, isoamyl acetate, toluene, etc. to clean the heater.

DO NOT open the heater or attempt to clean the inside of this appliance.

TROUBLE SHOOTING

| PROBLEM | CAUSE | SOLUTION |
|-----------------------------------|--|---|
| Heating element does not glow red | Stainless steel elements won't glow red to produce heat. | Heater is operating correctly |
| Do not feel heat or air flow | No power to heater | Check power connection to heater |
| | Desired room temperature reached. | Thermostat will shut off heater once desired room temperature is reached. |

| | | |
|--|------------------------------|--|
| | Auto-Reset has tripped | Unplug heater allow to cool down for 10 minutes, then restart. |
| | Heater has fan only setting. | Set to run on full power for heating. |

SPECIFICATIONS

| | | |
|----------------|-----------------|-------------|
| Model | BGP1506-02-2 | BGP1506-150 |
| Voltage | AC220-240V 50Hz | AC120V 60Hz |
| Watts | 2000W | 1500W |

Manufacturer: Shanghaimuxinmuyeyouxiangongsi

Address: Baoshanqu Shuangchenglu 803long 11hao 1602A-1609shi
Shanghai

Imported to AUS: SIHAO PTY LTD.1 ROKEVA STREETEASTWOOD
NSW 2122 Australia

Imported to USA: Sanven Technology Ltd. Suite 250,9166 Anaheim
Place,Rancho Cucamonga,CA91730

| | |
|-----------|------------|
| UK | REP |
|-----------|------------|

Pooledas Group Ltd
Unit 5 Albert Edward House, The Pavilions
Preston, United Kingdom

| | |
|-----------|------------|
| EC | REP |
|-----------|------------|

SHUNSHUN GmbH
Römeräcker 9 Z2021, 76351
Linkenheim-Hochstetten, Germany

Made In China

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate

www.vevor.com/support