

Asphalt Rake



NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

> Technical Support and E-Warranty Certificate www.vevor.com/support

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there is any technology or software updates on our product.

Important Information:

Please read these instructions thoroughly before use. Please read these instructions thoroughly before use. Failure to follow instructions may result in equipment damage, malfunction, or even injury or death to personnel.

A Warning A

- The Rake is designed for cutting submerged, partially emergent, or emergent aquatic vegetation from underwater. Any other use is strictly prohibited. Before using the Rake, please read this manual carefully to understand the proper use of the unit.
- The Rake teeth have sharp edges.

 
A SAFETY FIRST: A


Keep out of reach of children.

Do not use it with children in the immediate area. IMPORTANT: We are not responsible for equipment damage or failure, losses, injury, or death resulting from failure to follow safety precautions, misuse, or abuse of equipment.

Assembly Instructions Step 1

The Rake teeth Assembly: The Rake teeth Assembly: Align the mounting holes in the middle of the rake teeth and the head of the connecting rod, insert the M6*40 screw, and then use the nut. Note that you do not need to tighten the nut at this time.



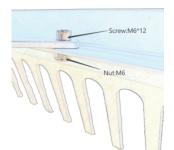

Step 2

Connecting rod Assembly: Align the mounting holes on both sides of the rake teeth with the mounting holes on the connecting rod, insert M6*12 screws, and screw in the nuts. Note that you do not need to tighten the nut at this time.

Step 3

Connecting rod and Middle Pole Assembly: Align the mounting hole of the connecting rod and middle pole, insert M6*40 screws, and screw in the nut.


Step 4 Tighten all screws from step1 to step3



Step 5

Handle Assembly: Press the spring-loaded buttons on one end of the handle connector and slide it halfway into one of the handles and rotate it until the buttons snap into the holes in the handle.

Repeat this process for the other half of the handle.

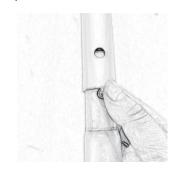

01 02 03

Package Include

No.	Name	Q'TY	Picture
1	Rear Grip	1	(°()
2	Middle Pole	1	
3	Fixed rod	2	The section of
4	Allen Key	1	
5	Allen Wrench	1	57
7	Screw	2	M6*40
8	Screw	2	M6*12
9	Nut	4	9

Package Include

Model No.	CY-SF13
Weight	1.6 kg
Size	75*36"

Manufacturer: Shanghaimuxinmuyeyouxiangongsi

Address: Shuangchenglu 803nong11hao1602A-1609shi, baoshanqu,

shanghai 200000 CN.

Imported to AUS: SIHAO PTY LTD. 1 ROKEVA STREETEASTWOOD

NSW 2122 Australia

Imported to USA: Sanven Technology Ltd. Suite 250, 9166 Anaheim

Place, Rancho Cucamonga, CA 91730

UK REP

YH CONSULTING LIMITED. C/O YH Consulting Limited Office 147, Centurion House, London Road, Staines-upon-Thames, Surrey, TW18 4AX



E-CrossStu GmbH Mainzer Landstr.69, 60329 Frankfurt am Main.



Technical Support and E-Warranty Certificate www.vevor.com/support

ASPHALT RAKE

Model:CY-SF13



Technical Support and E-Warranty Certificate www.vevor.com/support

We continue to be committed to provide you tools with competitive price. "Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us.

You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.