

Auger Drill Bit

A8DS4-22BK/A8DS4-42BK/A8DS5-37BK/ A8DS5-37BK/A25DY10-40BK/ A9DS6.6-42BK/A9DS7-30BK/A16DS8-30BK/ A16DY8-60BK/A8DS5-42BK



NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

Technical Support and E-Warranty Certificate www.vevor.com/support

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there is any technology or software updates on our product.

Safety Precautions

- Always wear protective eyewear and gloves when using the Electric Planting Auger Drill Bit.

- Do not touch the auger when it is rotating or shortly after it has stopped. The auger may still be hot and cause burns.

- Do not use the Electric Planting Auger Drill Bit on rocky or hard soil.

- Keep the tool away from children and pets.

Maintenance

- After use, clean the Electric Planting Auger Drill Bit with a soft cloth to remove any soil or debris.

- Store the tool in a dry place to prevent rust or corrosion.


- Check the tool periodically for any signs of wear or damage. If the tool appears damaged, do not use it and replace it with a new one.

Suitable for:

Planting bulbs, Seedlings, Vegetables, Flowers, etc.

Technical Specifications

No.	Model	Diameter(in)	Length(in)
Α	A8DS4-22BK	1.6	8.6
В	A8DS4-42BK	1.6	16.5
С	A8DS5-37BK	2	14.5
D	A8DS5-37BK	2	15
Е	A25DY10-40BK	2	16
F	A9DS6.6-42BK	2.6	16.5
G	A9DS7-30BK	3	12
Н	A16DS8-30BK	3	13
I	A16DY8-60BK	3	24
J	A8DS5-42BK	4	16

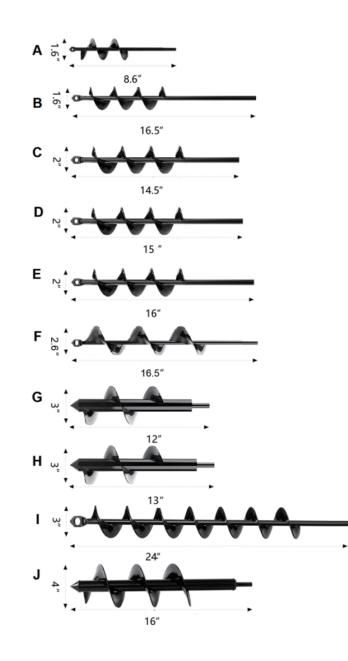

01

Instructions

1.Attach the Electric Planting Spiral Drill Bit to your electric drill. Make sure the shank is securely fastened to the drill chuck.

2. Turn on the electric drill and grip it with both hands.
3. Place the spiral drill bit in the desired planting position and apply gentle downward pressure.
4. Allow the auger to rotate and dig into the soil. Do not force the auger or apply excessive pressure.
5. Once the desired depth has been reached, slowly withdraw the auger while the drill is still rotating.
6. Repeat the process for the desired number of planting holes.



Sanven Technology Ltd. Address: Suite 250, 9166 Anaheim Place, Rancho Cucamonga, CA 91730



Technical Support and E-Warranty Certificate www.vevor.com/support



Technical Support and E-Warranty Certificate www.vevor.com/support

Auger Drill Bit USER MANUAL

We continue to be committed to provide you tools with competitive price. "Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.