

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate www.vevor.com/support

CHICKEN PLUCKER MACHINE

MODEL:TM-50/TM-60

We continue to be committed to provide you tools with competitive price.

"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

VEVOR[®]

TOUGH TOOLS, HALF PRICE

CHICKEN PLUCKER MACHINE

MODEL:TM-50/TM-60





NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

Technical Support and E-Warranty Certificate
www.vevor.com/support

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

	<p>Warning-To reduce the risk of injury, user must read instructions manual carefully.</p>
	<p>CORRECT DISPOSAL</p> <p>This product is subject to the provision of European Directive 2012/19/EC. The symbol showing a wheeled bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to a collection point for recycling electrical and electronic devices</p>

SAFETY INSTRUCTIONS

For your safety and the safety of others, the following precautions must be observed when operating the chicken plucker machine:

1. **Ensure the safety of the power supply:** install the leakage switch on the grounding wire of the chicken, duck, and goose plucker. Before use, plug in the power supply and turn on the switch to check whether the rotary table operates normally.
2. **Picking safety:** To ensure user's safety, do NOT retrieve the bird unless the chicken plucker machine has come to a complete stop.

WARNING:

1. Turn off the power when not in use.
2. Do not disassemble or change this machine.
3. In the operation process, if the machine sounds abnormal, it must be stopped immediately for inspection and continue to work only after the fault is eliminated.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
5. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction

concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

FCC Information

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment!

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This product may cause harmful interference.
- 2) This product must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

Note: This product has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules, These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This product generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the distance between the product and receiver.
- Connect the product to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for assistance.

MODEL AND PARAMETERS

Model	TM-50	TM-60	TM-60
Voltage/Frequency	120V~ / 60Hz	120V~ / 60Hz	220-240V~ / 50Hz
power	1.5KW	2.2KW	2.2KW
Applicable poultry	Chicken and Duck and Goose		
Number of hair removal per session	≤5kg	≤8kg	≤8kg
Temperature control switch (overload protection function)	85℃	85℃	85℃

Method of use

1. After opening check each place and accessories, such as caused during transit screw loose, back to consolidate, by hand to see if the twist of the chassis, otherwise will adjust flexible rotation belt. The wheels are fixed with screws.



2. after ensure the position of this machine, put a knife switch or a pull switch on the edge of machine.

3. when slaughter poultry, blade after death is small, after slaughtered put the poultry in the warm water (about 30degrees) the dip, make whole body feathers in warm water thoroughly, better put some salt, in order to avoid damage the skin when depilation.

4. put the poultry in the 70 °C hot water then use sticks to stir once, make the whole body to be hot.

5. then put the poultry to this machine, once 1-5 is OK.

6. switch on the machine, when the machine running, put water on the poultry, hot water is better, the weather and dirt can runoff with the water, water can be recycling used, one minute can be finished.

TROUBLESHOOTING INSTRUCTION

Problem	Reason	Solution
Incomplete de-feather	Rubber fingers loss	Replace rubber fingers
	Uneven scalding temperature	Uniform scalding temperature
chicken plucker machine does not rotate	The power cord is not plugged in properly	Plug the power cord
	Switch 1 is not pressed	Press switch 1
	Locked rotor protection in progress	Remove the obstruction, Wait for 30s.

CLEAN, CARE AND STORAGE RULES

Care and cleaning:

The chicken plucker machine needs to be used with a faucet and a water pipe, making it convenient for feathers cleaning and keeping the neatness and beauty of the machine.

The chicken plucker machine is made of stainless steel, which is not easy to rust. After use, please clean it with tap water and wipe it.

Timely cleaning: After use, the bucket should be washed with water, but not

directly with a water spray pipe. The feathers and dirt that have been removed should be collected with the water flow and treated in time to avoid environmental pollution or harm to human health. Water can be recycled, but it should be removed in time when not in use.

Storage :

Please store it out of the reach of children.

When the chicken plucker machines are not used for a long time, they should be stored in a dry, non-corrosive environment. Do not contact corrosive substances to avoid product damage.

Made In China

VEVOR[®]
TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate
www.vevor.com/support