

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate www.vevor.com/support

PRESSURE WASHER SURFACE CLEANER

MODEL:DD15P1

We continue to be committed to provide you tools with competitive price.

"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

VEVOR®

TOUGH TOOLS, HALF PRICE

PRESSURE WASHER
SURFACE CLEANER

MODEL:DD15P1



NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

Technical Support and E-Warranty Certificate
www.vevor.com/support

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.



Warning-To reduce the risk of injury, user must read instructions manual carefully.

INTRODUCTION

Congratulations on the purchase of your new Rotary Surface Cleaner! You can be assured this Cleaner was constructed and designed with quality and performance in mind. Each component has been rigorously tested to ensure the high level of acceptance.

This surface cleaner is designed for high-pressure cleaning of a variety of outdoor surfaces such as concrete, asphalt, paving stone walkways pool decks etc. Simply connect the rotary surface cleaner to your pressure washer, pull the trigger and walk behind for fast and efficient cleaning!

SPECIFICATIONS


Max. Pressure(PSI/BAR)	4,000/276
Min. Pressure(PSI/BAR)	1,500/104
Max. Flow Rate(GPM/LPM)	2.9/10.94
Max. Temperature(°F/°C)	140/60

Package Lists:

- 1 x 15" Surface Cleaner
- 2 x Extension Wand
- 2 x Replacement Nozzle
- 1 x Thread Seal Tape
- 1 x Through-hole needle
- 4 x O-rings
- 1 x Manual

Assemble (Figure 1.)

1. Connect first section wand (1/4" thread) to the second section wand.
2. Connect surface cleaner (1/4" quick plug) to the first section wand (1/4" quick socket).
3. Connect the second section wand to your original wand came with pressure washer.

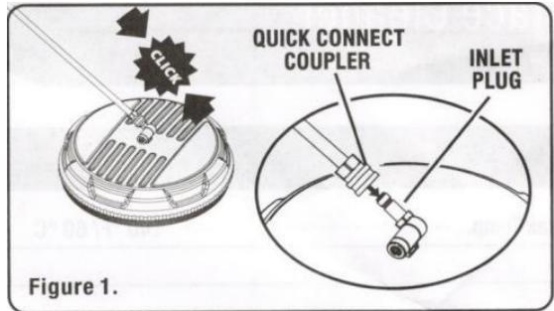

NOTE:


1. To prevent leakage, please make sure the O-ring is detached before use.
2. To connect section wands easily, please dip some water or oil on black Orings at the end of section wands. Then connect both section wands together.

Operation (Figure 2.)

1. Connect hose to the pressure washer and start pressure washer.
2. Walk slowly behind the cleaning forward.

NOTE: If striping or swirling occurs, slow your pace. If striping or swirling continues, the surface cleaner skirt bristles may be worn and in need of replacement.

NOTE: Always squeeze the gun's trigger to release any residual pressure immediately after use. Engage the trigger lock when not in use.

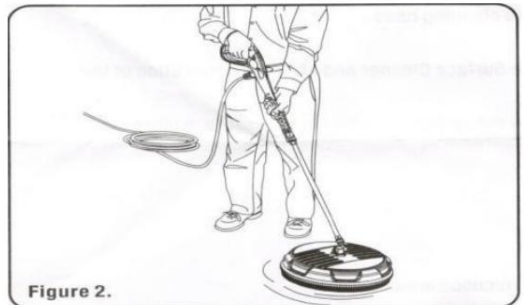

CAUTION

1. High pressure in surface cleaner area. Risk of injury caused by improperly locked surface cleaner. Ensure you hear the "click" when inserting the surface cleaner tip into the quick connection.
2. Pull the surface cleaner to ensure it is seated properly before operating your unit.
3. Striking any raised obstacle while using the surface cleaner will damage the unit. If contact does occur and causes vibration when operating the pressure washer, stop use immediately. Continuing to operate the unit could result in serious injury.
4. Do not use on windows. Do not run over freestanding corners.
5. Never operate in the same area for more than 2 seconds, or damage may occur.
6. The surface cleaner is not suited to scouring or scrubbing.

How to Replacement Nozzle for Surface Cleaner

1. Use a water inline filter to avoid a nozzle blocked by sand or other debris.
 2. If blocked, remove the nozzle. clean with needle and rinse with fresh water.
- If the nozzle is severely blocked and not work, using an appropriately sized wrench remove the nozzle from the spray bar. Align the nozzle opening, reinstall the new nozzle to the spray bar. Tighten it securely.



VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate

www.vevor.com/support