

Technical Support and E-Warranty Certificate www.vevor.com/support

# PRESSURE WASHER SURFACE CLEANER MODEL: DD15S-1

We continue to be committed to provide you tools with competitive price. "Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and doses not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.



PRESSURE WASHER SURFACE CLEANER

#### MODEL:DD15S-1



## **NEED HELP? CONTACT US!**

Have product questions? Need technical support? Please feel free to contact us:

#### Technical Support and E-Warranty Certificate www.vevor.com/support

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.



Warning-To reduce the risk of injury, user must read instructions manual carefully.

# INTRODUCTION

Congratulations on the purchase of your new Rotary Surface Cleaner! You can be assured this Cleaner was constructed and designed with quality and performance in mind.Each component has been rigorously tested to ensure the high level of acceptance.

This surface cleaner is designed for high-pressure cleaning of a variety of outdoor surfaces such as concrete, asphalt, paving stone walkways pool decks etc. Simply connect the rotary surface cleaner to your pressure washer, pull the trigger and walk behind for fast and efficient cleaning!

SPECIFICATIONS	
Max. Pressure(PSI/BAR)	4,000/276
Min. Pressure(PSI/BAR)	1,500/104
Max. Flow Rate(GPM/LPM)	2.9/10.94
Max. Temperature(°F/°C)	140/60

# Package Lists:

- 1 x 15" Surface Cleaner 3 x Universal Casters
- 6 x Nuts M6
- 7 x Screws M6\*15 (One of them is a spare screw)

1 x Wrench

- 1 x Hey Key
- 5 x Different Nozzle Tips 1 x Thread Seal Tape
- 4 x O-rings
- 1 x Through-hole Needle
- 2 x Extension Wand
- 1 x Manual





## Assemble

Procedure For Installing Universal Casters

Step1:



Step2:





SET-UP(Figure 1.)

1.Pull back collar on quick-connect end of wand.

2.Push the surface cleaner into place. 3.Push the collar forward, insert surface cleaner and release collar.Ensure the collar slides all the way forward. Tug on surface cleaner to make sure it is securely in place.



### NOTE:


 To prevent leakage, please ensure the O-ring is detached before use.
To connect section wands easily, please dip some water or oil in black Orings at the end of section wands. Then connect both section wands together.

### START-UP

1. Ensure all connections are secure.

2. Unlock the trigger gun and squeeze the trigger while starting the Pressure Washer. Water will begin flowing from the nozzles of the Surface Cleaner. Ensure nozzles are not clogged and spray pattern is not erratic. Walk slowly behind the unit, cleaning as you go. If striping occurs, slow down the pace. Do not allow machine to remain stationary on soft surfaces such as wood.

**NOTE:** If striping or swirling occurs, slow your pace. If striping or swirling continues, the surface cleaner skirt bristles may be worn and in need of replacement.

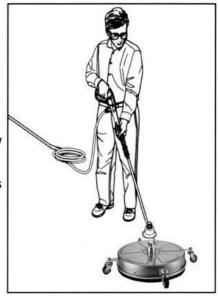

**NOTE:** Always squeeze the gun's trigger to release any residual pressure immediately after use. Engage the trigger lock when not in use.

3. 5 Spray Nozzles Have Different Spray Angle

(0°、15°、25°、40°、65°)

- 1. Red: 0 degree straight line of water
- 2. Yellow: 15 degree fan-shaped water
- 3. Green: 25 degree fan-shaped water
- 4. White: 40 degree fan-shaped water
- 5. Black: 65 degree, large fan foam nozzle

## Maintenance (Figure 3. & Figure 4.)

Please use an inline water filter to avoid the nozzle being blocked by sand or other debris. A clogged or dirty nozzle will result in excessive pump pressure causing a pulsing sensation.


1.Turn off the pressure washer and turn off the water supply. Release the residual pressure by squeezing the gun's trigger.

2. Disconnect the pressure washer from the surface cleaner.


3. Use an appropriate sized wrench (not provided) to remove the nozzle from the spray bar.

4. Using a straightened paper clip, free any foreign material clogging or restricting the nozzle. See Figure 3.5. Use a garden hose to flush debris out of the nozzle. Direct the flow of

water through the nozzle backwards from the outside to the inside.6. Reinstall the nozzle to the spray bar. Tighten securely. Align the nozzle opening as shown in Figure 4.

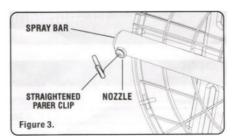



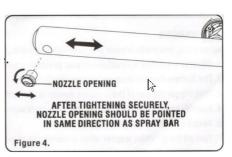

7. Reconnect the surface cleaner to the pressure washer.

8. If the nozzle is severely blocked and does not work with the above steps, you have to replace the nozzles. Remove the nozzle from the spray bar

using an appropriate-sized wrench (not provided)— Reinstall new nozzles

to the spray bar. Tighten securely. Align the nozzle opening as shown in Figure 4.

# CAUTION

1. High pressure in surface cleaner area. Risk of injury caused by improperly locked surface cleaner. Ensure you hear the "click" when inserting the surface cleaner tip into the quick connection.

2. Pull the surface cleaner to make sure it is seated properly before operating your unit.

3. Striking any raised obstacle while using the surface cleaner will damage the unit.If contact does occur and causes vibration when operating the pressure washer, stop use immediately. Continuing to operate the unit could result in serious injury.

4. Do not use on windows. Do not run over freestanding corners.

5. Never operate in the same area for more than 2 seconds, or damage may occur.

6. The surface cleaner is not suited to scouring or scrubbing.



Technical Support and E-Warranty Certificate www.vevor.com/support