

# **VEVOR<sup>®</sup>**

**TOUGH TOOLS, HALF PRICE**

**Technical Support and E-Warranty Certificate [www.vevor.com/support](http://www.vevor.com/support)**

## **LIGHTSABER TOY AND ACCESOIRES**

We continue to be committed to provide you tools with competitive price.

"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

# VEVOR<sup>®</sup>

TOUGH TOOLS, HALF PRICE

LIGHTSABER TOY AND  
ACCESOIRES

MODEL:TSK-E04/TSK-E12



## NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:  
Technical Support and E-Warranty Certificate [www.vevor.com/support](http://www.vevor.com/support)

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

Symbol	Symbol Description
	<p><b>Warning:</b> To reduce the risk of injury, the user must read the instructions manual carefully.</p>
	<p>This symbol, placed before a safety comment, indicates a kind of precaution, warning, or danger. Ignoring this warning may lead to an accident. To reduce the risk of injury, fire, or electrocution, please always follow the recommendation shown below.</p>
	<p><b>CORRECT DISPOSAL:</b></p> <p>This product is subject to the provision of European Directive 2012/ 19/EC. The symbol showing a wheeled bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to a collection point for recycling electrical and electronic devices.</p>

## FCC INFORMATION

**CAUTION:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment!

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This product may cause harmful interference.
- 2) This product must accept any interference received, including interference that may cause undesired operation.

**WARNING:** Changes or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

**Note:** This product has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are

designed to provide reasonable protection against harmful interference in a residential installation.

This product generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the distance between the product and receiver.
- Connect the product to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for assistance.



### **Correct Disposal**

This product is subject to the provision of European Directive 2012/19/EU. The symbol showing a wheeled bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to a collection point for recycling electrical and electronic devices.



### **Li-Ion BATTERY DISPOSAL**

 
To minimize hazards to health and the environment at the end of this product's life, laws dealing with Waste Electrical and Electronic Equipment (WEEE) and The Waste Battery Directive require you to dispose of this product at a suitable collection facility where it will be sent in order to remove the batteries and for

appropriate recycling. Please contact your local authorities for more details on recycling and safe disposal of these in your area.

## ► SPECIFICATION


Model	TSK-E04/TSK-E12
Material	Aluminum Alloy & PC
Light	3.1W RGB LED
Battery	3.7V 2000mAh
Charging	5V/1A(Max)

## ► ILLUSTRATION OF MODEL

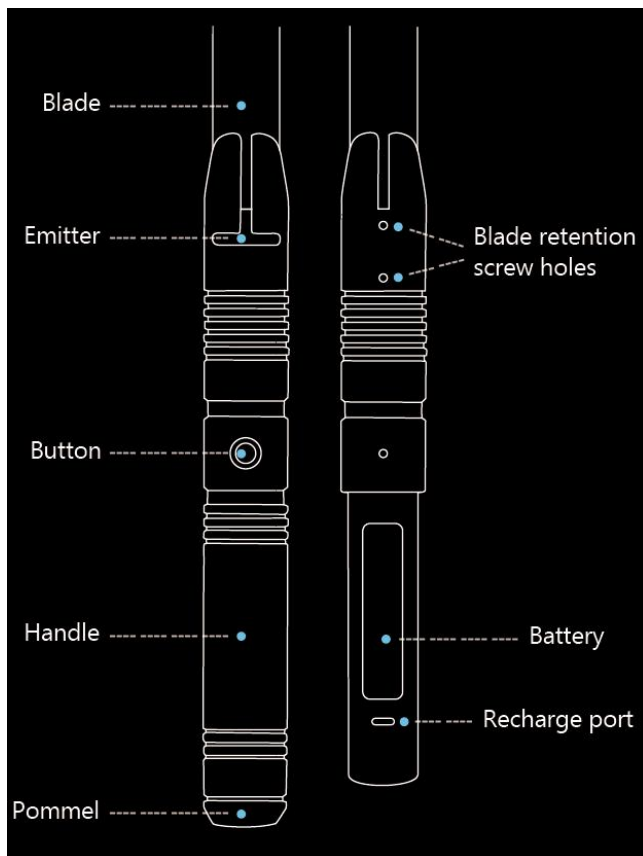


## ► DISMANTLING

 
① Rotate and unscrew the lightsaber body

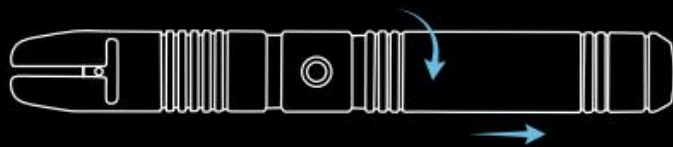


② Unscrew the back screws of the handle

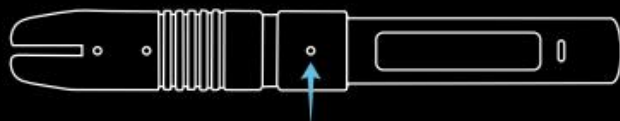 

 ③ Push the switch button from the handle surface into the infrastructure

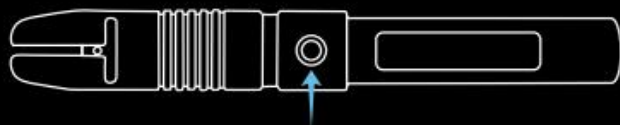


④ Pull down the inner structure

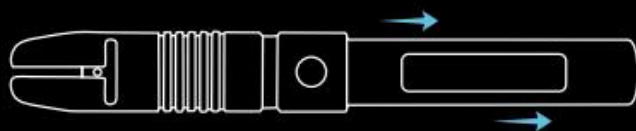 


## ► CHARGING DIAGRAM

 - ① For models with an external charging port, please use the charging cable provided by the merchant to plug in and charge.

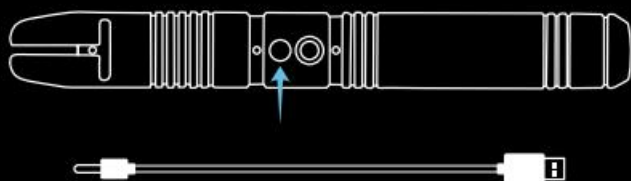

 - ② For models with built-in charging port, please unscrew the saber pommel or handle, and then use the charging cable provided by the merchant to plug in and charge.

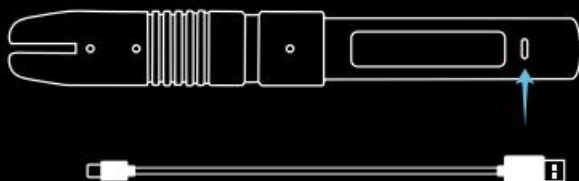

- ③ For models without a charging port, please unscrew the saber handle, then take out the battery and use the charging box provided by the merchant to charge.



## ► USE

Assemble: Use threads to assemble the hilt and body of the Laser sword as shown in Figure 1

 


The connector can connect two laser swords into one, as shown in Figure 2 and Figure 3, it is an purchase if you need.



### Charging light

The recommended charging time is 3-4 hours (please follow the charging light, the light will go out when the charging is completed.)

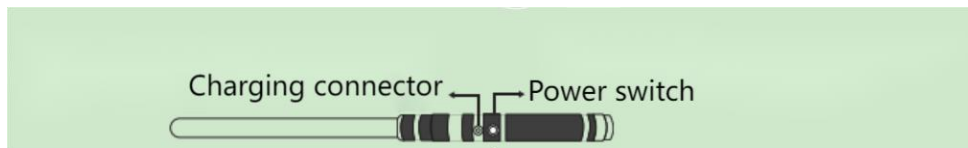

On/ Off: Press the switch button to start, and press the switch to switch the light mode(long press the switch for 3 seconds to shut down).

Mode: Click the switch to switch the light mode. The sound of the sword is heard when hitting, and the sound of the Force lightsaber current is heard in the background, double click to enter the flash

mode, three hits to enter the silent mode, repeat three hits to restore the background sound.

## ► SECURITY INFORMATION

Before using and operating the product, in order to ensure optimal product performance and avoid dangerous or illegal situations, please read and follow all safety information.

### ① Operation and Safety

- Please fully charge before operation.
- Please use a 5V1A power adapter.
- Please keep small accessories safe and keep them out of reach of children to prevent them from accidentally swallowing.
- Please notice the anode and cathode of the battery.
- Please use this product within the temperature range of 0°C ~ 35°C and store it in the range of -20°C ~ +45°C.
- Don't expose the battery to high temperatures or heat generating products such as sunlight, heaters, microwaves, ovens, or water heaters. Overheating the battery may cause an explosion.
- Don't throw batteries into fire. Disassembling, dropping, squeezing, or modifying batteries is prohibited. Avoid foreign objects inserting, puncturing the battery, or immersing the battery in water or other liquids. Avoid external shocks and pressure on the battery. To prevent battery leakage, overheating, fire or explosion.
- Please dispose of batteries according to local regulations and don't dispose of them as household waste. Improper disposal of batteries may lead to battery explosions.
- When charging is complete or not charging, please disconnect the power adapter from the product and unplug the power adapter from the power socket
- Don't use the power adapter in damp places (such as near sinks, bathtubs, or showers), and don't use wet hands to plug and unplug the power adapter.
- Using unauthorized or incompatible power sources, power adapters, or batteries may cause fire, explosion, or other hazards.

● **【Warning】** There is a risk of fire or explosion if the incorrect model of battery is replaced. For your personal safety and to ensure the normal operation of the product, we strongly recommend that you go to the Official store to replace the battery of this product.

► **FAQ**

① The saber has no sound

Please confirm whether it is in mute mode, and you can adjust volume mode or reinstall the battery.

② The blade is easy to loosen

Make sure that the screws that secure the blade are tightened. In addition, it is normal for the screws and the blade to loosen during the fight. You can change the fixed position of the screw and tighten the screw.

③ Saber cannot be turned on

Please charge the saber first to make sure it is fully charged. If it still can't be solved, please remove the battery and reinstall it (pay attention to the positive and negative poles), and make sure the battery is in contact with it.

**Manufacturer:** Shanghaimuxinmuyeyouxiangongsi

**Address:** Shuangchenglu 803nong11hao1602A-1609shi, baoshanqu, shanghai  
200000 CN.

**Imported to AUS:** SIHAO PTY LTD.

1 ROKEVA STREETEASTWOOD NSW 2122 Australia

**Imported to USA:** Sanven Technology Ltd.

Suite 250, 9166 Anaheim Place, Rancho Cucamonga, CA 91730

**EC REP:** E-CrossStu GmbH

Mainzer Landstr.69, 60329 Frankfurt am Main.

**UK REP:** YH CONSULTING LIMITED.

C/O YH Consulting Limited Office 147, Centurion House, London Road,  
Staines-upon-Thames, Surrey, TW18 4AX

**VEVOR**<sup>®</sup>  
TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate  
[www.vevor.com/support](http://www.vevor.com/support)