

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate www.vevor.com/support

OPTICAL ELECTRIC MOTORIZED TABLE

MODEL:WZ-3A

We continue to be committed to provide you tools with competitive price. "Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

VEVOR[®]

TOUGH TOOLS, HALF PRICE

OPTICAL ELECTRIC MOTORIZED TABLE

MODEL: WZ-3A



NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

Technical Support and E-Warranty Certificate
www.vevor.com/support

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.



Warning - To reduce the risk of injury, the user must read the instructions manual carefully.

SAFETY INSTRUCTIONS

1. General safety information for the use of electrical devices:

To avoid injury from or electric shock, please ensure compliance with safety instructions when using this device. Please read the instruction carefully and make sure that you have understood it well. Keep the manual near the equipment to be able to read it at any time.

Always use current sources connected to the ground and provide the necessary voltage (indicated on the label on the device). If you have any doubts, let an electrician check that the unit is properly grounded. Never use a damaged power cable.

2. When operating the lifting platform, pay attention to safety protection to avoid hands, feet and clothes being squeezed.

3. The lifting platform must be placed on a flat and solid ground to avoid overturning.

4. When placing items, the center of gravity should be placed on the center of gravity of the table, pay attention to not overload.

WARNING:

Changes or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

FCC Information

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment!

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This product may cause harmful interference.
- 2) This product must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

Note: This product has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules, These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This product generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the distance between the product and receiver.
- Connect the product to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for assistance.

MODEL AND PARAMETERS

| | |
|--------------------------|---------------------------------|
| Model | WZ-3A |
| Input | AC 120V 60Hz |
| Power | 120W |
| Max. Capacity | 55kg |
| Adjustable Height | 630-810mm |
| Tabletop Size | 580*400mm(A16) / 480*400mm(D16) |
| Materials | Steel+Density board |

STRUCTURE DIAGRAM



1. Table top 2. Switch(UP/DOWN) 3. Bottom drawer 4. Switch
5. External power socket(≤500W) 6. Power Socket(Built-in fuse)
7. Caster Wheel

PARTS LIST

NOTE: Please check you have all the parts as shown in the part list.

| | |
|---|--|
|  |  |
| <p style="text-align: center;">Table Plate x1</p> | <p style="text-align: center;">Column Assembly x1</p> |
|  |  |
| <p style="text-align: center;">Square & wheel Assembly x2</p> | <p style="text-align: center;">Bottom Drawer x1</p> |
|  |  |
| <p style="text-align: center;">Eye Mask x1</p> | <p style="text-align: center;">Hex Key x1</p> |
|  |  |
| <p style="text-align: center;">Plastic End Plug x4</p> | <p style="text-align: center;">Power Cord x1</p> |
|  |  |
| <p style="text-align: center;">Screw x8</p> | <p style="text-align: center;">Washer x4</p> |
|  | |
| <p>User Manual x1</p> | |

INSTALLATION



- A. Install the two tripods with casters in the boxes on the both sides of the elevator base respectively and tightening them.
- B. Tight the table plate with four M8(With the washer) inside Hexagon screw on the support board.
- C. Plug the plug of the elevator into the socket in place by the same direction.

FAULT REPAIR

① Around the foot platform is not parallel.

- a) It can be used wrench to adjust up and down, respectively, the two casters.
- b) Such as the lifting platform of the feet have posted signs RL. Loosen the screws of the RL wire and tighten the screws after the whole installation is complete.

② The platform can not take-off and landing.

- a) Check the power switch whether or not light up.
- b) Check whether the plug inserted in place.
- c) Check the power socket on the fuse is blown.

d) Inspection machines and table control switch plug is inserted in place.

③ **Slow rise and fall. (You are advised to contact professional maintenance personnel.)**

a) Check that the voltage used is correct - if the voltage is normal, the starting capacitor can be replaced with a 10-12UF capacitor according to the motor parameters.

MAINTENANCE

1. Wipe the table top regularly with a soft cloth and neutral cleaner, and be careful not to use cleaners containing acidic and alkaline ingredients.
2. Electrical cords and sockets need to be checked regularly.

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate

www.vevor.com/support