

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate www.vevor.com/support

FACIAL STEAMER

MODEL: DT-318

We continue to be committed to provide you tools with competitive price.

"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

VEVOR[®]

TOUGH TOOLS, HALF PRICE

FACIAL STEAMER

MODEL: DT-318







NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

Technical Support and E-Warranty Certificate
www.vevor.com/support

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

	<p>Warning-To reduce the risk of injury, user must read instructions manual carefully.</p>
	<p>Correct Disposal This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p>
	<p>Compliance is a EC & UK security certification.</p>
	<p>This product is subject to the provision of European Directive 2012/19/EC. The symbol showing a wheelie bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to a collection point for recycling electrical and electronic devices</p>

IMPORTANT SAFEGUARDS

Thank you for using this product. In order to make sure that you can operate the machine correctly, read this instruction carefully before operation and keep it properly for future reference. Please be sure to read the precautions and safety rules on this page to ensure your safe use.

This manual will outline safety warnings and precautions, operating, maintenance and cleaning. The warnings and instructions reviewed in this manual cannot cover all possible conditions and situations that may occur. Caution and common sense are not built into this product, since we believe that the uses will comply with these codes. If you have any problems, please call us. Do not try to fix the problems yourself, or it will cause injury or property damage.

Please read ALL the instructions before using your machine.

1. Make sure the voltage in your outlet is the same as the voltage indicated on the appliance's rating label.
2. Do not let children, minors, and pets get close to or touch the machine.
3. Do not touch the hot surface directly with your hands. Always use the handle or knob for operation.
4. To prevent electrical shock, do not immerse the cord or plug into water or other liquids.
5. Do not immerse the appliance in water or any other liquid.
6. Unplug the machine from the outlet when not in use and before cleaning. Cool the appliance before installing or removing parts and before cleaning.
7. Do not operate the device with a damaged cord or plug, malfunction, or mechanical damage. Send it to your nearest authorized service center for examination and repair (ONLY technicians should open up the it).
8. Using any accessories or attachments that are not provided or recommended by the manufacturer may cause injury.
9. If the machine is not to be used for a long period of time, unplug it, clean and cover it and store it in a dry and safe place.
10. Do not leave the power cord hanging over the edge of table or counter or let it come into contact with any hot surfaces.
11. Do not place the unit on or near hot air, electric burners or heaters.
12. Always switch off the power to the socket before plugging in or unplugging. Hold the plug instead of pulling on the cord.
13. Do not apply this unit to any other purposes than the indicated usage.
14. Do not use it outdoors or for commercial purposes.
15. KEEP IT OUT OF CHILDREN'S REACH.
16. DO NOT CLEAN IT WITH ANY ABRASIVE MATERIAL.
17. Never leave it unattended while in use.
18. INDOOR USE ONLY.
19. Ensure that the power outlet, plug and cord being used are in good working condition. Damaged components should be repaired by a certified electrician who is qualified to meet local safety and electrical codes. Even if your power cord is functioning properly, keep it away from water and avoid letting it run over carpets or heating devices.

20. Avoid using it in the presence of flammable liquids, gases, dust or other explosive situations.
21. Type Y attachment: If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
22. Prohibits thunderstorm days, humid environments use.
23. When used in an enclosed area, allow for ample ventilation.
24. **DO NOT IMMERSE IN WATER! DO NOT WASH WITH WATER!**
25. **DO NOT use purified or distilled water. Do not add other liquids** (alcohol, gasoline, perfume, essential oils, drugs, etc.), **Use tap-water.**
26. Please clean it regularly, at least once a month.
27. Please use white vinegar or 5% citric acid to clean, do not use other cleaning fluids, otherwise it will damage the machine.
28. Please drain the water after each use to avoid odors (after draining the water, please seal the silicone tightly to avoid water leakage).
29. Before each use, please test the temperature first, and then start using it when the temperature is right to avoid burns.
30. After shutting down the product, residual heat may cause continued steam emission. Be careful of steam burns.
31. People with respiratory diseases or skin diseases are forbidden to use.
32. Direct steam exposure to the eyes is strictly forbidden.
33. Keep at least 20 cm away from the skin when using.
34. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
35. The product should be placed on a flat surface.
36. Water do not go over the Max line.

FCC INFORMATION

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment!

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This product may cause harmful interference.
- 2) This product must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

Note: This product has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules, These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This product generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the distance between the product and receiver.
- Connect the product to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for assistance.

PRODUCT PARAMETERS

Model:	Voltage	Input Power	Plug Type
DT-318	120~ 60Hz	750W	America PLUG
	220-240V~ 50Hz	750W	European PLUG

Attention:

1. The voltage used for this device must be the same as the power supply voltage.
2. Users need to install it near the power switch and fuse.

 
ASSEMBLE STEPS

1. Before using the appliance for the first time, peel off any promotional and packaging materials and check that the product is clean and dust-free.
2. Please dispose of all plastic bags carefully and keep them away from children and pets.
3. Check all components provided according to the list in this manual. Make sure you have all of the parts listed.
4. Although paying particular attention when manufacturing this product, you must be careful during the assembly process to avoid being scratched by sharp edges.
5. Wear protective gloves, during assembly and using.
6. The product should be placed on a flat surface.


STEP1: Take out the metal foot forks and casters, aiming the four casters at the nails on the feet respectively, and press them in with force. Until hearing a 'crack', the caster is installed in the right place.



STEP2: Interlock two metal feet together.

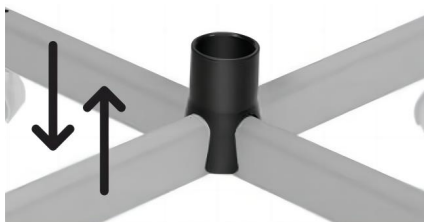

 STEP3: Place the plastic item on the metal feet.

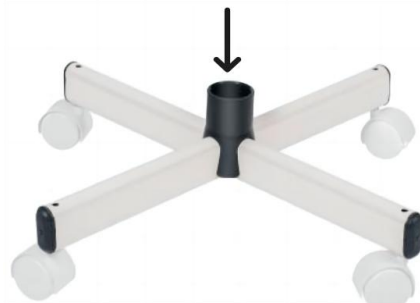


STEP4: Insert the lifting rod into the center hole.



STEP5: Tighten the rod to the base of the lifting pole with a wrench when inserting it through the concave and convex iron plate center hole.



 STEP6: Insert the small rod of the lifting platform into the large rod and tighten the gray connection.

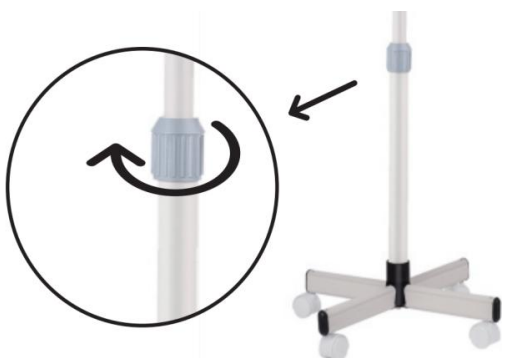


STEP7: Take out the main steaming machine and fix it on the top of the stand by pointing the hole on the bottom of the main machine.



PROCEDURE FOR OPERATION

 1. Place the device onto the support stably.
2. Check if the seal for the hot water cup has been tightened up.
3. Fill water from the water-filling opening until the water level gets close to the high limit for water filling.
4. Switch on power.
5. Press the push-button on the operating panel to “HOT” button or “LIGHT” button.

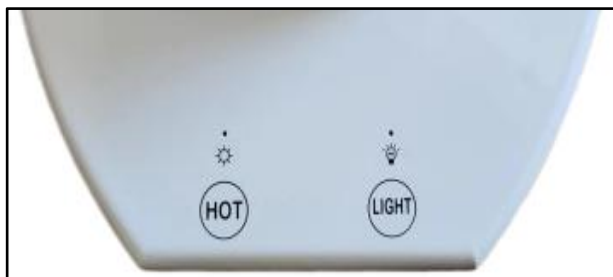

Attention:

1. Do not place the device upside down or tilt it when it is in operation.
2. Do not operate the device if no water is available.
3. Water filling sequence: remove the water tank, unscrew the water tank cover, add water, and put it into the product slot.
4. The product should be placed on a flat surface.
5. **DO NOT use purified or distilled water. Do not add other liquids** (alcohol, gasoline, perfume, essential oils, drugs, etc.), **Use tap-water.**
6. Water do not go over the Max line.

CLEANING AND STORAGE

1. Once you have finished using, remove the plug from the electrical outlet. Allow the product to cool down completely before cleaning.
2. Please use white vinegar or 5% citric acid to clean, do not use other cleaning fluids, otherwise it will damage the machine.
3. Please drain the water after each use to avoid odors (after draining the water, please seal the silicone tightly to avoid water leakage).
4. Please clean it regularly, at least once a month.
5. Wipe with a soft, dry cloth. Never use an abrasive cleanser or harsh pad. Do not clean with water or other liquids. Be sure to keep the product dry
6. Children are not allowed to wipe the product to avoid tipping and falling injuries.
7. After the product is disassembled, please put the parts and accessories together.

TIPS

1. **DO NOT use purified or distilled water. Do not add other liquids** (alcohol, gasoline, perfume, essential oils, drugs, etc.), **Use tap-water.**
2. Please use **tap-water** for HOT STEAM, if using pure water, it may not work and beeping cause of the PH value of the pure water can not be detected by the needle in the water container.
3. When the water is insufficient, the product will stop working, and it can resume working after adding tap-water.

LOW WATER SAFETY ALARMING SYSTEM

This item has a 'low water safety alarming system', and if it detects there is no water or not enough water left in the cup, it will give constant alarm to warn you as well as not let the machine work at all.

When the steamer is brand new, there is no electrolyte in the cup at all and if you use distilled/purified water, the water is also very clean. So there is nothing for the steamer to feel like water.

Solution to this is USING ORDINARY TAP WATER or / and ADDING SALT INTO

THE WATER, which will bring electrolyte into the cup to make the unit detect there is water inside. The steamer will now start working.

Do not use this product near the bathtub, shower room, basin or other water container.

ANTI-WATER-SPRAY MECHANISM

The device will not spray but give an alarm in case there is water, which indicates the anti-water-spray mechanism is working.

Water level is too high	Switch off power supply → drain out water → re-start
Water is too turbid	Switch off power supply → clean → change water → re-start

Address: Baoshanqu Shuangchenglu 803long 11hao 1602A-1609shi
Shanghai

Imported to AUS: SIHAO PTY LTD, 1 ROKEVA STREET EASTWOOD
NSW 2122 Australia

Imported to USA: Sanven Technology Ltd., Suite 250, 9166 Anaheim
Place, Rancho Cucamonga, CA 91730

UK	REP
-----------	------------

Pooledas Group Ltd
Unit 5 Albert Edward House,
The Pavilions Preston, United Kingdom

EC	REP
-----------	------------

SHUNSHUN GmbH
Römeräcker 9 Z2021, 76351
Linkenheim-Hochstetten, Germany

Made In China

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate

www.vevor.com/support