

Technical Support and E-Warranty Certificate www.vevor.com/support

CASH DRAWER

We continue to be committed to provide you tools with competitive price.

"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.



CASH DRAWER

MODEL: MK410T MK330T





NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

Technical Support and E-Warranty Certificate www.vevor.com/support

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

Symbol

Symbol Description



Warning: To reduce the risk of injury, the user must read the instructions manual carefully.



This symbol, placed before a safety comment, indicates a kind of precaution, warning, or danger. Ignoring this warning may lead to an accident. To reduce the risk of injury, fire, or electrocution, please always follow the recommendation shown below.



CORRECT DISPOSAL:

This product is subject to the provision of European Directive

2012/ 19/EC. The symbol showing a wheelie bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to a collection point for recycling electrical and electronic devices.


HOW TO OPEN THE DRAWER

This is a manual touch open cash drawer. It can only opened by pushing the drawer front while the lock is in manual push open position.

Lock Positions

The key lock has 2 lock functions: the manual open which means pushing the drawer front will open the drawer. Locked closed/opened means the drawer is locked and cannot be pushed open with a key.


(See figure below)

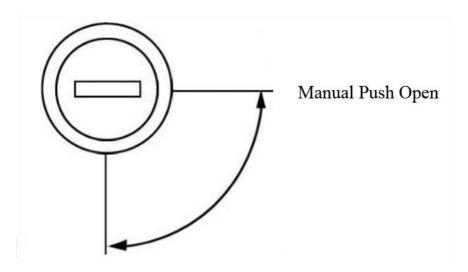

Warning: To reduce the risk of damaging or breaking the key, avoid leaving it in the lock during normal operation

DRAWER REMOVAL

 Open the cash drawer and remove the plastic coin and bill tray. Pull the drawer out until it stops, tip the front edge of the drawer up and pull the drawer out at an inclined angle.



MAINTENANCE

The cash drawer slides should be periodically cleaned and lubricated. Frequency is dependent on use and the environment,

but typical recommended frequency is every three months. Using a dry, lint free cloth, wipe out the old grease and debris from

the inner and outer slides. Do not use water or any type of liquid cleaner. Using a clean applicator, apply a thin layer of

lithium-based bearing grease to the inner and outer slides. Cycle the slides several times to properly coat the Polyurethane rollers and to spread the grease evenly.

Manufacturer: Shanghaimuxinmuyeyouxiangongsi

Address: Shuangchenglu 803nong11hao1602A-1609shi, baoshanqu,

shanghai 200000 CN.

Imported to AUS: SIHAO PTY LTD. 1 ROKEVA STREETEASTWOOD

NSW 2122 Australia

Imported to USA: Sanven Technology Ltd. Suite 250, 9166 Anaheim

Place, Rancho Cucamonga, CA 91730

EC REP

E-CrossStu GmbH Mainzer Landstr.69, 60329 Frankfurt am Main.

UK REP

YH CONSULTING LIMITED.

C/O YH Consulting Limited Office 147, Centurion House, London Road, Staines-upon-Thames, Surrey, TW18 4AX



Technical Support and E-Warranty Certificate www.vevor.com/support