

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate
www.vevor.com/support

RETRACTABLE EXTENSION CORD REEL USER MANUAL

 
We continue to be committed to provide you tools with competitive price. "Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

VEVOR[®]





RETRACTABLE EXTENSION CORD REEL

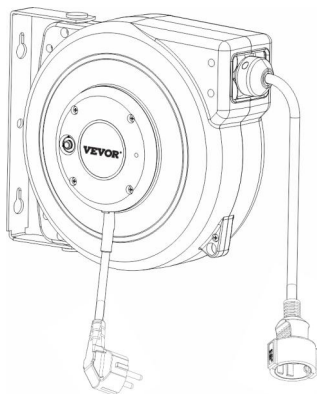ZD150 50 FT(15 M)

ZD150 65 FT(19.8 M)



ACCESSORIES

NO.	Part name	QTY	Remark
1	Bracket	1	
2	Expansion screw	4	
3	Wood screw	4	
4	Set screw	1	

NEED HELP? CONTACT US!

Have product questions? Need technical support?
Please feel free to contact us:

Technical Support and E-Warranty Certificate www.vevor.com/support

This is the original instruction, Please read all manual instructions carefully before operating. VEVOR reserves clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there is any technology or software updates on our product.

WARNING

- ◆ **Warning:** To reduce the risk of fire, electric shock or personal injury, please strictly follow the instructions.
 - ◆ **Danger:** Electrical cord can be hazardous Le cordon électrique peut être dangereux.
1. Do not connect any devices which may exceed the maximum ratings of this cord reel.
 2. Do not try to plug it in when your hands are wet or damp.
 3. Never attempt to plug the cord reel into a non-grounded outlet.
 4. When pulling the cord from the cord reel, grasp the reel's cord itself, but not the device or tool that the cord is plugged into.
 5. Do not allow the cable to retract without restraining the retraction speed as damage or injury may occur from excessive rewind speed.
 6. Inspect before every use; do not use if parts are loose or damaged or if insulation is worn.
 7. Always unplug the retractable reel from its electrical outlet before performing any maintenance or changing accessories.
 8. Do not connect wires randomly. Connect brown wires with "L", blue wires with "N", and chartreuse wires with "E".
 9. When automatically retracting, a slow wire collection operation may lead to stagnation. The power cord needs to be pulled out a little, then release, and use its recovered inertia to completely retract the cable.
 10. Do not disassemble the body of the reel.
 11. Children are not allowed to use the cord reel.

OPERATION

1. Plug the lead-in cord into the grounded outlet.
2. Pull cord out to the desired length. Notice a clicking noise when pulling the cord. The cord will stay at the desired length during the clicking and rewind after a pull past the clicking noise.
3. To retract, pull the cord out and guide it slowly back into the reel.

SPECIFICATIONS

Cat. No.:	ZD150		
Input Voltage:	AC230V , 50Hz		
Re-settable thermal protection	@56 +/-5°C		
Cord:	H05VV-F 3G1.5mm ²		H05VV-F 3G2.5mm ²
Length:	50 FT(15 M)	65 FT(19.8 M)	50 FT(15 M)
Lead-in Cord Length:	3.3 FT(1 M)		

ONE YEAR LIMITED WARRANTY


VEVOR warrants this product to be free from defects in material and workmanship for a period of one year from the date of purchase. Warranty is void if damage is caused by misuse or improper installation.

NOTE: See specification sheet for fully extended lengths wires of different sizes. DO NOT keep on pulling the cord after it is fully extended.


INSTALLATION

- a. Check the wall or ceiling surface to which the retractable reel will be mounted to make sure they are sturdy enough to support the weight of the reel as well as the additional force when pulling on the outlet power cord.
- b. Drywall will not hold the weight of the cord reel. It is necessary to locate a ceiling joist or wall stud.
1. Select a mounting location within 3.3 feet of an electrical outlet. The outlet for a garage door opener is ideal.
2. Locate a wall or ceiling beam (use a stud finder, if needed) and fix the separate bracket to the wall or ceiling beam with cement screws or wood screws, see Figure 1.
3. Slide the mounting bracket of the cord reel into the separate bracket, fix the set screw, see Figure 2.
4. Adjust the cord stopper to a suitable position when required.

 
Figure 1



 
Mark with a pen according to the mounting position (Suitable for concrete materials)



 
Drill four 45-50mm deep holes with 10mm drill bits



 
Install the expansion screws into the holes



 
Install the bracket with the anchor bolt and tighten the nut



 Install the bracket with wood screws (Suitable for wood)



 
Mark with a pen according to the mounting position (Suitable for concrete)



Drill four 45-50mm deep holes with 10mm drill bits



 Install the expansion screws into the holes




Install the bracket with the anchor bolt and tighten the nut


Install the bracket with the wood screws (Suitable for wood)



 Figure 2

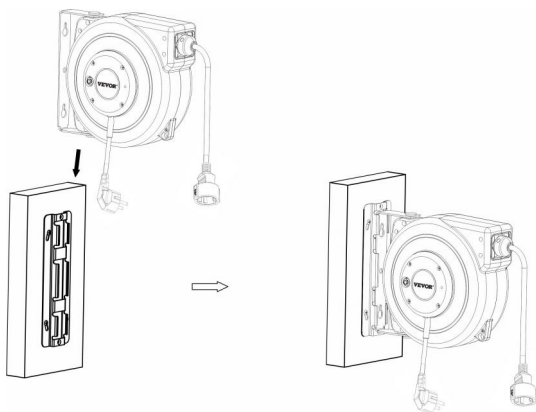

 Slide the mounting bracket of the cord reel into the separate bracket as shown (No need to use the set screw)

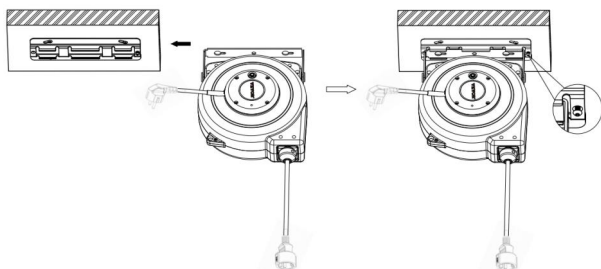

Slide the mounting bracket of the cord reel in the separate bracket as shown

Fix the set screw. (Please pay attention to the position of the set screw, do not fix it to another side or the cord reel will fall off.)



VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate
www.vevor.com/support

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Assistance technique et certificat de garantie
électronique www.vevor.com/support

RETRACTABLE EXTENSION CORD REEL USER MANUAL

Nous continuons à nous engager à vous fournir des outils à des prix compétitifs. "Économisez la moitié", "Moitié prix" ou toute autre expression similaire que nous utilisons ne représente qu'une estimation des économies dont vous pourriez bénéficier en achetant certains outils chez nous par rapport aux grandes marques et ne signifie pas nécessairement couvrir toutes les catégories d'outils proposés. par nous.





Nous vous rappelons de vérifier attentivement lorsque vous passez une commande chez nous si vous économisez réellement la moitié par rapport aux grandes marques.

VEVOR[®]**RETRACTABLE
EXTENSION CORD REEL**

ZD150 50 PI (15 M)

ZD150 65 PI (19,8 M)

**ACCESSORIES**

NO.	Part name	QTY	Remark
1	Bracket	1	
2	Expansion screw	4	
3	Wood screw	4	
4	Set screw	1	

NEED HELP? CONTACT US!

Have product questions? Need technical support?
Please feel free to contact us:

Assistance technique et certificat de garantie électronique www.vevor.com/support

This is the original instruction, Please read all manual instructions carefully before operating. VEVOR reserves clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there is any technology or software updates on our product.

WARNING

◆ **Warning: To reduce the risk of fire, electric shock or personal injury, please strictly follow the instructions.**

◆ Danger: Electrical cord can be hazardous Le cordon électrique peut être dangereux.

1. Do not connect any devices which may exceed the maximum ratings of this cord reel.
2. Do not try to plug it in when your hands are wet or damp.
3. Never attempt to plug the cord reel into a non-grounded outlet.
4. When pulling the cord from the cord reel, grasp the reel's cord itself, but not the device or tool that the cord is plugged into.
5. Do not allow the cable to retract without restraining the retraction speed as damage or injury may occur from excessive rewind speed.
6. Inspect before every use; do not use if parts are loose or damaged or if insulation is worn.
7. Always unplug the retractable reel from its electrical outlet before performing any maintenance or changing accessories.
8. Do not connect wires randomly. Connect brun wires with "L", bleu wires with "N", and chartreuse wires with "E".
9. When automatically retracting, a slow wire collection operation may lead to stagnation. The power cord needs to be pulled out a little, then release, and use its recovered inertia to completely retract the cable.
10. Do not disassemble the body of the reel.
11. Children are not allowed to use the cord reel.

OPERATION

1. Plug the lead-in cord into the grounded outlet.
2. Pull cord out to the desired length. Notice a clicking noise when pulling the cord. The cord will stay at the desired length during the clicking and rewind after a pull past the clicking noise.
3. To retract, pull the cord out and guide it slowly back into the reel.

SPECIFICATIONS

Chat. Non.:	150 ZD		
Tension d'entrée:	AC230V, 50Hz		
Protection thermique réinitialisable	@56 +/-5		
Corde:	H05VV-F 3G1.5mm2		H05VV-F 3G2.5mm2
Longueur:	50 PI (15 M)	65 PI (19,8 M)	50 PI (15 M)
Longueur du cordon d'entrée :	3,3 PI (1 M)		

ONE YEAR LIMITED WARRANTY


VEVOR warrants this product to be free from defects in material and workmanship for a period of one year from the date of purchase. Warranty is void if damage is caused by misuse or improper installation.

NOTE: Voir la fiche technique pour les longueurs entièrement étendues de différentes tailles.
DO NOT keep on pulling the cord after it is fully extended.


INSTALLATION

- a. Check the wall or ceiling surface to which the retractable reel will be mounted to make sure they are sturdy enough to support the weight of the reel as well as the additional force when pulling on the outlet power cord.
 - b. Drywall will not hold the weight of the cord reel. It is necessary to locate a ceiling joist or wall stud.
1. Select a mounting location within 3,3 piesds of an electrical outlet. The outlet for a garage door opener is ideal.
 2. Locate a wall or ceiling beam (use a stud finder, if needed) and fix the separate bracket to the wall or ceiling beam with cement screws or wood screws, see Figure1.
 3. Slide the mounting bracket of the cord reel into the separate bracket, fix the set screw, see Figure 2.
 4. Adjust the cord stopper to a suitable position when required.

 
Figure 1



 
Mark with a pen according to the mounting position (Suitable for concrete materials)



 
Drill four 45-50mm deep holes with 10mm drill bits



 
Install the expansion screws into the holes



 
Install the bracket with the anchor bolt and tighten the nut



 
Install the bracket with wood screws (Suitable for wood)



 
Mark with a pen according to the mounting position (Suitable for concrete)



 Drill four 45-50mm deep holes with 10mm drill bits



 Install the expansion screws into the holes



Install the bracket with the anchor bolt and tighten the nut

Install the bracket with the wood screws (Suitable for wood)



 


Figure 2

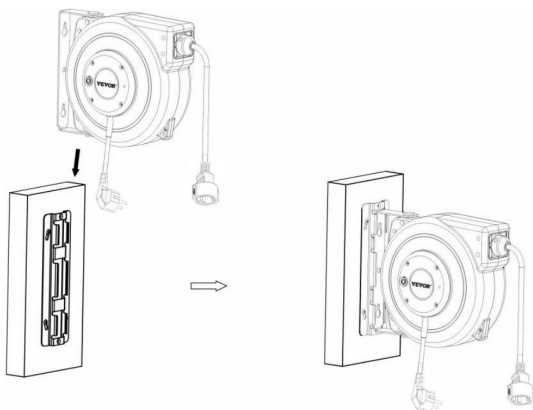 

 Slide the mounting bracket of the cord reel into the separate bracket as shown (No need to use the set screw)

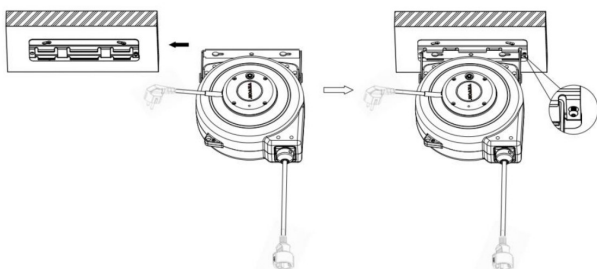

Slide the mounting bracket of the cord reel in the separate bracket as shown

Fix the set screw. (Please pay attention to the position of the set screw, do not fix it to another side or the cord reel will fall off.)



VEVOR[®]

OUTILS ROBUSTES, À MOITIÉ PRIX

Assistance technique et certificat de garantie
électronique www.vevor.com/support

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technischer Support und E-Garantie-Zertifikat
www.vevor.com/support

RETRACTABLE EXTENSION CORD REEL USER MANUAL

 
Wir sind weiterhin bestrebt, Ihnen Werkzeuge zu wettbewerbsfähigen Preisen anzubieten. „Sparen Sie die Hälfte“, „Halber Preis“ oder andere ähnliche Ausdrücke, die wir verwenden, stellen nur eine Schätzung der Ersparnis dar, die Sie beim Kauf bestimmter Werkzeuge bei uns im Vergleich zu den großen Topmarken erzielen können, und decken nicht unbedingt alle von uns angebotenen Werkzeugkategorien ab. Wir möchten Sie freundlich daran erinnern, bei Ihrer Bestellung bei uns sorgfältig zu prüfen, ob Sie im Vergleich zu den großen Topmarken tatsächlich die Hälfte sparen.

VEVOR[®]





RETRACTABLE EXTENSION CORD REEL

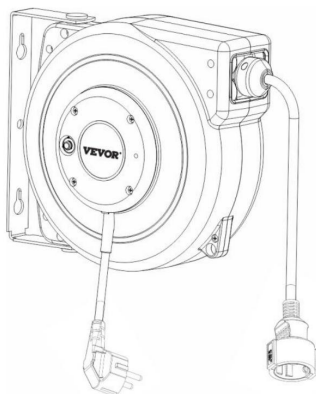ZD150 50 FT (15 M)

ZD150 65 FT (19,8 M)



ACCESSORIES

NO.	Part name	QTY	Remark
1	Bracket	1	
2	Expansion screw	4	
3	Wood screw	4	
4	Set screw	1	

NEED HELP? CONTACT US!

Have product questions? Need technical support?
Please feel free to contact us:

Technischer Support und E-Garantie-Zertifikat www.vevor.com/support

This is the original instruction, Please read all manual instructions carefully before operating. VEVOR reserves clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there is any technology or software updates on our product.

WARNING

- ◆ **Warning: To reduce the risk of fire, electric shock or personal injury, please strictly follow the instructions.**
 - ◆ Gefahr: Das Stromkabel kann gefährlich sein. Das Stromkabel kann gefährlich sein.
1. Do not connect any devices which may exceed the maximum ratings of this cord reel.
 2. Do not try to plug it in when your hands are wet or damp.
 3. Never attempt to plug the cord reel into a non-grounded outlet.
 4. When pulling the cord from the cord reel, grasp the reel's cord itself, but not the device or tool that the cord is plugged into.
 5. Do not allow the cable to retract without restraining the retraction speed as damage or injury may occur from excessive rewind speed.
 6. Inspect before every use; do not use if parts are loose or damaged or if insulation is worn.
 7. Always unplug the retractable reel from its electrical outlet before performing any maintenance or changing accessories.
 8. Do not connect wires randomly. Connect ^{braun} wires with "L", ^{Blau} wires with "N", and ^{Chartreuse} wires with "E".
 9. When automatically retracting, a slow wire collection operation may lead to stagnation. The power cord needs to be pulled out a little, then release, and use its recovered inertia to completely retract the cable.
 10. Do not disassemble the body of the reel.
 11. Children are not allowed to use the cord reel.

OPERATION

1. Plug the lead-in cord into the grounded outlet.
2. Pull cord out to the desired length. Notice a clicking noise when pulling the cord. The cord will stay at the desired length during the clicking and rewind after a pull past the clicking noise.
3. To retract, pull the cord out and guide it slowly back into the reel.

SPECIFICATIONS

Katze nein.:	ZD150		
Eingangsspannung:	AC230V, 50 Hz		
Rückstellbarer Thermoschutz	@56 +/-5%		
Kabel:	H05VV-F 3G1,5mm2		H05VV-F 3G2,5mm2
Länge:	50 Fuß (15 Meter)	65 Fuß (19,8 m)	50 Fuß (15 Meter)
Länge des Zuleitungskabels:	3,3 Fuß (1 M)		

ONE YEAR LIMITED WARRANTY


VEVOR warrants this product to be free from defects in material and workmanship for a period of one year from the date of purchase. Warranty is void if damage is caused by misuse or improper installation.

NOTE: Informationen zu vollständig ausgefahrenen Längen von Armbändern verschiedener Größen finden Sie im Datenblatt.
DO NOT keep on pulling the cord after it is fully extended.


INSTALLATION

- a. Check the wall or ceiling surface to which the retractable reel will be mounted to make sure they are sturdy enough to support the weight of the reel as well as the additional force when pulling on the outlet power cord.
 - b. Drywall will not hold the weight of the cord reel. It is necessary to locate a ceiling joist or wall stud.
1. Select a mounting location within 3,3 Fuß of an electrical outlet. The outlet for a garage door opener is ideal.
 2. Locate a wall or ceiling beam (use a stud finder, if needed) and fix the separate bracket to the wall or ceiling beam with cement screws or wood screws, see Figure 1.
 3. Slide the mounting bracket of the cord reel into the separate bracket, fix the set screw, see Figure 2.
 4. Adjust the cord stopper to a suitable position when required.

 
Figure 1



 
Mark with a pen according to the mounting position (Suitable for concrete materials)



 
Drill four 45-50mm deep holes with 10mm drill bits



 
Install the expansion screws into the holes



 
Install the bracket with the anchor bolt and tighten the nut



 
Install the bracket with wood screws (Suitable for wood)



 
Mark with a pen according to the mounting position (Suitable for concrete)



 Drill four 45-50mm deep holes with 10mm drill bits



 Install the expansion screws into the holes



Install the bracket with the anchor bolt and tighten the nut

Install the bracket with the wood screws (Suitable for wood)



 


Figure 2

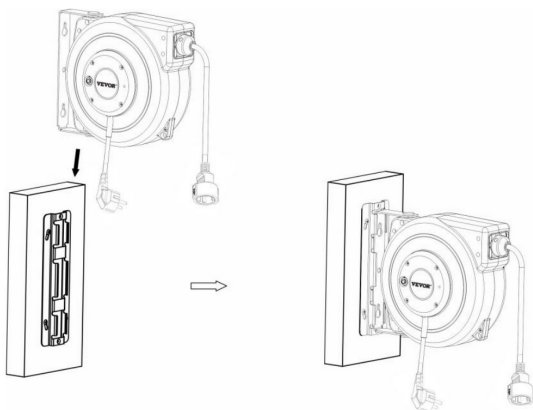 

 Slide the mounting bracket of the cord reel into the separate bracket as shown (No need to use the set screw)

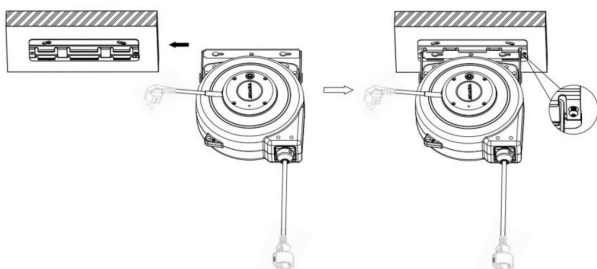

Slide the mounting bracket of the cord reel in the separate bracket as shown

Fix the set screw. (Please pay attention to the position of the set screw, do not fix it to another side or the cord reel will fall off.)



VEVOR[®]

ROBUSTE WERKZEUGE ZUM HALBEN PREIS

Technischer Support und E-Garantie-Zertifikat
www.vevor.com/support

VEVOR[®]

TOUGH TOOLS, HALF PRICE

**Supporto tecnico e certificato di garanzia
elettronica www.vevor.com/support**

RETRACTABLE EXTENSION CORD REEL USER MANUAL

Continuiamo a impegnarci per fornirvi strumenti a prezzi competitivi. "Risparmia la metà", "Metà prezzo" o qualsiasi altra espressione simile da noi utilizzata rappresenta solo una stima del risparmio che potresti trarre dall'acquistare determinati strumenti con noi rispetto ai principali marchi più importanti e non significa necessariamente coprire tutte le categorie di strumenti offerti da noi. Ti ricordiamo di verificare attentamente quando effettui un ordine con noi se stai effettivamente risparmiando la metà rispetto ai migliori marchi p

VEVOR[®]

RETRACTABLE EXTENSION CORD REEL

ZD150 50 piedi (15 metri)

ZD150 65 PIEDI (19,8 M)



ACCESSORIES

NO.	Part name	QTY	Remark
1	Bracket	1	
2	Expansion screw	4	
3	Wood screw	4	
4	Set screw	1	

NEED HELP? CONTACT US!

Have product questions? Need technical support?
Please feel free to contact us:

Supporto tecnico e certificato di garanzia elettronica www.vevor.com/support

This is the original instruction, Please read all manual instructions carefully before operating. VEVOR reserves clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there is any technology or software updates on our product.

WARNING

◆ **Warning: To reduce the risk of fire, electric shock or personal injury, please strictly follow the instructions.**

◆ Pericolo: il cavo elettrico può essere pericoloso Il cavo elettrico può essere pericoloso.

1. Do not connect any devices which may exceed the maximum ratings of this cord reel.
2. Do not try to plug it in when your hands are wet or damp.
3. Never attempt to plug the cord reel into a non-grounded outlet.
4. When pulling the cord from the cord reel, grasp the reel's cord itself, but not the device or tool that the cord is plugged into.
5. Do not allow the cable to retract without restraining the retraction speed as damage or injury may occur from excessive rewind speed.
6. Inspect before every use; do not use if parts are loose or damaged or if insulation is worn.
7. Always unplug the retractable reel from its electrical outlet before performing any maintenance or changing accessories.
8. Do not connect wires randomly. Connect ^{marrone} wires with "L", ^{blu} wires with "N", and ^{certosa} wires with "E".
9. When automatically retracting, a slow wire collection operation may lead to stagnation. The power cord needs to be pulled out a little, then release, and use its recovered inertia to completely retract the cable.
10. Do not disassemble the body of the reel.
11. Children are not allowed to use the cord reel.

OPERATION

1. Plug the lead-in cord into the grounded outlet.
2. Pull cord out to the desired length. Notice a clicking noise when pulling the cord. The cord will stay at the desired length during the clicking and rewind after a pull past the clicking noise.
3. To retract, pull the cord out and guide it slowly back into the reel.

SPECIFICATIONS

Gatto. NO.:	ZD150		
Tensione di ingresso:	CA230V, 50Hz		
Protezione termica ripristinabile	@56 +/-5%		
Cavo:	H05VV-F 3G1,5mm2	H05VV-F 3G2,5mm2	
Lunghezza:	50 PIEDI (15 M)	65 PIEDI (19,8 M)	50 PIEDI (15 M)
Lunghezza del cavo di ingresso:	3,3 PIEDI (1 M)		

ONE YEAR LIMITED WARRANTY

VEVOR warrants this product to be free from defects in material and workmanship for a period of one year from the date of purchase. Warranty is void if damage is caused by misuse or improper installation.


NOTE: Consultare la scheda tecnica per le lunghezze completamente estese di diverse dimensioni.

DO NOT keep on pulling the cord after it is fully extended.


INSTALLATION

- a. Check the wall or ceiling surface to which the retractable reel will be mounted to make sure they are sturdy enough to support the weight of the reel as well as the additional force when pulling on the outlet power cord.
 - b. Drywall will not hold the weight of the cord reel. It is necessary to locate a ceiling joist or wall stud.
1. Select a mounting location within 3,3 piedi of an electrical outlet. The outlet for a garage door opener is ideal.
 2. Locate a wall or ceiling beam (use a stud finder, if needed) and fix the separate bracket to the wall or ceiling beam with cement screws or wood screws, see Figure 1.
 3. Slide the mounting bracket of the cord reel into the separate bracket, fix the set screw, see Figure 2.
 4. Adjust the cord stopper to a suitable position when required.

 
Figure 1



 
Mark with a pen according to the mounting position (Suitable for concrete materials)



 
Drill four 45-50mm deep holes with 10mm drill bits



 
Install the expansion screws into the holes



 
Install the bracket with the anchor bolt and tighten the nut



 Install the bracket with wood screws (Suitable for wood)



 
Mark with a pen according to the mounting position (Suitable for concrete)



Drill four 45-50mm deep holes with 10mm drill bits



 Install the expansion screws into the holes



Install the bracket with the anchor bolt and tighten the nut

Install the bracket with the wood screws (Suitable for wood)



 


Figure 2

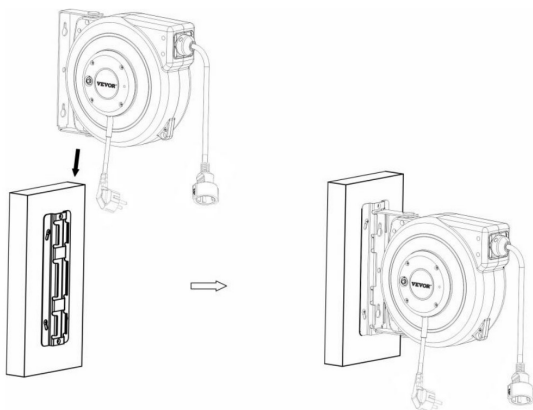 

 Slide the mounting bracket of the cord reel into the separate bracket as shown (No need to use the set screw)

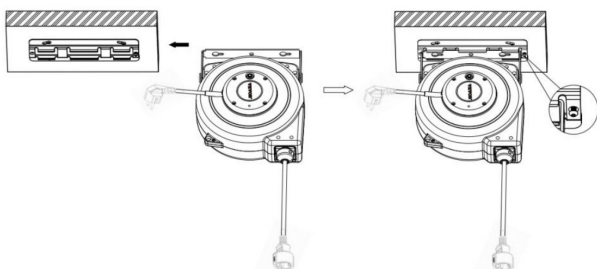

Slide the mounting bracket of the cord reel in the separate bracket as shown

Fix the set screw. (Please pay attention to the position of the set screw, do not fix it to another side or the cord reel will fall off.)



VEVOR[®]

STRUMENTI RESISTENTI, METÀ PREZZO

Supporto tecnico e certificato di garanzia
elettronica www.vevor.com/support

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Soporte técnico y certificado de garantía
electrónica www.vevor.com/support

RETRACTABLE EXTENSION CORD REEL USER MANUAL

 
Seguimos comprometidos a proporcionarle herramientas a precios competitivos. "Ahorre a mitad de precio", "A mitad de precio" o cualquier otra expresión similar utilizada por nosotros solo representa una estimación de los ahorros que podría beneficiarse al comprar ciertas herramientas con nosotros en comparación con las principales marcas y no significa necesariamente cubrir todas las categorías de herramientas ofrecidas por nosotros. Le recordamos que, cuando realice un pedido con nosotros, verifique cuidadosamente si realmente está ahorrando la mitad en comparación con las principales marcas.





VEVOR[®]

RETRACTABLE EXTENSION CORD REEL

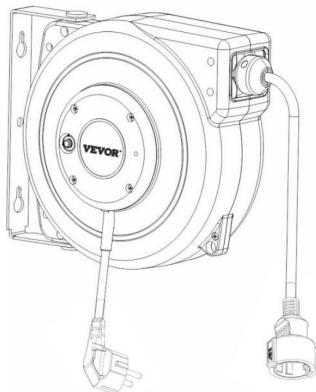ZD150 50 PIES (15 M)

ZD150 65 PIES (19,8 M)



ACCESSORIES			
NO.	Part name	QTY	Remark
1	Bracket	1	
2	Expansion screw	4	
3	Wood screw	4	
4	Set screw	1	

NEED HELP? CONTACT US!

Have product questions? Need technical support?
Please feel free to contact us:

Soporte técnico y certificado de garantía electrónica www.vevor.com/support

This is the original instruction, Please read all manual instructions carefully before operating. VEVOR reserves clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there is any technology or software updates on our product.

WARNING

◆ **Warning: To reduce the risk of fire, electric shock or personal injury, please strictly follow the instructions.**

◆ Peligro: El cable eléctrico puede ser peligroso El cable eléctrico puede ser peligroso.

1. Do not connect any devices which may exceed the maximum ratings of this cord reel.
2. Do not try to plug it in when your hands are wet or damp.
3. Never attempt to plug the cord reel into a non-grounded outlet.
4. When pulling the cord from the cord reel, grasp the reel's cord itself, but not the device or tool that the cord is plugged into.
5. Do not allow the cable to retract without restraining the retraction speed as damage or injury may occur from excessive rewind speed.
6. Inspect before every use; do not use if parts are loose or damaged or if insulation is worn.
7. Always unplug the retractable reel from its electrical outlet before performing any maintenance or changing accessories.
8. Do not connect wires randomly. Connect marrón wires with "L", azul wires with "N", and monasterio wires with "E".
9. When automatically retracting, a slow wire collection operation may lead to stagnation. The power cord needs to be pulled out a little, then release, and use its recovered inertia to completely retract the cable.
10. Do not disassemble the body of the reel.
11. Children are not allowed to use the cord reel.

OPERATION

1. Plug the lead-in cord into the grounded outlet.
2. Pull cord out to the desired length. Notice a clicking noise when pulling the cord. The cord will stay at the desired length during the clicking and rewind after a pull past the clicking noise.
3. To retract, pull the cord out and guide it slowly back into the reel.

SPECIFICATIONS

Gato. No.:	ZD150		
Voltaje de entrada:	CA 230 V, 50Hz		
Protección térmica reajutable	@56 +/-5		
Cable:	H05VV-F 3G1.5mm2	H05VV-F 3G2.5mm2	
Longitud:	50 PIES (15 M)	65 PIES (19,8 M)	50 PIES (15 M)
Longitud del cable de entrada:	3,3 pies (1 metro)		

ONE YEAR LIMITED WARRANTY


VEVOR warrants this product to be free from defects in material and workmanship for a period of one year from the date of purchase. Warranty is void if damage is caused by misuse or improper installation.

NOTE: Consulte la hoja de especificaciones para longitudes completamente extendidas de diferentes tamaños.
DO NOT keep on pulling the cord after it is fully extended.


INSTALLATION

- a. Check the wall or ceiling surface to which the retractable reel will be mounted to make sure they are sturdy enough to support the weight of the reel as well as the additional force when pulling on the outlet power cord.
 - b. Drywall will not hold the weight of the cord reel. It is necessary to locate a ceiling joist or wall stud.
1. Select a mounting location within 3,3 pies of an electrical outlet. The outlet for a garage door opener is ideal.
 2. Locate a wall or ceiling beam (use a stud finder, if needed) and fix the separate bracket to the wall or ceiling beam with cement screws or wood screws, see Figure1.
 3. Slide the mounting bracket of the cord reel into the separate bracket, fix the set screw, see Figure 2.
 4. Adjust the cord stopper to a suitable position when required.

 
Figure 1



 
Mark with a pen according to the mounting position (Suitable for concrete materials)



 
Drill four 45-50mm deep holes with 10mm drill bits



 
Install the expansion screws into the holes



 
Install the bracket with the anchor bolt and tighten the nut



 Install the bracket with wood screws (Suitable for wood)



 
Mark with a pen according to the mounting position (Suitable for concrete)



Drill four 45-50mm deep holes with 10mm drill bits



 Install the expansion screws into the holes



Install the bracket with the anchor bolt and tighten the nut

Install the bracket with the wood screws (Suitable for wood)



 


Figure 2

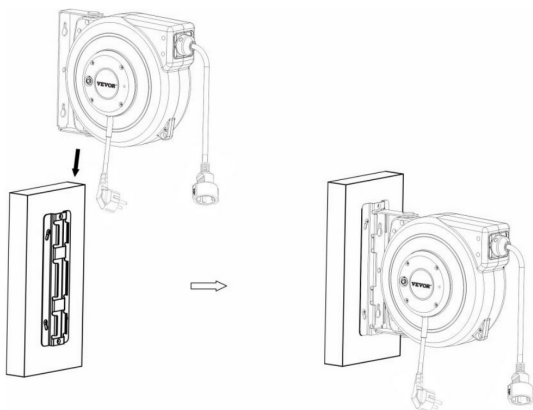 

 Slide the mounting bracket of the cord reel into the separate bracket as shown (No need to use the set screw)

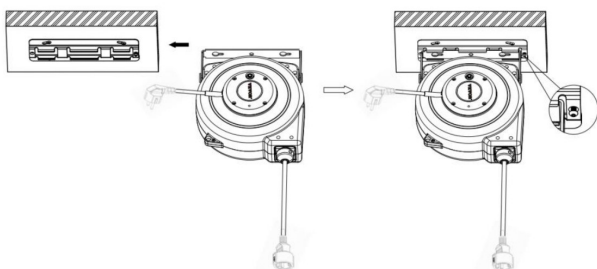

Slide the mounting bracket of the cord reel in the separate bracket as shown

Fix the set screw. (Please pay attention to the position of the set screw, do not fix it to another side or the cord reel will fall off.)



VEVOR[®]

HERRAMIENTAS RESISTENTES A MITAD DE PRECIO

Soporte técnico y certificado de garantía
electrónica www.vevor.com/support

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Wsparcie techniczne i certyfikat e-gwarancji
www.vevor.com/support

RETRACTABLE EXTENSION CORD REEL USER MANUAL

 
Nadal dokładamy wszelkich starań, aby zapewnić Państwu narzędzia w konkurencyjnej cenie. „Zaoszczędź o połowę”, „o połowę ceny” lub inne podobne wyrażenia używane przez nas przedstawiają jedynie szacunkową oszczędność, jaką możesz zyskać kupując u nas określone narzędzia w porównaniu z głównymi najlepszymi markami i niekoniecznie oznaczają uwzględnienie wszystkich kategorii oferowanych narzędzi przez nas. Przypominamy, aby podczas składania zamówienia u nas dokładnie sprawdzić, czy faktycznie oszczędzasz połowę w porównaniu z czołowymi markami.

VEVOR[®]





RETRACTABLE EXTENSION CORD REEL

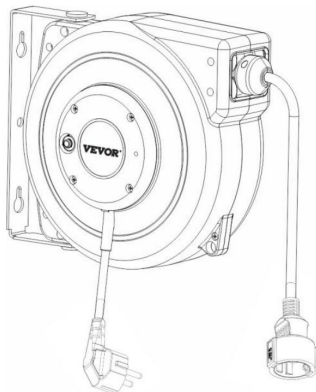ZD150 50 stóp (15 m)

ZD150 65 stóp (19,8 m)



ACCESSORIES

NO.	Part name	QTY	Remark
1	Bracket	1	
2	Expansion screw	4	
3	Wood screw	4	
4	Set screw	1	

NEED HELP? CONTACT US!

Have product questions? Need technical support?
Please feel free to contact us:

Wsparcie techniczne i certyfikat e-gwarancji www.vevor.com/support

This is the original instruction, Please read all manual instructions carefully before operating. VEVOR reserves clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there is any technology or software updates on our product.

WARNING

- ◆ **Warning: To reduce the risk of fire, electric shock or personal injury, please strictly follow the instructions.**
 - ◆ Niebezpieczeństwo: Przewód elektryczny może być niebezpieczny. Przewód elektryczny może być niebezpieczny.
1. Do not connect any devices which may exceed the maximum ratings of this cord reel.
 2. Do not try to plug it in when your hands are wet or damp.
 3. Never attempt to plug the cord reel into a non-grounded outlet.
 4. When pulling the cord from the cord reel, grasp the reel's cord itself, but not the device or tool that the cord is plugged into.
 5. Do not allow the cable to retract without restraining the retraction speed as damage or injury may occur from excessive rewind speed.
 6. Inspect before every use; do not use if parts are loose or damaged or if insulation is worn.
 7. Always unplug the retractable reel from its electrical outlet before performing any maintenance or changing accessories.
 8. Do not connect wires randomly. Connect brązowy wires with "L", niebieski wires with "N", and Chartreuse wires with "E".
 9. When automatically retracting, a slow wire collection operation may lead to stagnation. The power cord needs to be pulled out a little, then release, and use its recovered inertia to completely retract the cable.
 10. Do not disassemble the body of the reel.
 11. Children are not allowed to use the cord reel.

OPERATION

1. Plug the lead-in cord into the grounded outlet.
2. Pull cord out to the desired length. Notice a clicking noise when pulling the cord. The cord will stay at the desired length during the clicking and rewind after a pull past the clicking noise.
3. To retract, pull the cord out and guide it slowly back into the reel.

SPECIFICATIONS

Kot. NIE.:	ZD150		
Napięcie wejściowe:	AC230V, 50 Hz		
Możliwość ponownego ustawienia zabezpieczenia termicznego	@56 +/-5 °C		
Sznur:	H05VV-F 3G1,5mm2		H05VV-F 3G2,5mm2
Długość:	50 stóp (15 m)	65 stóp (19,8 m)	50 stóp (15 m)
Długość przewodu wejściowego:	3,3 stopy (1 m)		

ONE YEAR LIMITED WARRANTY


VEVOR warrants this product to be free from defects in material and workmanship for a period of one year from the date of purchase. Warranty is void if damage is caused by misuse or improper installation.

NOTE: Zobacz arkusz specyfikacji, aby zapoznać się z całkowicie rozciągniętymi długościami i różnymi rozmiarami. DO NOT keep on pulling the cord after it is fully extended.


INSTALLATION

- a. Check the wall or ceiling surface to which the retractable reel will be mounted to make sure they are sturdy enough to support the weight of the reel as well as the additional force when pulling on the outlet power cord.
 - b. Drywall will not hold the weight of the cord reel. It is necessary to locate a ceiling joist or wall stud.
1. Select a mounting location within 3,3 stopy of an electrical outlet. The outlet for a garage door opener is ideal.
 2. Locate a wall or ceiling beam (use a stud finder, if needed) and fix the separate bracket to the wall or ceiling beam with cement screws or wood screws, see Figure1.
 3. Slide the mounting bracket of the cord reel into the separate bracket, fix the set screw, see Figure 2.
 4. Adjust the cord stopper to a suitable position when required.

 
Figure 1



 
Mark with a pen according to the mounting position (Suitable for concrete materials)



 
Drill four 45-50mm deep holes with 10mm drill bits



 
Install the expansion screws into the holes



 
Install the bracket with the anchor bolt and tighten the nut



 
Install the bracket with wood screws (Suitable for wood)



 
Mark with a pen according to the mounting position (Suitable for concrete)



 Drill four 45-50mm deep holes with 10mm drill bits



 Install the expansion screws into the holes



Install the bracket with the anchor bolt and tighten the nut

Install the bracket with the wood screws (Suitable for wood)



 


Figure 2

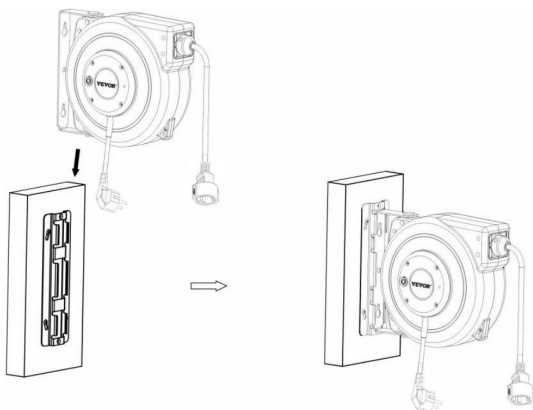 

 Slide the mounting bracket of the cord reel into the separate bracket as shown (No need to use the set screw)

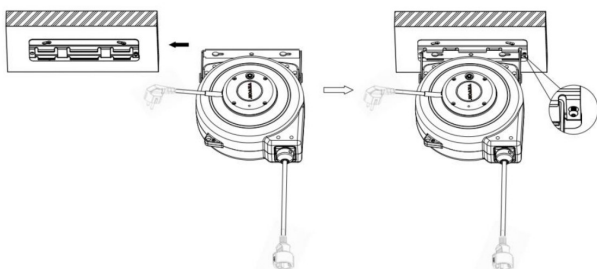

Slide the mounting bracket of the cord reel in the separate bracket as shown

Fix the set screw. (Please pay attention to the position of the set screw, do not fix it to another side or the cord reel will fall off.)



VEVOR[®]

WYTRZYMAŁE NARZĘDZIA, ZA PÓŁ CENY

Wsparcie techniczne i certyfikat e-gwarancji
www.vevor.com/support

VEVOR[®]

TOUGH TOOLS, HALF PRICE

**Technische ondersteuning en e-
garantiecertificaat www.vevor.com/support**

RETRACTABLE EXTENSION CORD REEL USER MANUAL

 
We blijven ons inzetten om u gereedschap tegen een concurrerende prijs te bieden. "Bespaar de helft", "Halve prijs" of andere soortgelijke uitdrukkingen die door ons worden gebruikt vertegenwoordigt slechts een schatting van de besparingen die u zou kunnen profiteren als u bepaalde gereedschappen bij ons koopt in vergelijking met de grote topmerken en betekent niet noodzakelijkerwijs dat deze alle categorieën van aangeboden gereedschappen omvatten door ons. Wij verzoeken u vriendelijk om bij het plaatsen van een bestelling bij ons goed na te gaan of u daadwerkelijk de helft bespaart in vergelijking met de grote topme

VEVOR[®]

RETRACTABLE EXTENSION CORD REEL

ZD150 50 voet (15 M)

ZD150 65 voet (19,8 M)

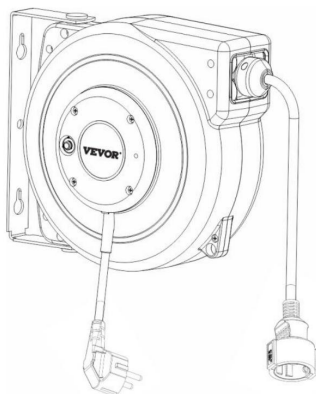

ACCESSORIES

NO.	Part name	QTY	Remark
1	Bracket	1	
2	Expansion screw	4	
3	Wood screw	4	
4	Set screw	1	

NEED HELP? CONTACT US!

Have product questions? Need technical support?
Please feel free to contact us:

Technische ondersteuning en e-garantiecertificaat www.vevor.com/support

This is the original instruction, Please read all manual instructions carefully before operating. VEVOR reserves clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there is any technology or software updates on our product.

WARNING

◆ **Warning: To reduce the risk of fire, electric shock or personal injury, please strictly follow the instructions.**

◆ Gevaar: Elektriciteitssnoer kan gevaarlijk zijn Het elektriciteitssnoer kan gevaarlijk zijn.

1. Do not connect any devices which may exceed the maximum ratings of this cord reel.
2. Do not try to plug it in when your hands are wet or damp.
3. Never attempt to plug the cord reel into a non-grounded outlet.
4. When pulling the cord from the cord reel, grasp the reel's cord itself, but not the device or tool that the cord is plugged into.
5. Do not allow the cable to retract without restraining the retraction speed as damage or injury may occur from excessive rewind speed.
6. Inspect before every use; do not use if parts are loose or damaged or if insulation is worn.
7. Always unplug the retractable reel from its electrical outlet before performing any maintenance or changing accessories.
8. Do not connect wires randomly. Connect bruin wires with "L", blauw wires with "N", and chartreuse wires with "E".
9. When automatically retracting, a slow wire collection operation may lead to stagnation. The power cord needs to be pulled out a little, then release, and use its recovered inertia to completely retract the cable.
10. Do not disassemble the body of the reel.
11. Children are not allowed to use the cord reel.

OPERATION

1. Plug the lead-in cord into the grounded outlet.
2. Pull cord out to the desired length. Notice a clicking noise when pulling the cord. The cord will stay at the desired length during the clicking and rewind after a pull past the clicking noise.
3. To retract, pull the cord out and guide it slowly back into the reel.

SPECIFICATIONS

Kat. Nee.:	ZD150		
Ingangsspanning:	AC230V, 50 Hz		
Opnieuw instelbare thermische beveiliging	@56 +/-5%		
Koord:	H05VV-F 3G1,5mm2		H05VV-F 3G2,5mm2
Lengte:	50 voet (15 M)	65 voet (19,8 M)	50 voet (15 M)
Lengte inloopsnoer:	3,3 voet (1 M)		

ONE YEAR LIMITED WARRANTY

VEVOR warrants this product to be free from defects in material and workmanship for a period of one year from the date of purchase. Warranty is void if damage is caused by misuse or improper installation.


NOTE: Zie het specificatieblad voor volledig uitgeschoven lengtes van verschillende afmetingen.

DO NOT keep on pulling the cord after it is fully extended.


INSTALLATION

- a. Check the wall or ceiling surface to which the retractable reel will be mounted to make sure they are sturdy enough to support the weight of the reel as well as the additional force when pulling on the outlet power cord.
 - b. Drywall will not hold the weight of the cord reel. It is necessary to locate a ceiling joist or wall stud.
1. Select a mounting location within 3,3 voet of an electrical outlet. The outlet for a garage door opener is ideal.
 2. Locate a wall or ceiling beam (use a stud finder, if needed) and fix the separate bracket to the wall or ceiling beam with cement screws or wood screws, see Figure 1.
 3. Slide the mounting bracket of the cord reel into the separate bracket, fix the set screw, see Figure 2.
 4. Adjust the cord stopper to a suitable position when required.

 
Figure 1



 
Mark with a pen according to the mounting position (Suitable for concrete materials)



 
Drill four 45-50mm deep holes with 10mm drill bits



 
Install the expansion screws into the holes



 
Install the bracket with the anchor bolt and tighten the nut



 
Install the bracket with wood screws (Suitable for wood)



 
Mark with a pen according to the mounting position (Suitable for concrete)



 Drill four 45-50mm deep holes with 10mm drill bits



 Install the expansion screws into the holes



Install the bracket with the anchor bolt and tighten the nut

Install the bracket with the wood screws (Suitable for wood)



 


Figure 2

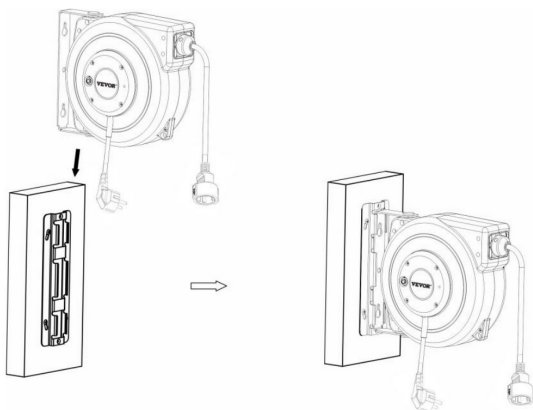 

 Slide the mounting bracket of the cord reel into the separate bracket as shown (No need to use the set screw)

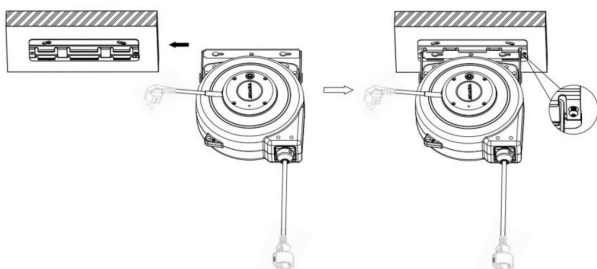

Slide the mounting bracket of the cord reel in the separate bracket as shown

Fix the set screw. (Please pay attention to the position of the set screw, do not fix it to another side or the cord reel will fall off.)



VEVOR[®]

STERK GEREEDSCHAP, HALVE PRIJS

**Technische ondersteuning en e-
garantiecertificaat www.vevor.com/support**

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Teknisk support och e-garanticertifikat
www.vevor.com/support

RETRACTABLE EXTENSION CORD REEL USER MANUAL

 
Vi fortsätter att vara engagerade i att ge dig verktyg till konkurrenskraftiga priser. "Spara hälften", "halva priset" eller andra liknande uttryck som används av oss representerar bara en uppskattning av besparingar du kan dra nytta av att köpa vissa verktyg hos oss jämfört med de stora toppmärkena och betyder inte nödvändigtvis att täcka alla kategorier av verktyg som erbjuds av oss. Du påminns vänligen om att noggrant kontrollera när du gör en beställning hos oss om du faktiskt sparar hälften i jämförelse med de främsta stora varumärkena.

VEVOR[®]





RETRACTABLE EXTENSION CORD REEL

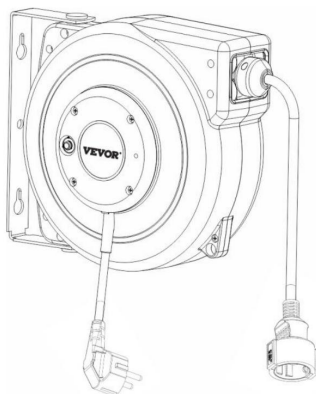ZD150 50 FT (15 M)

ZD150 65 FT (19,8 M)



ACCESSORIES

NO.	Part name	QTY	Remark
1	Bracket	1	
2	Expansion screw	4	
3	Wood screw	4	
4	Set screw	1	

NEED HELP? CONTACT US!

Have product questions? Need technical support?
Please feel free to contact us:

Teknisk support och e-garanticertifikat www.vevor.com/support

This is the original instruction, Please read all manual instructions carefully before operating. VEVOR reserves clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there is any technology or software updates on our product.

WARNING

- ◆ **Warning: To reduce the risk of fire, electric shock or personal injury, please strictly follow the instructions.**
 - ◆ Fara: Elsladden kan vara farlig Elsladden kan vara farlig.
1. Do not connect any devices which may exceed the maximum ratings of this cord reel.
 2. Do not try to plug it in when your hands are wet or damp.
 3. Never attempt to plug the cord reel into a non-grounded outlet.
 4. When pulling the cord from the cord reel, grasp the reel's cord itself, but not the device or tool that the cord is plugged into.
 5. Do not allow the cable to retract without restraining the retraction speed as damage or injury may occur from excessive rewind speed.
 6. Inspect before every use; do not use if parts are loose or damaged or if insulation is worn.
 7. Always unplug the retractable reel from its electrical outlet before performing any maintenance or changing accessories.
 8. Do not connect wires randomly. Connect brun wires with "L", blå wires with "N", and chartreuse wires with "E".
 9. When automatically retracting, a slow wire collection operation may lead to stagnation. The power cord needs to be pulled out a little, then release, and use its recovered inertia to completely retract the cable.
 10. Do not disassemble the body of the reel.
 11. Children are not allowed to use the cord reel.

OPERATION

1. Plug the lead-in cord into the grounded outlet.
2. Pull cord out to the desired length. Notice a clicking noise when pulling the cord. The cord will stay at the desired length during the clicking and rewind after a pull past the clicking noise.
3. To retract, pull the cord out and guide it slowly back into the reel.

SPECIFICATIONS

Katt. Nej.:	ZD150		
Inspänning:	AC230V, 50 Hz		
Återställbart termiskt skydd	@56 +/-5 °C		
Sladd:	H05VV-F 3G1,5mm2	H05VV-F 3G2,5mm2	
Längd:	50 FT(15 M)	65 FT(19,8 M)	50 FT(15 M)
Längd inledningsladd:	3,3 FT(1 M)		

ONE YEAR LIMITED WARRANTY


VEVOR warrants this product to be free from defects in material and workmanship for a period of one year from the date of purchase. Warranty is void if damage is caused by misuse or improper installation.

NOTE: Se specifikationsblad för helt utdragna längder av olika storlekar.
DO NOT keep on pulling the cord after it is fully extended.


INSTALLATION

- a. Check the wall or ceiling surface to which the retractable reel will be mounted to make sure they are sturdy enough to support the weight of the reel as well as the additional force when pulling on the outlet power cord.
 - b. Drywall will not hold the weight of the cord reel. It is necessary to locate a ceiling joist or wall stud.
1. Select a mounting location within 3,3 fot of an electrical outlet. The outlet for a garage door opener is ideal.
 2. Locate a wall or ceiling beam (use a stud finder, if needed) and fix the separate bracket to the wall or ceiling beam with cement screws or wood screws, see Figure1.
 3. Slide the mounting bracket of the cord reel into the separate bracket, fix the set screw, see Figure 2.
 4. Adjust the cord stopper to a suitable position when required.

 
Figure 1



 
Mark with a pen according to the mounting position (Suitable for concrete materials)



 
Drill four 45-50mm deep holes with 10mm drill bits



 
Install the expansion screws into the holes



 
Install the bracket with the anchor bolt and tighten the nut



 
Install the bracket with wood screws (Suitable for wood)



 
Mark with a pen according to the mounting position (Suitable for concrete)



 Drill four 45-50mm deep holes with 10mm drill bits



 Install the expansion screws into the holes



Install the bracket with the anchor bolt and tighten the nut

Install the bracket with the wood screws (Suitable for wood)



 


Figure 2

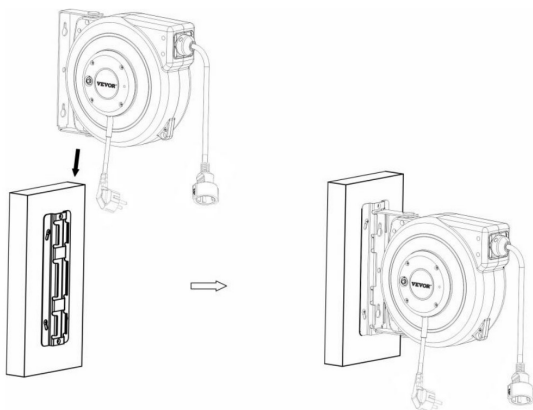 

 Slide the mounting bracket of the cord reel into the separate bracket as shown (No need to use the set screw)

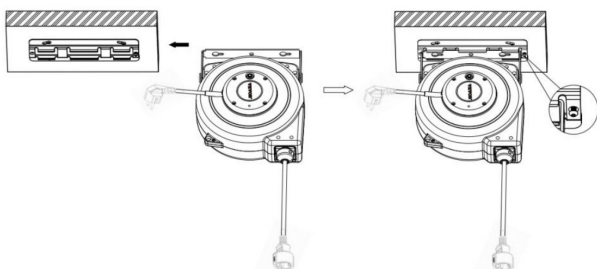

Slide the mounting bracket of the cord reel in the separate bracket as shown

Fix the set screw. (Please pay attention to the position of the set screw, do not fix it to another side or the cord reel will fall off.)



VEVOR[®]

HÅRA VERKTYG, HALVA PRISET

Teknisk support och e-garanticertifikat
www.vevor.com/support