

# **VEVOR<sup>®</sup>**

**TOUGH TOOLS, HALF PRICE**

Technical Support and E-Warranty Certificate [www.vevor.com/support](http://www.vevor.com/support)

## **ELECTRIC ICE CREAM MIXER MACHINE**

### **USER MANUAL**

**Model: XZ-620**


We continue to be committed to provide you tools with competitive price.

"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

# VEVOR<sup>®</sup>

## ELECTRIC ICE CREAM MIXER MACHINE

MODEL: XZ-620

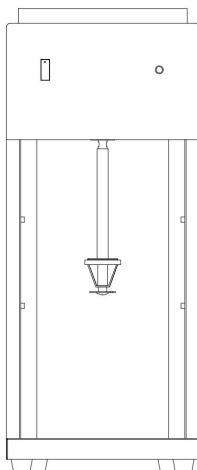



<Picture Only For Reference >

### **NEED HELP? CONTACT US!**

Have product questions? Need technical support? Please feel free to contact us:

**Technical Support and E-Warranty Certificate**  
[www.vevor.com/support](http://www.vevor.com/support)

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

	<p>Warning-To reduce the risk of injury, user must read instructions manual carefully.</p>
	<p>This product is subject to the provision of European Directive 2012/19/EC. The symbol showing a wheeled bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to a collection point for recycling electrical and electronic devices</p>

## Attentions

**It is mainly used for hard ice cream or frozen yogurt or a mixture of milk with frozen fruit. Applicable to cold drink chain stores, bars, fast food restaurants and other entertainment places.**

**Before using the Machine, please read this manual carefully and keep it properly**

1. Before using the Machine, clean it inside and outside with a damp cloth.
2. Do not fill the Machine with corrosive liquids. Do not directly pour liquids into the refrigerator.
3. When the Machine is not used for a long time, please disconnect the power supply and keep it dry.
4. Machine clean the inner chamber to prevent odor and bacteria and ensure food safety.

## Installation

1. Surface: Place the machine on a stable surface to ensure that the machine is vertically horizontal
2. Grounding: reliable grounding, according to the grounding and voltage requirements on the machine rated label

Note: stable ambient temperature, good ventilation, stable voltage, good cleaning conditions will make the machine have higher efficiency, less power consumption and longer life.

### Installation process

1) Position selection places the machine on a sufficiently stable and robust level stage to safely support its weight.

2) power suppl

a. Select the appropriate power supply according to the voltage and power on the nameplate


b. Connect the power cord and power supply to ensure that the ground wire is firmly connected to the ground wire

Note: For safety reasons, make sure the ground connection is good. All external wires and other appliances must meet national standards.

3) Water input and drainage output Put the inlet pipe into the clean and clear water, and put the drainage pipe into the drainage bucket.

## Operation

### Appearance introduction

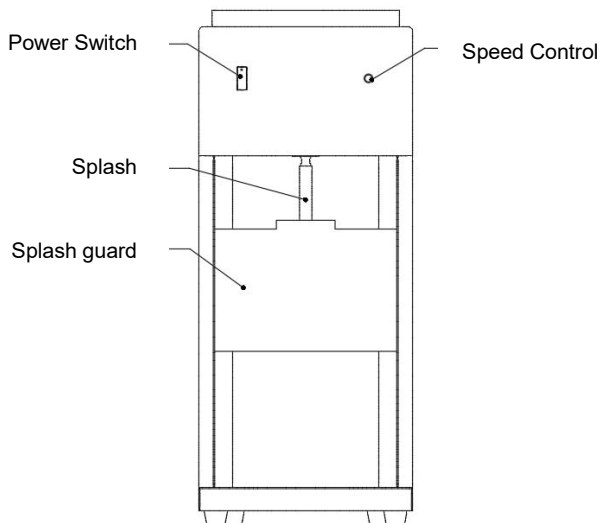

## How to use

1. Pour the ice cream (or yogurt) into a firm cup, and pour the ingredients that need to be added; 2. Put the cup on and hold the cup tightly (hold the sides instead of the bottom);
3. Place the cup under the mixing head and lift it upward until the mixing head touches the bottom of the cup;
- 4, turn on the power switch to select the required speed (speed selection knob);
- 5, according to different ingredients, generally run at low speed, and then turn to high speed;
6. During the mixing process, follow the mixing head and move the cup slowly up and down until every corner of the cup (if the ice cream is hard, it should be shaken slowly);
- 7, after finishing, use the other hand to switch the power switch to OFF, stop the operation.

## Cleaning

1. Before cleaning, please make sure that the power cord is removed and the machine is in a power off state.
- 2, with the machine configuration of the wrench, stuck on the motor shaft, counterclockwise hand turn the agitator, remove the agitator, and then clean.
- 3, when cleaning, the front end of the mixer can be removed, thoroughly cleaned, cleaned with a rag after cleaning, and then installed back on the machine to tighten.

## Troubleshooting methods

Question	Possible cause	Rx
The machine does not work	1. the voltage is too high or too low	Use the regulator
	power suppl	Insert the plug again
	The switch is broken	Change the switch

	Motor failure	Replace the motor
Often shut down	Input voltage or the Hz problem	Use the regulator
Noise and vibration	The machine floor is uneven	Place the machine on a flat and stable surface
	The parts on the machine are loose	Adjust the parts and tighten them

### Packing List

No.	Item	Qty	Remark
1	Mixer Machine	1 set	
2	Hopper	3 set	9oz、12oz、16oz
3	Manual	1 pcs	

### Safety Precautions

**Before using this machine, read the following instructions:**

**pay attention to:**

- This machine must be grounded reliably; do not share the socket with other electrical appliances.
- Check the voltage specification on the type plate corresponds to that of the energy supply.
- The machine cannot tilt by more than 10 degrees during the operation.
- When the machine is plugged in, cover the plexiglass protective cover on the machine. Do not put hands and hard objects within the mixing range of the screw separator, which may cause serious harm to the body or machine.
- The machine should be unplugged and cleaned after each use. After cleaning, wipe it with a towel. Wipe it off with a wet towel. Do not flush directly with water.

- The local machine is strictly prohibited to use by minors.

**VEVOR<sup>®</sup>**

**TOUGH TOOLS, HALF PRICE**

**Technical Support and E-Warranty Certificate**

**<https://www.vevor.com/support>**