

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate <https://www.vevor.com/support>

ULTRASONIC CLEANERS

USER MANUAL

We continue to be committed to provide you tools with competitive price.

 
"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Ultrasonic Cleaners

MODEL NO.: SJ-A1

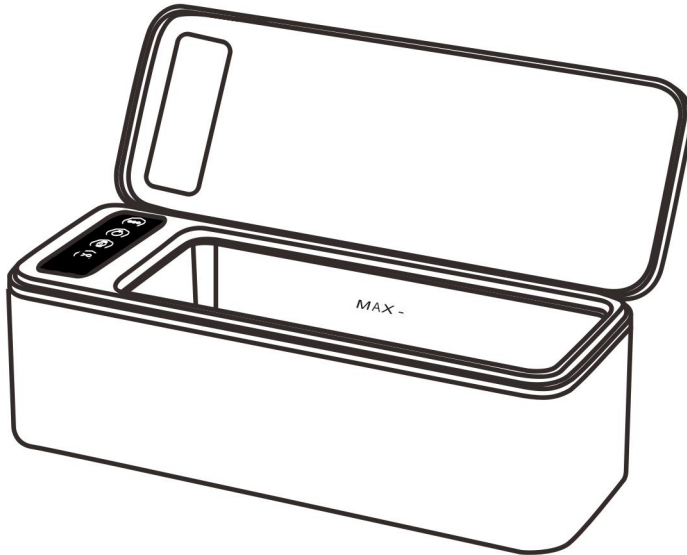

NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

Technical Support and E-Warranty Certificate
www.vevor.com/support

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

 **WARNING:**

Please read this manual carefully before using the product. Failure to do so may result in serious injury. SAVE THIS MANUAL
SAFETY PRECAUTIONS

When using electrical appliances, basic safety precautions should always be followed including the following:

Read all instructions carefully.

Keep it away from children!

This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

To avoid electrical shock:

- 1) DO NOT run the cleaner continuously for more than one hour at a time, as doing so can damage the internal components.
- 2) DO NOT operate the unit without fluid in the tank. Always ensure the fluid is no higher than the max mark, always ensure there is a minimum depth of 7cm.
- 3) DO NOT drop any item into the tank as this may cause damage to the transducer. Always place the items gently into the tank and use the basket whenever possible.
- 4) The more items that you place in your cleaning bath the less efficient it will clean. It is not advised to overlap items. Always allow plenty of clear space between the items.
- 5) Do keep the lid on during use. This will prevent splashes and reduce evaporation of the fluid.
- 6) Never immerse the machine or power cord in water or other liquid.
- 7) DO NOT touch the power plug with wet hands, especially when inserting or removing the plug.

- 8) DO NOT touch the unit if the machine has fallen into water during operation. Remove the power plug from the socket first.
- 9) DO NOT disassemble the machine, except by professionals.
- 10) UNPLUG the power source while filling or emptying the tank.
- 11) DO NOT spray water or liquid over the device and the control panel.
- 12) DO NOT operate the cleaner without proper grounding.
- 13) DO NOT place the device on a soft surface, where the vents could be blocked.
- 14) Upon completion of the cleaning cycle, turn the heater knob off and isolate the machine from the power source.
- 15) Take care when adding or removing items from the cleaning tank as the fluid is likely to be hot and displaced fluid can damage the internal components. Any displaced fluid must be dried up immediately.
- 16) In the event of a malfunction/emergency, disconnect the power supply by removing the power plug from the electrical outlet.
- 17) When heating is required, the water level should not be less than 2/3 full
- 18) If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.
- 19) The connector must be removed before the appliance is cleaned and that the appliance inlet must be dried before the appliance is used again.
- 20) This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

SAVE THESE INSTRUCTIONS

USE PRECAUTIONS

TO PREVENT SERIOUS INJURY AND DEATH FROM TIPPING:

1. **DO NOT SIT OR STAND ON THIS ITEM.**
2. When the machine is used several times continuously, in order to avoid the damage and failure of the parts caused by overheating, the machine will enter into a system of self-protection, it can be resumed after about 5 minutes.
3. Do not get water directly from the tap- Flooding of the device and power switches will lead to malfunction.
4. Do not add anti-toxic , sterilizing or acidic solvents into the cleaning water.
 - May cause deterioration of resin and damage of stainless steel.
5. Do not clean pearls and other low surface hardness articles Morse hardness of less than 8).
 - Can cause damage discoloration or loss of luster.
6. Do not wash rings , necklaces with gems and diamonds for long periods of time.
 - May cause gems / diamonds to fall off
7. **DO NOT** use the same socket as TV , radio and computer.
 - Can affect the picture clarity or cause noise.
8. Prevent the device from falling and a violent shaking- This can cause breakage deformation, and malfunction.

TECHNICAL SPECIFICATIONS

 
Model	SJ-A1
Main Material	SUS 304、ABS
Product Dimensions(L*W*H)	217*90*72 mm
Packing Size(L*W*H)	252*119*101 mm/ 296*118*101 mm
Net Weight (kg)	0.54
Gross Weight (kg)	0.65/0.67
Capacity (ml)	450

*Products such as specifications, appearance, and design are subject to modification without prior notice.

PACKAGE CONTENTS





Small cleaning basket

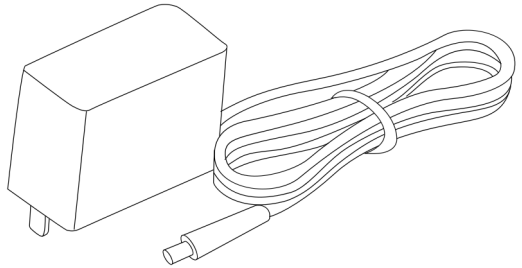

  Power adapter
(The plug is for reference only,
subject to the material object.)



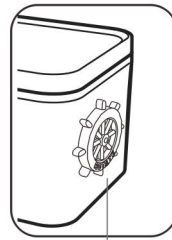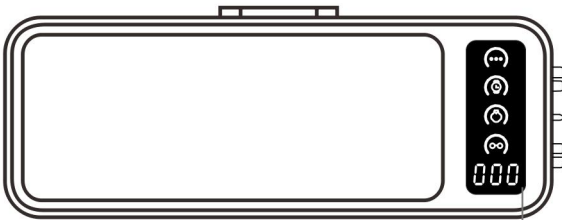


PRODUCT FUNCTIONS



- Other patterns — [Three dots icon]
- Watch mode — [Watch icon]
- Jewelry mode — [Jewelry icon]
- Glasses mode — [Glasses icon]
- Digital display — [000 display]

1. Knob adjustment time
2. Short press the power switch

Kindly reminder : When operating the machine , please ensure that yourfingers are in full contact with the touch buttons.

		Other modes works for 360S ,the indicator lights up when mode is selected.
		Watch mode works for 300 seconds, the indicator lights up when mode is selected.
		Jewelry mode works for 240 seconds , the indicator lights up when mode is selected.
		Glasses mode works for 180 seconds and the indicator lights up when mode is selected.

When you connect the power plug, the display shows "000" and the machine is in standby mode. Rotate the switch in any direction to switch the cleaning mode, and then briefly press the switch to start the work. When the machine is in working state, short press the power button to pause the cleaning mode, and the countdown of the display will pause. After the pause, the rotary switch can be operated to switch the time. Short press the power switch, and the machine will continue to work again.

ITEMS TYPE

Items can be cleaned	
Type	Specific Items
Glasses	Spectacles (without UV film) tortoise shell frame
Office supplies	Ruler , scissors , pen seal etct
Daily supplies	Toothbrush . razor blade comb etc
Jewelry	Rings , necklaces , earrings , etc
Tableware	Metal tableware.ceramic tablewaredentures . etc

Items not suitable for ultrasonic cleaning	
Type	Specific Items
Wooden articles	Turtle shell frame , pearl , birthstone opal , emerald ,

Gems with softer surfaces	coral , ivory ,emerald, stone , Lacquer ware.
Coating and finishing inferior products	
Bonded gemstones	
Items with scratches and cracks	

It may not be possible to completely remove the remaining denture stone, dental wax , wax yellow black spots and smoking dental wax etc.

Possible inability to clean fixed sedatives in dentures.

Discoloration and rust of metals and precious metals cannot be removed.

To clean bonding jewels , diamond necklaces and rings may cause them fall off.

OPERATIONS

 
 
1. Open the lid , add the clean water , put what you need to cleanse the tank , ensure the clean water is no higher than the" MAX " mark . Do not operate the unit without water in the tank.
2. Plug the adapter into the socket of the machine.
3. Plug the adapter power into the power socket.
4. Rotate the switch in any direction to switch to the desired cleaning mode, and then short press the switch to start the work.
5. If you want to pause the cleaning, you can short press the power button to pause,the countdown on the display is paused. Short press the power button again to continue working.
6. When the cleaning work is finished, please unplug the power, open the lid, take cleaned items from the tank, then pour out dirty water, clean and wipe the tank.
7. When the cleaning work is finished , please unplug the

power ,open the lid , take cleaned items from the tank , then pour out dirty water clean and wipe the tank.

Note : Pour water from the side

DAILY MAINTENANCE


1. Pour water into the tank with the measuring cup , half of tanks standard line . After washing with a soft sponge , rinse with the cleaning water.
2. Be careful not to seep water into the power connection at the bottom of the cleaning tank.

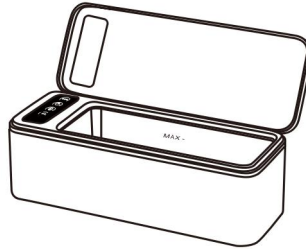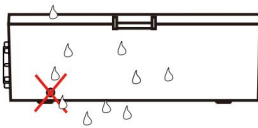

3. After cleaning , please rinse items with clean water once again Don't seep water into the power connection when cleaning.
4. When the stains are difficult to remove , please wet a clean cloth with water, then wipe them.Be careful not to seep water into the switch and power connection.
5. After wiping , dry the device with a dry cloth.



 COMPLETION

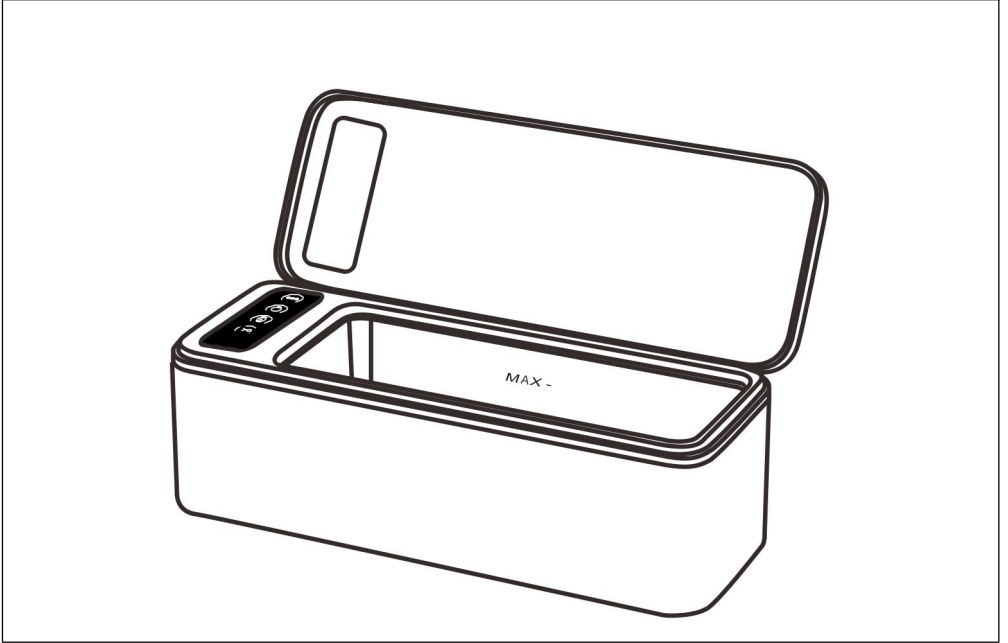

RECYCLING INFORMATION



Disposal information:

This product is subject to the provision of European Directive 2012/19/EC. The symbol showing a wheeled bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to a collection point for recycling electrical and electronic devices

Address: Baoshanqu Shuangchenglu 803long 11hao 1602A-1609shi Shanghai

Imported to AUS: SIHAO PTY LTD, 1 ROKEVA STREETEASTWOOD NSW 2122 Australia

Imported to USA: Sanven Technology Ltd., Suite 250, 9166 Anaheim Place, Rancho Cucamonga, CA 91730

EC

REP

SHUNSHUN GmbH

Römeräcker 9 Z2021,76351

Linkenheim-Hochstetten, Germany

UK

REP

Pooledas Group Ltd

Unit 5 Albert Edward House, The Pavilions

Preston, United Kingdom

Made In China

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Support and E-Warranty Certificate

www.vevor.com/support