VEVOR

Affordable. Reliable. Home Improvement.

FOOD SLICER

Model:SL-517/SL517

VEVOR Support Center

SL-517 **SL517**

VEVOR
Affordable. Reliable. Home Improvement.

FOOD SLICER

Model:SL-517/SL517



This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

IMPORTANT SAFEGUARDS

	Warning-To reduce the risk of injury, user must read instructions manual carefully.

	Keep children away from the machine for fear of danger.
	Warning- For Indoor Use Only
	CORRECT DISPOSAL This product is subject to the provision of european Directive 2012/19/EU. The symbol showing a wheelie bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to acollection point for recycling electrical and electronic devices.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed,including the following:

READ AND SAVE THESE INSTRUCTIONS

• Read all instructions before using.

• To protect against risk of electrical shock do not put power unit in water or other liquid.

• Close supervision is necessary when any appliance is used by or near children. Children should not use this appliance.

• Place On/Off switch in “OFF" position and remove cord plug from electrical outlet when not in use, before putting on or taking off parts and before cleaning. Do not pull power cord.


• Avoid contacting moving parts. Never feed food by hand. Always use completely assembled slicer with food tray and food pusher.

• Do not operate any appliance with a damaged cord or plug, after the appliance malfunctions or has been dropped or damaged in any manner. Do not service this product other than noted in this manual.
• The use of attachments not recommended or sold by manufacturer may result in injury.
• Do not use outdoors.
• Do not let cord hang over edge of table or countertop, or touch hot surfaces including the stove. Do not use an extension cord.
• Do not use appliance for other than intended use.Blade is sharp. Handle carefully when cleaning.
• The safety switch prevents accidental operation of the appliance.Do not defeat or bypass the safety switch.
• Appliance should not be used to cut frozen food or bones.
• Operate appliance only if the blade is properly locked and/or tightened.
• Always cut food with the slicer fully assembled.

THIS UNIT IS FOR, HOUSEHOLD USE ONLY

This product is not intended for commercial use. No user-serviceable parts inside. Do not attempt to service this product.

POLARIZED PLUG

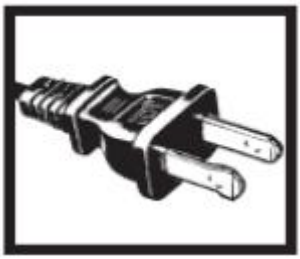

This appliance has a polarized plug,(one blade is wider than the other). As a safety feature to reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way.If the plug does not fit fully in the outlet, reverse the plug.If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature or modify the plug in any way. If the plug fits loosely into the AC outlet or if

the AC outlet feels warm do not use that outlet.

SAVE THESE INSTRUCTIONS

DO NOT IMMERSE THE CORD IN WATER OR ANY OTHER LIQUID!

SAFETY INSTRUCTIONS

• If you ignore the safety instructions the manufacturer cannot be held responsible for damage.

• If the supply cord is damaged,it must be replaced by the manufacturer its service agent,or similarly qualified persons in order to avoid a hazard.

• Do not use this appliance with a damaged cord or plug or when the appliance has malfunctions or has been damaged in any manner.To avoid a hazard, make sure that a damaged cord or plug is replaced by a competent and qualified repair service.Do not repair this appliance yourself.

• Never move the appliance by pulling the cord and make sure the cord cannot become entangled.

• The appliance must be placed on a stable,level surface.

• This appliance is only to be used for household purposes and only for its intended purpose.

• The appliance can be used by children aged from8 years and above and persons with reduced physical,sensory or mental capabilities or lack of experience and knowledge if they are under supervision and have been given instruction concerning use of the appliance in a safe way and understand the hazards involved.Children must
not play with the appliance.Cleaning and user maintenance must not be carried out by children unless they are older than 8 years old and supervised.

• To protect yourself against an electric shock,do not immerse the cord,plug or appliance in water or any other liquid.

• Switch off the appliance and unplug from the power supply before changing accessories or handling parts that move in use.

• Always unplug the device if it is left unattended and before assembling,

disassembling, or cleaning.
• Do not allow children to use the device without supervision.
• This appliance must be used with the sliding feed table and the piece holder in position unless this is not possible due to the size or shape of food.
• Avoid accidents such as trips or falls by placing the cord in a safe position.
• If an extension cord is used,its capacity needs to be suitable for the appliance's power consumption.
• Do not operate the appliance with wet hands or while standing on a wet floor.Do not touch the power plug with wet hands.
• Do not open the appliance housing under any circumstances.Do not insert any foreign objects into the interior of the housing.
• Never use accessories that are not recommended by the manufacturer.They could pose a safety risk to the user and might damage the appliance. Only use original parts and accessories.
• Keep the appliance away from any hot surfaces and open flames. Always operate the appliance on a level,stable,clean,and dry surface. Protect the appliance against heat, dust, direct sunlight, moisture, drips, and splashing water.
• Do not place heavy objects on top of the appliance. Do not place objects with open flames, e.g.candles, on top of or beside the appliance. Do not place objects filled with water, e.g.vases, on or near the appliance.
• Do not pull the power cord to remove the plug from the electrical outlet and do not wrap the power cord around the appliance.
• Unplug the appliance from the electrical outlet when not in use and before cleaning.
• Switch off the appliance before changing accessories or handling parts that move during use.
• If the appliance should overheat, stop using the appliance and unplug from its electrical outlet.
• Never leave the appliance unattended during use.
• Dry the appliance and all accessories before connecting to the power


supply and prior to attaching the accessories.
• Always turn the appliance off before disconnecting the power plug.
• Clean the appliance thoroughly prior to using it.
• During operation keep hands,hair clothing,and utensils away from the cutting blade to avoid injuries and damage to the appliance.
• The appliance is only intended for short term operation. After an operation time of 5 minutes let it cool for at least 30 minutes. Do not overload the

SPECIFICATION

Model	SL-517/SL517
Rated Power	150W
Rated Input	AC 120V 60Hz 220-240V 50/60Hz

PARTS DESCRIPTION

1	Support Plate
2	Blade
3	Blade Locking Screw
4	Power Cord
5	Base Assembly
6	Food Carriage
7	Slicing Guard
8	On/Off switch
9	Thickness Adjustment Knob
10	Motor Assembly

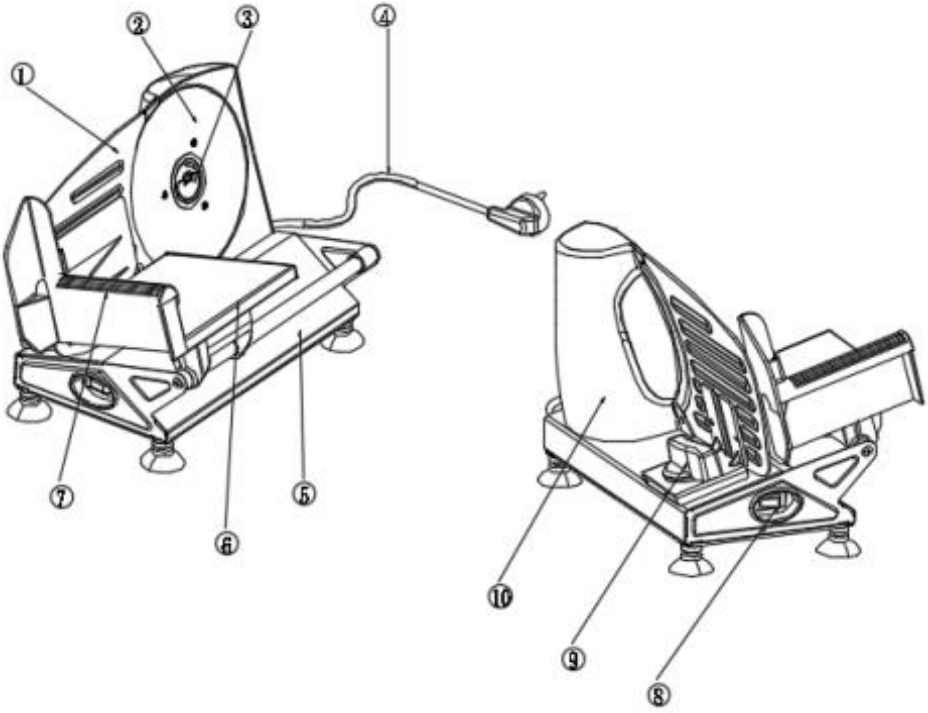

Take the appliance and accessories out of the box.Remove the stickers,protective foil or plastic from the device.

Check for the presence of all parts and for transport damage.In case of damages or incomplete delivery,please contact your dealer.

Put the power cable into the socket.(**Note:**Make sure the voltage which is indicated on the device matches the local voltage before connecting the device. Voltage AC220-240V 50/60Hz(AC 120V 60Hz) 150W.

Before using your appliance for the first time,wipe all removable parts with a damp cloth.Never use abrasive products.

Clean the whole appliance (see the cleaning section).

Place the appliance on a dry, flat, and stable surface.

Apply downward pressure onto the appliance so that the suction feet(7)get a good grip.

BEFORE THE FIRST USE

Use the setting button to choose the desired cutting width.
The cutting width is adjustable from 1 to 15mm. Slide the cradle to the left and place the food on the cradle.
Place the holder on the cradle;use this holder to push the food slightly against the back cover.
Activate the device by using the on/off switch which is located on the left side of the device.
NOTE: This appliance is equipped with a safety yourself then push simultaneously the on/off
switch and the appliance will start.By pushing the switch (A),first bring the safety switch towards on/off switch again the appliance will stop.
WARNING!Do not touch the blade,the blade is very sharp and can cause severe injury.
rotating blade. Catch the sliced food at the back of the device.
WARNING! Never use the device without the guard,you can seriously injure yourself.
When turning off the device the blade keeps turning for a while,so do not touch it.After 5 minutes of continued use,turn off the device and allow it to cool down,to prevent overheating of the motor.

CLEANING AND MAINTENANCE

Unplug the appliance and allow it to cool down. Use a soft,slightly damp cloth to wipe appliance surfaces.Do not allow water or any other liquid to get into the unit.
Before removing the blades,disconnect the power plug.
WARNING! Never touch the edges of the blades!Make sure the removed cutting knife cannot roll off the table!
Now you can clean the blade in soapy water,the blade is also dishwasher safe.
To put the cutting blade back into position,make sure the tabs on the blade match up to the appliance and put on the blade,lock the blade by turning the latch counterclockwise.

CLEANING THE TIE ROD AND BLADE GUARD

To disassemble the tie rod and blade guard:At the right side of the tie rod,you will find a hatch,slide this hatch to the right now you can take out the rod and you will be able to clean these parts.

WARNING!

Packaging materials are not toys. Children should not play with the packaging materials as they pose a risk of swallowing and suffocation!

USE

Use the setting button to choose the desired cutting width.
The cutting width is adjustable from 1 to 15 mm. Slide the cradle to the left and place the food on the cradle.
Place the holder on the cradle;use this holder to push the food slightly against the back cover.
Activate the device by using the on/off switch which is located on the left side of the device.
NOTE: This appliance is equipped with a safety switch (A),first bring the safety switch towards yourself then push simultaneously the on/off switch and the appliance will start.By pushing the on/off switch again the appliance will stop.
WARNING!Do not touch the blade,the blade is very sharp and can cause severe injury.
Slide the tray slowly to the right against the rotating blade.Catch the sliced food at the back of the device.
WARNING! Never use the device without the guard,you can seriously injure yourself.

PLEASE NOTE THAT:

This appliance is only suitable for slicing food e.g. meats, cheeses,fruits, vegetables,breads,etc.The food to be sliced must be defrosted,unpackaged and deboned before it can be sliced with the appliance. Do not use it for slicing frozen food,bones, or for any other

purpose.
This appliance is only suitable for private household use and it is not designed for commercial purposes.
This appliance is intended for dry indoor use only. Do not use the appliance outdoors.

HOT ROASTS — BEEF, PORK, LAMB, TURKEY, HAM

When slicing boneless roasts,remove from the oven and allow to cool for 15-20 minutes before
Cut the roast,if necessary,to fit onto the platform. Place foil underneath the platform table to catch juices and crumbs for easy cleanup(and treating yourself with the best pieces).
For rolled or tied roast,remove strings one at a time as the strings become closer to the blade (make sure the appliance is off).

CHEESE

Slice while well chilled.
serving,allow the cheese to reach room temperature.This will enhance the natural flavour. Some processed cheese may stick to the blade.
When necessary,turn the appliance off,wait for the blade to stop turning,and remove the plug. Wipe the blade with a damp cloth since moisture will help prevent the blade from sticking.

BACK BACON

Chill thoroughly before slicing. Some types of smoked bacon should have the fat removed.

COLD CUTS AND SANDWICH MEAT

Cold cuts of meat will last longer and will retain flavour longer if sliced when needed.
For best results,chill first.
Remove any plastic or hard casing before slicing. Use a constant,gentle

pressure for uniform slices.

FRUITS AND VEGETABLES

Slice potatoes for thick or thin chips.
Slice carrots lengthwise in very thin strips. Soak in ice water to curl.Slice zucchini, eggplant, and squash.

BACK BACON

Chill thoroughly before slicing. Some types of smoked bacon should have the fat removed.

Cold Cuts and Sandwich Meat

Cold cuts of meat will last longer and will retain flavour longer if sliced when needed.
For best results,chill first. Remove any plastic or hard casing before slicing. Use a constant,gentle pressure for uniform slices.

FRUITS AND VEGETABLES

Slice potatoes for thick or thin chips.
Slice carrots lengthwise in very thin strips.Soak in ice water to curl.
Slice zucchini, eggplant, and squash.

CLEANING AND MAINTENANCE

Unplug the appliance and allow it to cool down. Use a soft,slightly damp cloth to wipe appliance surfaces.Do not allow water or any other liquid to get into the unit.

REMOVE THE CUTTING BLADE

Before removing the blades,disconnect the power plug.

WARNING! Never touch the edges of the blades! Make sure the removed cutting knife cannot roll off the table!Keep children at a safe distance! To remove the cutting blade.Push the ‘push button' in the middle of the

cutting blade, a latch will come out;turn the latch clockwise to unlock the cutting blade.
Now you can clean the blade in soapy water,the blade is also dishwasher safe.
To put the cutting blade back into position,make sure the tabs on the blade match up to the appliance and put on the blade,lock the blade by turning the latch counter-clockwise

CLEANING THE TIE ROD AND BLADE GUARD

To disassemble the tie rod and blade guard: At the right side of the tie rod,you will find a hatch, slide this hatch to the right now you can take out the rod and you will be able to clean these parts.

PARTS	HOW TO CLEAN THEM?
Food holder	Remove and clean with soapy water. Rinse under tap water and dry thoroughly.
Sliding platform	Wipe with a soft cloth damped with some dish washing liquid.
Sliding food guide	Wipe with a clean cloth and dry thoroughly. Do not immerse in water or other liquids!

STORAGE AND DISPOSAL

STORAGE:

Store the appliance in a cool,dry,and clean place, out of the reach of children and pets.
Please keep the packaging for transporting the appliance or for storing your appliance when not in use for a prolonged time period.

PRODUCT DISPOSAL:

This product may not be disposed of with ordinary household waste,as electrical and electronic waste must be disposed of separately.

