VEVOR

Affordable. Reliable. Home Improvement.

COUNTERTOP PIZZA OVEN

MODEL: PSL-12/PSL-12-EU/PSL-16


VEVOR Support Center

PSL-12 **PSL-12-EU** **PSL-16**

VEVOR
Affordable. Reliable. Home Improvement.

COUNTERTOP PIZZA OVEN

MODEL: PSL-12/PSL-12-EU/PSL-16

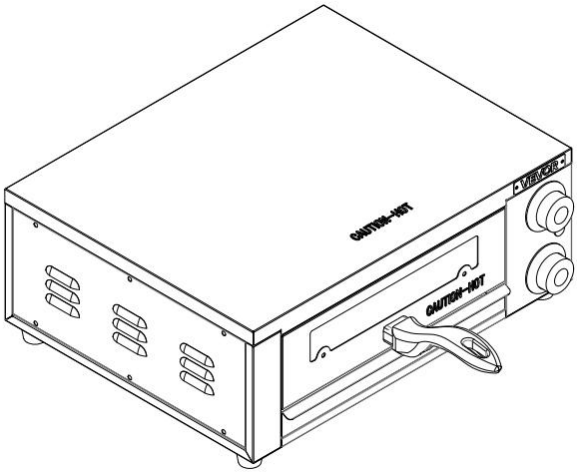

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

IMPORTANT SAFEGUARDS

	Warning-To reduce the risk of injury, user must read instructions manual carefully.
	Keep children away from the machine for fear of danger.

	This product is subject to the provision of European Directive 2012/19/EC. The symbol showing a wheelie bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to a collection point for recycling electrical and electronic devices
	Surface are liable to get hot during use.

Important safety instructions

Before using this product, please read the safety instructions carefully and operate in accordance with the regulations:

1. Please read carefully before use
2. This equipment must use a socket with a safety ground!
3. For commercial use only!
4. Do not touch the heating surface!
5. To prevent electric shock, please ensure that the power cord, plug and other electrical components do not come into contact with water or other liquids!
6. Please disconnect the plug before cleaning!
7. Before loading or unloading parts, please let the appliance cool down to prevent burns!
8. Do not use electrical appliances if the power cord is damaged!
9. Do not use the machine if it is damaged or malfunctions!
10. Not suitable for outdoor use!
11. Do not place it near electrical appliances or gas heat sources!
12. Turn off the thermostat and timer first, and then unplug it!
13. Do not use electrical appliances for purposes other than those for

which they were designed!
14. Do not put metal objects or oversized food in the pizza oven, as it may cause fire alarms and electrical short circuits!
15. Do not place task items on the top of the pizza oven during use!
16. Do not let the pizza oven come into contact with any flammable materials during use, such as curtains, rags, wooden boards, etc.!
17. Do not use gold-based rags to clean the pizza oven, as they may touch electrical components and cause an electric shock!
18. Never put paper, cardboard or plastic in the pizza oven!
19. Do not wrap the inner pot with tin foil, as it may cause overheating!
20. Resetting the timer to zero can cut off the power of the pizza oven!
21. Note: Parts not recommended by the manufacturer may cause damage to the pizza oven!
22. Children over eight years old or people with disabilities can use this pizza oven under correct guidance and supervision and fully understand the dangers of use. Do not let children use the pizza oven as a toy. Children cannot use it without supervision. Clean or maintain this pizza oven!
23. If the power cord is damaged, you must contact the manufacturer or after-sales agency for replacement to avoid possible dangers. The bread may be burnt or even catch fire, so do not let the pizza oven near flammable objects such as curtains!
24. When using the pizza oven in public places such as shops, fast food restaurants, hotels, etc., check the voltage and socket to ensure that it matches the electrical specifications of the pizza oven!
25. Place the pizza oven on a horizontal surface to allow for air flow. Please pay attention during use. Do not leave the pizza oven unsupervised while it is working!
26. Please unplug the plug before cleaning, and wipe the plug dry before plugging it back in to prevent ignition and short circuit.
27. It is normal for the door and shell of the pizza oven to heat up during use. Please pay attention to safety and avoid burns.
Instructions before use:

Assembly Instructions

1. Ensure that there is at least 12" of clearance on all sides, including the top and back of the unit.
2. The oven should be installed on a flat,sturdy surface.
3. Be sure that the unit is only plugged into a NEMA 1-15P out let to minimize shock or fire hazard.
4.Remove all the packing materials.
5.Door assembly detail as below 3 pictures show:

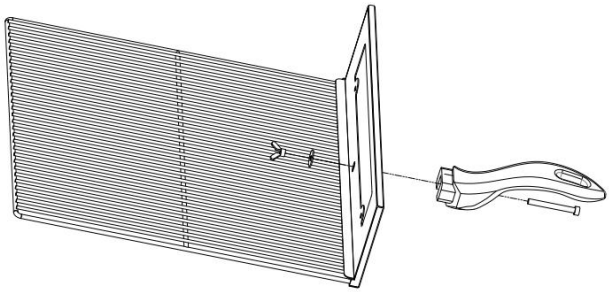


FIG.1

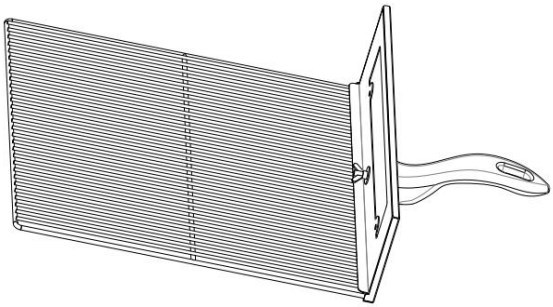


FIG.2

PLEASE NOTE: Improper assembly of the handle to the grill could cause the handle to turn or fall off when moving product, Always strengthen the nut of door handle before use,possibly causing injury or burns.

Before Using Your Oven

Using a small amount of detergent, wash the rack with soapy water. (NOTE: Do not use a spray or abrasive polishing agent.)Gently wipe down interior walls with a damp cloth. While washing this unit, do not touch the electric heating element. Do not soak the inside of the oven with water.
After cleaning as noted above, close the door and set timer for 5 minutes. After the timer has reset to zero, open the oven door in order to remove any smoky residue from inside the oven. The heating elements are well lubricated and this initial use will help burn off the extra grease. A light amount of smoke is normal during this process.

Usage Instructions

1. Plug in the unit. The oven requires no preheating.
2. Set the desired temperature using the thermostatic controls (150 degrees Fahrenheit- 575 degrees Fahrenheit).
IMPORTANT:MAINTAIN CONSTANT SUPERVISION OF THE OVEN WHILE IN USE!
3. Caution should be used when removing food from the oven.Oven mitts or other protective gear should be used to avoid skin contact with the hot panel.
4. Unplug the oven when not in use.
5.To create a continuous baking temperature,Timer only controls the Interior Light and will not shut down the unit.When the timer is in working status,interior light will come on.When timer is off,the interior Light will go off.
6.Temperature is controlled by the thermostat knob and suggesting temperature to cook frozen pizza is 500˚ F (260˚ C) and 575˚ F (300˚ C),depending on the individual product.We recommend to cook pizzas at 525°F for 4-6 minutes each for proper leoparding on the crusts, but individual results may vary depending on a variety of factors including,but not limited to:

pizza diameter, thickness, environment, etc.

Cleaning Instructions

NOTE: To maintain cleanliness and increase life of the unit, the oven should be cleaned daily. Do not immerse the unit in water or any other liquid. If liquid enters the electrical components of the unit, it may cause a short circuit or electrical shock.

Use caution while cleaning as there may be sharp edges on or inside of the unit.

1.Allow unit to completely cool before cleaning.

2.Disconnect the cord from the outlet.

3.Slide out the crumb tray and remove any food debris or other soil.

4.Wipe the crumb tray with a damp cloth.

5.Return the crumb tray to its proper position.

6.Wipe the outside of the unit with a damp cloth, then wipe dry. To avoid damage, do not use abrasive cleaners or scouring pads. If soap or chemical cleaners are used, be sure they are completely rinsed away with clear water immediately after cleaning.Chemical residue could damage or corrode the surface of the unit.

