

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate www.vevor.com/support

ARTIFICIAL IVY FENCE

We continue to be committed to provide you tools with competitive price. "Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

MODEL:JNF01201/JNF01202/JNF010/JNF009/JNF008/JNF007/JNF013
/JNF006/JNF011/JNF015



NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

Technical Support and E-Warranty Certificate
www.vevor.com/support

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

【 Catalogue 】

1. Technical Parameters
2. Safety Precautions
3. Instructions for Use

1. Technical Parameters

Model	Product Size(inch)	Product Weight(kg)
JNF01202	39"x98"	1.25
JNF01201	39"x98"	1.45
JNF013	59"x98"	1.85
JNF011	96"x72"	2.66
JNF010	39"x158"	2.35
JNF009	39"x198"	2.95
JNF008	59"x98"	2.16
JNF007	59"x118"	2.55
JNF006	59"x158"	3.46
JNF015	96"x72"	2.26

2. Safety Precautions

WARNING:

Read this material before using this product. Failure to do so can result in serious injury. SAVE THIS MANUAL

Assembly Precautions

1. Assemble only according to these instructions. Improper assembly can create hazards.
2. Wear ANSI-approved safety goggles and heavy-duty work gloves during assembly.
3. Keep the assembly area clean and well-lit.
4. Keep bystanders out of the area during assembly.
5. Do not assemble when tired or under the influence of alcohol, drugs or

medication.

6. Product capabilities apply to correctly and completely assembled products only.


Use Precautions

1. Do not sit or stand on this item .
2. This product is not a toy. Therefore, do not allow children to play with this item .
3. Use as intended only.

3. Instructions for Use

Assembly(No tools required)


1. Observe the direction of the foliage
-Boxwood & Fern : Multi-directional
-ivy & Lavender. Follow the direction of the foliage.
2. Connect panels using the easy snap-to-lock system.
3. For simple and quick installation, from strips 2 panels wide by the desired height.

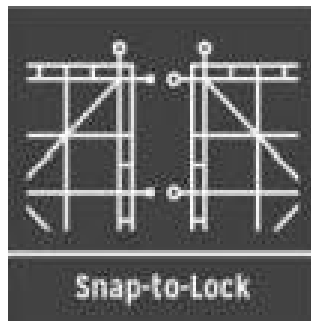

Chain Link, Wire Mesh & Wrought Iron

Tools: Green zip ties(Not Included)


1. Fasten the first panel or connected set or panels directly to the support.
2. Repeat progressing laterally (clip panel sections together before fastening to the support for a perfect fit.)

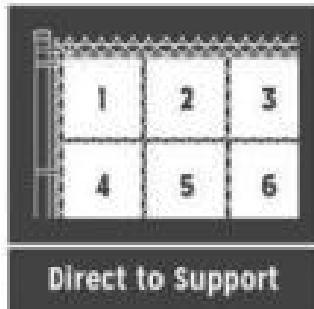

Drywall and Wood

Tools: 1/2in.*1/2in. Crown 20 Gouge Staples & Stapler (Not Included)

1. Fasten the first panel or connected panels directly to the top of the wall or service. Use additional staples on the top panel in each column hung.
2. Place 2 Staples on the edges of each panel, making your way down to the bottom panel.
3. Repeat progressing laterally (clip panel sections together before fastening to the support for a perfect fit.)

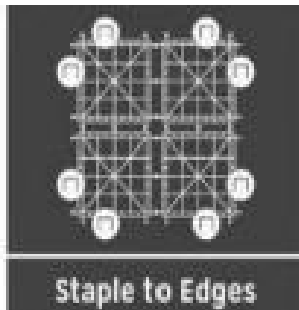

Concrete, Brick or Block

Tools: 3/16 in.*13/4 in. Washer Head Concrete Screw Anchors, Drill Bit & Drill (Not Included)

1. Hold a single panel in place at the top of the wall or surface. Then, using your drill and drill bit, drill one hole in the top left & suitable square holes found on the backing grid of the panel. Drill each hole approximately 1/4 inch deeper than the anchor screw being used.
2. Screw a washer head concrete anchor in each hole, securing the panel to the surface.


3. Repeat processing downward til a single column is complete ensuring the panels are securely fastened as you progress. 4. Repeat steps 1-3 until your installation is complete.



Metal/Aluminum

Tools: 3/4 in. Truss Head Self-Tapping Screws & Drill (Not Included)

1. Hold a single panel in place at the top of the wall or surface. Using your drill and 3/4 in self-tapping screws, place a screw in the top left & suitable square holes found on the backing grid of the panel.
2. Repeat processing downward til a single column is complete ensuring the panels are securely fastened as you progress.
3. Repeat steps 1 & 2 till your installation is complete.

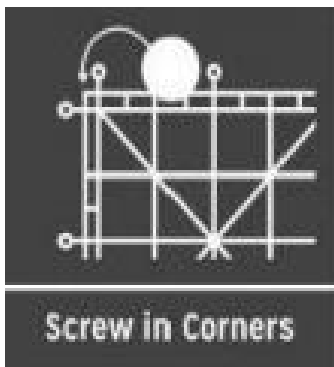

Manufacturer: Shanghai muxinmuyeyouxiangongsi

Address: Shuangchenglu 803nong11hao1602A-1609shi, baoshanqu, shanghai 200000 CN.

Imported to AUS: SIHAO PTY LTD. 1 ROKEVA STREET EASTWOOD NSW 2122 Australia

Imported to USA: Sanven Technology Ltd. Suite 250, 9166 Anaheim Place, Rancho Cucamonga, CA 91730

EC	REP
-----------	------------

E-CrossStu GmbH
Mainzer Landstr.69, 60329 Frankfurt am Main.

UK	REP
-----------	------------

YH CONSULTING LIMITED.
C/O YH Consulting Limited Office 147, Centurion House, London Road, Staines-upon-Thames, Surrey, TW18 4AX

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate

www.vevor.com/support