

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate www.vevor.com/support

WATERPROOF SHOWER SUBSTRATE

MODEL:

JQ-3860PA/JQ-3860ZA/JQ-3860ZP/JQ3860PP

JQ-4848AJQ-4848P/JQ-4860A/JQ-4860P

JQ-4872A/JQ*4872P/JQ-7272A/JQ-7272P

We continue to be committed to provide you tools with competitive price.


"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and dose not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

VEVOR®

TOUGH TOOLS, HALF PRICE

WATERPROOF SHOWER
SUBSTRATE

MODEL: JQ-3860PA/JQ-3860ZA/JQ-3860ZP/JQ3860PP
JQ-4848AJQ-4848P/JQ-4860A/JQ-4860P
JQ-4872A/JQ*4872P/JQ-7272A/JQ-7272P

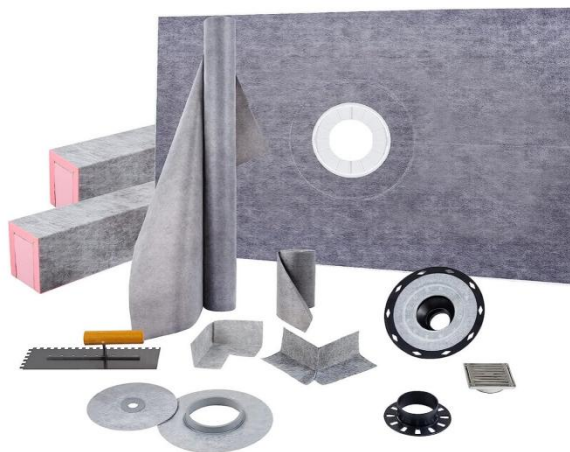

NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

Technical Support and E-Warranty Certificate
www.vevor.com/support

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.



Warning-To reduce the risk of injury, user must read instructions manual carefully.



Code	Name	QTY.	Code	Name	QTY.
A	Shower Curb	2	G	Waterproofng Corners 1	4
B	Waterproofng Membrane	1	H	Waterproofng Strip	1
C	Tray	1	I	Waterproofing Corners 2	2
D	Trowel	1	J	Drain Adjustment Ring	1

E	Mixing Valve Seal	1	K	Bonding Flange	1
F	Pipe Seal	1	L	Drain Grate	1

◆The number of Waterproofng strips (H) of JQ-7272A and JQ-7272P are 2pcs.

Ceramic and stone tiles are durable, easy to maintain, and hygienic, representing the ideal surface coverings, particularly in wet areas such as showers and bathtub surrounds.

However, these coverings are not inherently waterproof. They must be installed in conjunction with a waterproofing system that effectively manages moisture to protect moisture-sensitive building materials and control mold growth.

Model	Specification (inch)	Colour	Flange Material	Shower Tray Hole
JQ-3860PA	38*60	Gray	ABS	Offset
JQ-3860ZA	38*60		ABS	Centre
JQ-3860ZP	38*60		PVC	Centre
JQ3860PP	38*60		PVC	Offset
JQ-4848A	48*48		ABS	Centre
JQ-4848P	48*48		PVC	Centre
JQ-4860A	48*60		ABS	Centre
JQ-4860P	48*60		PVC	Centre
JQ-4872A	48*72		ABS	Centre
JQ-4872P	48*72		PVC	Centre
JQ-7272A	72*72		ABS	Centre
JQ-7272P	72*72		PVC	Centre

INSTALLATION STEPS

◆ Clean any dust or other debris from the surface of the solid backing.
Dampen particularly dry and porous substrates in order to help prevent premature drying or skinning of the thin-set mortar.

Step 1:

	
Prepare mortar	Brush the mortar
	
Cover the membrane	Trim the membrane
	
Make it even	Finish covering the membrane

Step 2:



Cover the waterproofing strip on the corner



Trim the strip



Brush the mortar



Cover the waterproofing strip on the joint



Trim the strip



Make the wall surface even

Step 3:



Cover the mixing valve seal



Make the surface even

Step 4:



Unfold the tray



Embed the tray in the mortar

Step 5:



Brush the mortar





Install the waterproofing corners 1






Trim the corner

Step 6:








Brush the mortar	Cover the waterproofing strip
	
Make the surface even	

Step 7:



	
Brush the mortar	Cover the pipe seal
	Trim the pipe seal

Step 8:




	
--	--

<p>Brush the mortar</p>	<p>Press the bonding flange into the mortar</p>
	
<p>Rotate the flange to fix it firmly</p>	<p>Brush the mortar around</p>
	
<p>Trim the surface</p>	<p>Cover the waterproofing membrane</p>
	<p>Make the surface even</p>



Step 9:

	
<p>Install the drain adjustment ring</p>	<p>Ensure full coverage</p>



Step 10:

	
Brush the mortar	Press the curb
	Fix the curb firmly

Step 11:

	
Brush the mortar	Cover the waterproofing corners 2
	Trim the corner

Step 12:

	
Cover the waterproofing strip	Trim the strip

Installation of waterproof system is completed.

Manufacturer: Shanghaimuxinmuyeyouxiangongsi

Address: Shuangchenglu 803nong11hao1602A-1609shi, baoshanqu, shanghai 200000 CN.

Imported to AUS: SIHAO PTY LTD. 1 ROKEVA STREETEASTWOOD NSW 2122 Australia

Imported to USA: Sanven Technology Ltd. Suite 250, 9166 Anaheim Place, Rancho Cucamonga, CA 91730

EC	REP
-----------	------------

E-CrossStu GmbH
Mainzer Landstr.69, 60329 Frankfurt am Main.

UK	REP
-----------	------------

YH CONSULTING LIMITED.
C/O YH Consulting Limited Office 147, Centurion House, London Road, Staines-upon-Thames, Surrey, TW18 4AX

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate

www.vevor.com/support