

Technical Support and E-Warranty Certificate www.vevor.com/support

DOUBLE-HANDED CARRY CLAMPS USER MANUAL

MODEL: GM-2/GM-2(H)

We continue to be committed to provide you tools with competitive price.

"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.



DOUBLE-HANDED CARRY CLAMPS

MODEL: GM-2/GM-2(H)



(The picture is for reference only, please refer to the actual object)

NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

Technical Support and E-Warranty Certificate www.vevor.com/support

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

SAFETY INSTRUCTION AND PRECAUTIONS

AWARNING:

Read this material before using this product. Failure to do so can result in serious injury.

- 1. This product is not a toy. Do not allow children to play with this item.
- 2. Use as intended only.
- 3. Make sure the handle is not loose before each use.
- 4. Do not exceed the listed weight capacity.
- 5. Double Hand Carrying Device should be used on non-porous or rough flat panel materials.
- 6. Double Hand Carrying Device can only be operated by hand lifting.
- 7. When serving, use only identical replacement parts. Use of any other parts will avoid the warranty.
- 8. Check for damaged parts. Before using, any part that appears damaged should be carefully checked to determine that it will operate properly and perform its intended function and the surface of rubber pads should be cleaned up without dirt.
- 9. When not in use, product should be stored in a dry, not high temperature, without direct sun shining location to inhibit rust and wear out.

Operation Direction:

- 1. The principle of operation is by lever and hand lifting.
- 2. Carrying aid made of aluminium, for transporting all materials such as kitchen counters or dry wall sheets, especially good for glass and stone carrying.
- 3. Loaded Surface need to be relatively, and non-porous or rough flat panel materials both can use.
- 4. The heavier the load, the stronger the clamping action.
- 5. The load is held firmly between two non-slip, rubber-lined clamps.


OPERATION AS BELOW



1. Open the Double Hand Carrying Device carton box and check the product and accessories are intact.



2. The Double Hand Carrying Device must be controlled by 2 guys per pair.

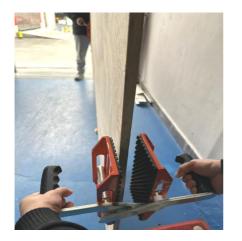

3. When use, open the mouth of the device and clamp the materials of both side till to the botton of mouth.



4.After the transportation process is completed, put down the materials and hold, then the mouth of the device will be open, so that you can remove the device.

	Items	Description
1	Name	Double-handed carry clamps
2	Model	GM-2
3	Parameter	Thickness of clamping: 0-50mm
		Load-bearing: 200kg

	Items	Description
1	Name	Double-handed carry clamps
2	Model	GM-2 (H)
3	Parameter	Thickness of clamping: 0-60mm
		Load-bearing: 250kg

Manufacturer: Shanghaimuxinmuyeyouxiangongsi

Address: Shuangchenglu 803nong11hao1602A-1609shi, baoshanqu,

shanghai 200000 CN.

Imported to AUS: SIHAO PTY LTD. 1 ROKEVA STREETEASTWOOD

NSW 2122 Australia

Imported to USA: Sanven Technology Ltd. Suite 250, 9166 Anaheim

Place, Rancho Cucamonga, CA 91730

EC REP

E-CrossStu GmbH Mainzer Landstr.69, 60329 Frankfurt am Main.

UK REP

YH CONSULTING LIMITED.

C/O YH Consulting Limited Office 147, Centurion House, London Road, Staines-upon-Thames, Surrey, TW18 4AX



Technical Support and E-Warranty Certificate www.vevor.com/support