

Technical Support and E-Warranty Certicate www.vevor.com/support

# Thermal Image Camera

MODEL: HT-W01

We continue to be committed to provide you tools with competitive price.

"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us.

You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.



#### Thermal Image Camera

MODEL: HT-W01



#### **NEED HELP? CONTACT US!**

Have product questions? Need technical support? Please feel free to contact us:

## Technical Support and E-Warranty Certificate www.vevor.com/support

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

## Content

1. Cautions ————————	1
2. Product Summary ———————	1
2.1 Application Scenes	1
2.2 Major Functions ————————	2
3. Product Structures	3
3.1 Structure Introduction ———————	3
3.2 Description of Indicators ——————	3
4. Product Application ———————	4
4.1 Equipment Power On ———————	4
4.2 Equipment Power Off ———————	4
4.3 Equipment Charging ———————	4
4.4 Equipment Connection ———————	4
5. Software Operation ———————	6
5.1 Software Interface ———————	6
5.2 Library, Photography and Video Recording	7
5.3 Shutter Refreshing ——————	7
5.4 Temperature Measurement Analysis —————	8
5.5 Color Palette	10
5.6 Temperature Measurement Setting	12
5.7 Setting ————————	.———- 12
6 Technical Parameters	13

## 1. Precautions


Please read all the following information before using your device to protect you and others from injury or damage to your device.

- (1) Do not expose the product in the sun and other high-intensity radiation sources
- (2) Do not touch or collide the detector window and lens with hands or other objects;
- (3) Do not touch the device and USB interface with wet hands;
- (4) Do not scrub your equipment with thinner;
- (5) Please pay attention to preventing static electricity;
- (6) Do not disassemble the equipment. If there is any fault, please contact our company for repair by professional personnel.

## 2. Product Summary

#### 2.1 Application scenes

To use this mobile phone infrared thermal imager, you need to download and install the mobile phone infrared thermal imager "HT-W01 Wireless WIFI Mobile Thermal Imager" APP. Through this APP, you can achieve infrared observation and temperature measurement functions.

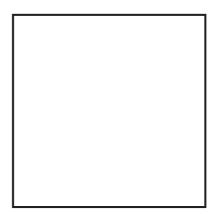

Scan QR code to download the App


## 2.2 Major functions

The following functions are to be achieved:

- (1) Open the applied software for mobile phone infrared thermal imager to achieve infrared observation and measurement;
- (2) to perform infrared temperature measurement, and temperature analysis;
- (3) shooting and video recording;
- (4) motion control and parameter setting for your mobile phone infrared thermal imager.

## 3. Product structures

#### 3.1 Structure introduction

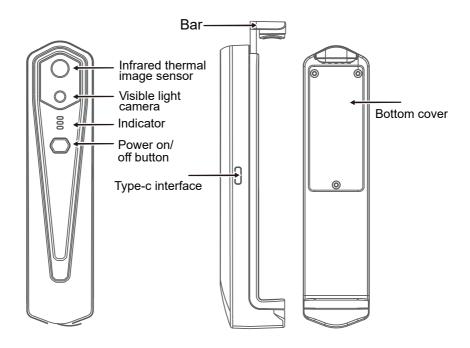

## 3.2 Description of indicators

Status indicator: blue light

Power on indicator: green light

Charging indicator: red

## 4. Product application

### 4.1 Device power on

Long press the Power on/off button for 1 second, and the device is powered on. The power on indicator is normally on.

After the device is powered on for 15 seconds, you can search WIFI

## 4.2 Device power off

Long press the power on/off button for more than 2 seconds, and all indicators will be out.

Long press the power button for more than 6 seconds in the power on state to for forcible power off, and all indicators will be out.

### 4.3 Device charging

Use TYPE-C interface data cords for charging. The charging indicator is normally on. After it is fully charged, the charging indicator is not on.

#### 4.4 Device connection

#### **Connecting WIFI**


- (1) Open your mobile phone WIFI connection screen, and fine the WIFI name prefixed with HT-W01-;
- (2) Enter WIFI password 12345678 and connect it;

Play button: After it is clicked, it starts to play images, and you can perform related operations.

- 1. After WIFI connection is successful, and when the device is disconnected, click to connect the device;
- 2. After successful connection, " or and " or will disappear;
- The device fails to connect your mobile phone, and the status indicator flashes in a low frequency (on for 1s, and out for 1s)
- After the device connects your mobile phone, the status indicator flashes in a high frequency (on for 0.5s, and out for 0.5s).

## 5. Software operation

## 5.1 Software interface

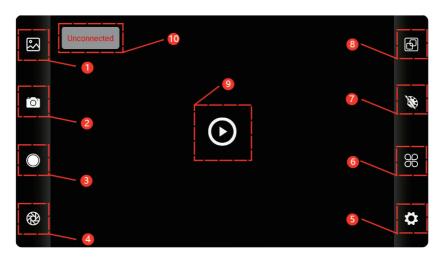

1	Library button	6	Temperature setting button
2	Image capture button	7	Color palette allocation button
3	Video recording button	8	Temperature measurement button
4	Shutter refreshing button	9	Playback button
5	Setting button	10	Status of device failure to connect

### 5.2 Library, shooting and video recording

(1) " library: Click to view images and videos;

#### Enter the image list page

- Long press the image or click on the icon in the right upper corner to be able to delete image files;
- Click on the image to preview single images, and you can preview the previous/last image by sliding left/right;
- When you preview single images, open/close your two fingers to zoom in/out image contents, and long press it to be able to view detailed information on the images;

#### Enter the video list page


- •Long press the image or click on the icon in the right upper corner to be able to delete video files;
- Click on videos to play such video file;
- (2) " Shooting: to save the current screen;
  Photo saving position: to open the images you require in the library, and you can view the location of the image.
- (4) " video recording: Click on it to start video recording, and click on it once again to end video recording; The position for saving video recording is the same as that of an image.

## 5.3 Shutter refreshingimage.


" shutter refreshing: Click on to refresh the baffle.

### 5.4 Temperature Measurement Analysis

Click " To pop out option of temperature measurement.

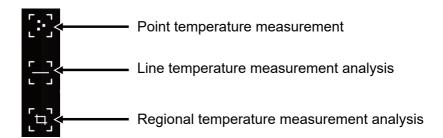


- (1) Point temperature measurement: click the point temperature measurement button, and the screen will display the temperature information of three points, namely the central temperature point, the highest temperature point and the lowest temperature point. Click the screen at this time, and the temperature information of the user-defined point will be added.
- (2) Line temperature measurement analysis: drag with your fingers and draw a horizontal line on the screen. It will automatically analyze the maximum temperature and minimum temperature of the horizontal line, and identify relevant information.

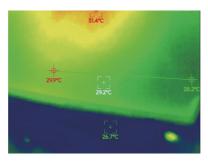

Line temperature measurement analysis

(3) Regional temperature measurement analysis: drag with your fingers and draw a rectangle on the screen. it will automatically analyze the maximum temperature and minimum temperature in the rectangular area, and identify relevant information, as shown in the following figure:

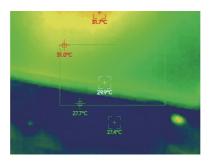


Regional temperature measurement analysis


## 5.5 Color palettes

Click on " " to pop up the color palette interface. You can switch among 10 color palettes such as white heat, glowing gold, iron red, rainbow, shimmer, aurora, red heat, jungle, medical, and black heat, as shown in the figure below.





The display effects of 10 color palettes is shown as follows:

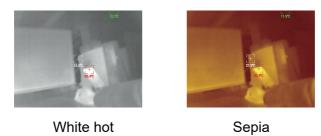

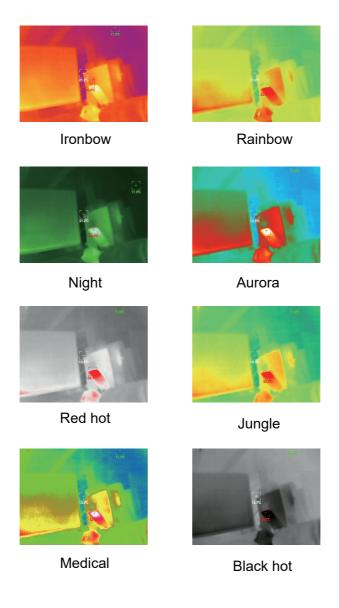

#### 5.6 Temperature measurement setting

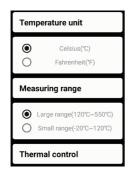

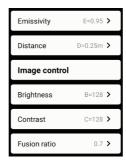



#### 5.7 Setting

Click on " to pop up the setting interface for language selection. For languages, Chinese or English can be selected, as shown in the figure below.



## 6. Technical parameters

Model	HT-W01			
Infrared				
Detector type	Vanadium Oxide Uncooled Infrared Focal Plane			
Infrared image resolution	256×192			
Pixel spacing	12µm			
Focal length	3.2mm			
Angle of view	56°(H)×42°(V)			
IFOV	3.75mrad			
Working band	8~14µm			
NETD	≤ 50mk@25°C,@F/1.0			
Image frame rate	≤25Hz			
Focusing mode	Free Focus			
Display				
Brightness adjustment	Supported			
Contrast adjustment	Supported			
Image fusion degree	Supported			
Picture in pictures	Supported			
Pseudo color mode	White hot, sepia, Ironbow, rainbow, night, aurora, red hot, jungle, medical, and black hot			
Hot spot tracking	Supported			

Temperature meas	urement function	
Temperature measurement mode	point, line and regional temperature measurement	
Temperature measurement range	-20°C~120°C,120°C∼ 500°C	
Temperature measuring distance	0.25m~30m	
Temperature measurement accuracy	300°C-500°C:±4% -15°C-300°C:±2°Cor ±2% -20°C-15°C:±4°C	
System function		
Camera/video	Supported	
Picture /Video format	JPG/MP4	
Language	Chinese and English	
Overall power consumption	≤1.5W	
Endurance time	≥2H	
External interface	USB Type-C, DC5V power supply	
WIFI	Supported	
Protection level	IP54	
Power supply	1000mAh chargeable lithium battery	
Working/storage er	nvironments	
Working temperature	-10°C ~ +50°C	
Storage temperature	-20°C ~ +70°C	
Size/Weight		
Product size	152x35x35mm	
Product weight	210g	

#### **CORRECT DISPOSAL**



This product is subject to the provision of european Directive 2012/19/EU.

The symbol showing a wheelie bin crossed through indicates that the product requires separate refuse

collection in the European Union.

This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to acollection point for recycling electrical and electronic devices

#### **FCC Information:**

**CAUTION:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment!

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This product may cause harmful interference.
- 2)This product must accept any interference received, including interference that may cause undesired operation.

**WARNING:** Changes or modifications to this product not expressly approved by the party.

responsible for compliance could void the user's authority to operate the product.

**Note:** This product has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules, These limits are designed to provide reasonable protection against harmful interference in a residential installation

This product generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- · Reorient or relocate the receiving antenna.
- · Increase the distance between the product and receiver.
- · Connect the product to an outlet on a circuit different from that to which the receiver is connected.
- · Consult the dealer or an experienced radio/TV technician for assistance.

Manufacturer: Shanghaimuxinmuyeyouxiangongsi

Address: Shuangchenglu 803nong11hao1602A-1609shi, baoshanqu, shanghai 200000 CN.

Imported to USA: Sanven Technology Ltd. Suite 250, 9166 Anaheim Place, Rancho Cucamonga, CA 91730

UK REP

YH CONSULTING LIMITED.

C/O YH Consulting Limited Office 147, Centurion House, London Road, Staines-upon-Thames, Surrey, TW18 4AX

EC REP

E-CrossStu GmbH

Mainzer Landstr.69, 60329 Frankfurt am Main.

#### Made In China



Technical Support and E-Warranty Certificate www.vevor.com/support