

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate www.vevor.com/support

FROST PROOF YARD HYDRAN

We continue to be committed to provide you tools with competitive price.

"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

VEVOR® FROST PROOF YARD HYDRAN



YH6-1/YH6-2/YH6-3/YH6-4



AYHC

NEED HELP? CONTACT US!

Have product questions? Need technical support?

Please feel free to contact us:

Technical Support and E-Warranty Certificate
www.vevor.com/support

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.



PRODUCT PARAMETERS

Model	Inlet Connection Type	Outlet Connection Type	Overall pipelength
YH6-1	3/4 in NPT	3/4 NH	3.25FT
	G 3/4 in	G 3/4 in	
YH6-2	3/4 in NPT	3/4 NH	4.25FT
	G 3/4 in	G 3/4 in	
YH6-3	3/4 in NPT	3/4 NH	5.25FT
	G 3/4 in	G 3/4 in	
YH6-4	3/4 in NPT	3/4 NH	6.25FT
	G 3/4 in	G 3/4 in	
AYHC	1 in NPT+3/8-16UNC	3/4 NH	6.8 inch
	1 in NPT+3/8-16UNC	G 3/4 in	


Thank you for using this product. In order to make sure that you can operate the machine correctly, read this instruction carefully before operation and keep it properly for future reference. Please be sure to read the precautions and safety rules in this page to ensure your safe use.

The warnings and instructions reviewed in this manual cannot cover all possible conditions and situations that may occur. Caution and common sense are not built into this product, since we believe that the uses will comply with these codes.

HOW A FROST-PROOF HYDRANT WORKS

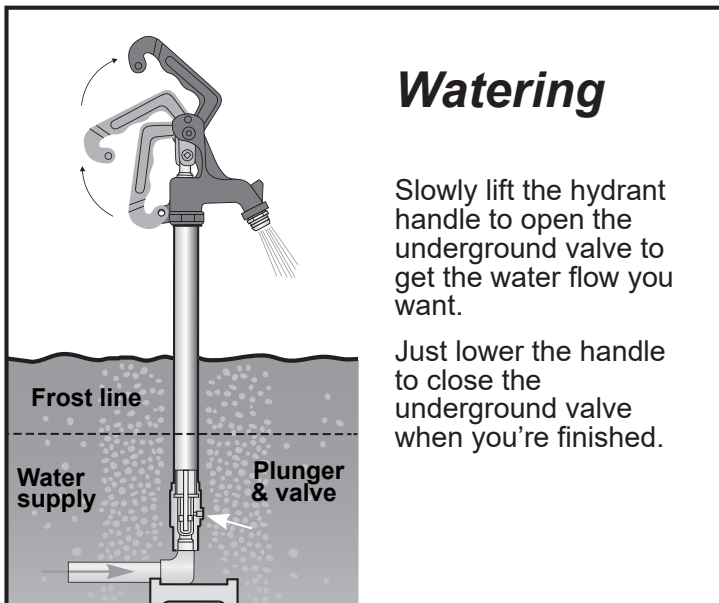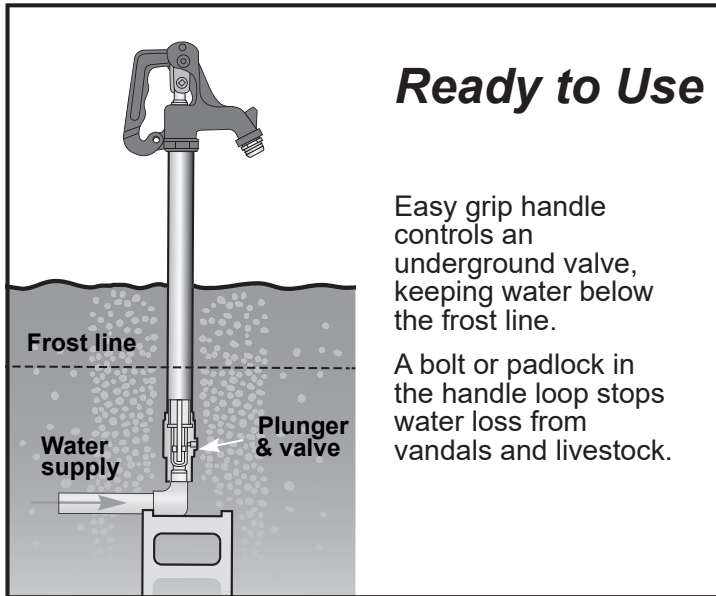

Watering Completed

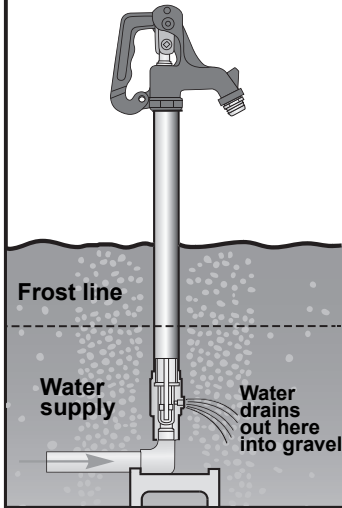

Closing the underground valve opens a small drain hole. Water drains out of the hydrant into the gravel around the hydrant. Now the hydrant has no water above the frost line. It cannot freeze, and is ready for the next time you need water.

INSTALLATION


1. Dig hole for hydrant approximately 2 feet in diameter and 1 foot deeper than the bury depth.
2. Flush piping before connecting the hydrant to clear any gravel or other debris that may have collected in the piping during its installation and assembly. If not flushed out of the piping, this debris may jam the hydrant mechanism or clog the flow ports.
3. Make the pipe connection but do not bury the hydrant yet. Operate the hydrant to be sure it is operating properly and the piping connections are not leaking. Open and close the hydrant and check the flow and drainage. If leakage continues from the drain port see "adjustment procedure".
4. Fill the hole around and below the hydrant with medium size gravel. This will provide a drain field for the hydrant. Without a drain field, the hydrant will not empty itself, and it will freeze in cold weather. This will cause damage to the hydrant and result in loss of water and possible flooding damage.

ADJUSTMENT PROCEDURE

1. Turn water supply off!
2. Open hydrant to relieve pressure.
3. Close hydrant and loosen set screw.
4. Push brass rod down as far as it will go (by hand) to be sure that the plunger is touching the seat.
5. Move handle open approximately 30 degrees from closed position.
6. Tighten setscrew snugly.
7. Turn water supply on.
8. Operate hydrant and make sure the hydrant is shutting off properly and flowing properly.
9. If hydrant still does not shut off, repeat steps 1 thru 8.
10. Flow water through hydrant and close completely to check for proper drainage by:
 - a. Listening for water draining down the pipe; or
 - b. Putting your hand over the hose connection to feel for a vacuum; if hydrant does not drain, see step 11.
11. To clear drain hole blockage, close off hydrant spout by using hose cap or by attaching and kinking a hose. Open and close hydrant to allow water pressure to clear blockage.

Repeat set 10 to verify proper drainage. If hydrant still does not drain, repeat steps 1 thru 10 to fully uncover drain hole.

CAUTION: Do not try to adjust all at once or you may over adjust and cause damage to the plunger. For this reason, adjust in small increments.

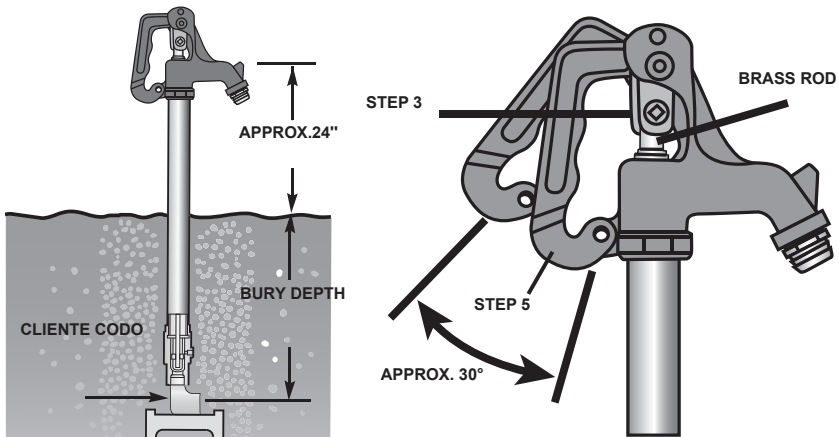


HYDRANT TIPS

- Never leave a hose attached to hydrant after use. This will prevent the hydrant from draining properly and will cause the hydrant to freeze.
- If the hydrant is to be installed inside a barn or other structure, or if it is installed in asphalt or concrete such as a driveway, connect a 1/8" drain pipe or tube to the drain port and dig a remote drain field outside the structure for the drain pipe to empty into, Without this remote piping and drain field, the water from the hydrant drainage will percolate up to the surface around or near the hydrant and will damage the flooring or cause muddy areas in stalls or walkways.
- Water pressure to the hydrant should be regulated no more than 80psi. Higher pressures will accelerate wear and may cause leakage that will saturate the ground and drain field and prevent the hydrant from draining. If the hydrant is not allowed to drain, it can freeze and cause damage to itself and cause flooding and loss of water. High pressure will also cause you to have to replace parts and adjust the hydrant frequently. A normal operating pressure should be 20 to 40 psi.
- Saturated ground in the hydrant drain field can prevent the hydrant from draining and may result in freezing. If the area where your hydrant is located is low lying or has a tendency to have standing water, a larger drain field or pit may be required to provide proper drainage.
- Vacuum breakers are required by code in most states.

HYDRANT ADJUSTMENT PROCEDURE

1. TURN WATER SUPPLY OFF!
 2. OPEN HYDRANT TO RELIEVE PRESSURE.
 3. CLOSE HYDRANT AND LOOSEN SET SCREW
 4. PUSH BRASS ROD DOWN AS FAR AS IT WILL GO (BY HAND) TO BE SURE THAT THE PLUNGER IS TOUCHING THE SEAT
 5. MOVE HANDLE OPEN APPROXIMATELY 30 DEGREES FROM CLOSED POSITION
 6. TIGHTEN SETSCREW SNUGLY.
 7. TURN WATER SUPPLY ON.
 8. OPERATE HYDRANT AND MAKE SURE THE HYDRANT IS SHUTTING OFF PROPERLY AND FLOWING PROPERLY
 9. IF HYDRANT STILL DOES NOT SHUT OFF, REPEAT STEPS 1 THRU 8
 10. FLOW WATER THROUGH HYDRANT AND THEN CLOSE COMPLETELY TO CHECK FOR PROPER DRAINAGE BY:
 - A. LISTENING FOR WATER DRAINING DOWN THE PIPE; OR
 - B. PUTTING YOUR HAND OVER THE HOSE CONNECTION TO FEEL FOR A VACUUM; IF HYDRANT DOES NOT DRAIN, SEE STEP 11.
 11. TO CLEAR DRAIN HOLE BLOCKAGE, CLOSE OFF HYDRANT SPOUT BY USING HOSE CAP OR BY ATTACHING AND KINKING A HOSE. OPEN AND CLOSE HYDRANT TO ALLOW WATER PRESSURE TO CLEAR BLOCKAGE. REPEAT STEP 10 TO VERIFY PROPER DRAINAGE. IF HYDRANT STILL DOES NOT DRAIN, REPEAT STEPS 1 THRU 10 TO FULLY UNCOVER DRAIN HOLE.
- CAUTION: DO NOT TRY TO ADJUST ALL AT ONCE OR YOU MAY OVERADJUST AND CAUSE DAMAGE TO THE PLUNGER. FOR THIS REASON. ADJUST IN SMALL INCREMENTS.

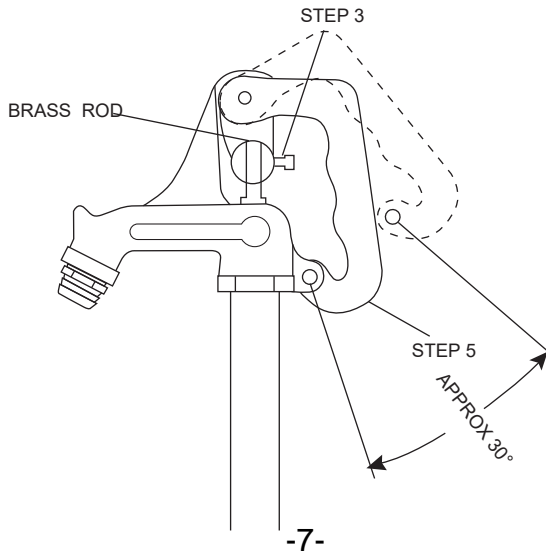

Manufacturer: Shanghai muxinmuyeyouxiangongsi
Address: Baoshanqu Shuangchenglu 803long 11hao 1602A-1609shi Shanghai
Imported to AUS: SIHAO PTY LTD. 1 ROKEVA STREETEASTWOOD NSW 2122 Australia
Imported to USA: Sanven Technology Ltd.
Suite 250,9166 Anaheim Place, Rancho Cucamonga, CA 91730



YH CONSULTING LIMITED.
C/O YH Consulting Limited Office 147, Centurion House,
London Road, Staines-upon-Thames, Surrey, TW18 4AX.



E-CrossStu GmbH.
Mainzer Landstr.69, 60329 Frankfurt am Main.

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate

www.vevor.com/support