

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate www.vevor.com/support

Heat Press Machine

MODEL: P8001

We continue to be committed to provide you tools with competitive price.


"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

VEVOR®

TOUGH TOOLS, HALF PRICE

HEAT PRESS MACHINE

MODEL: P8001

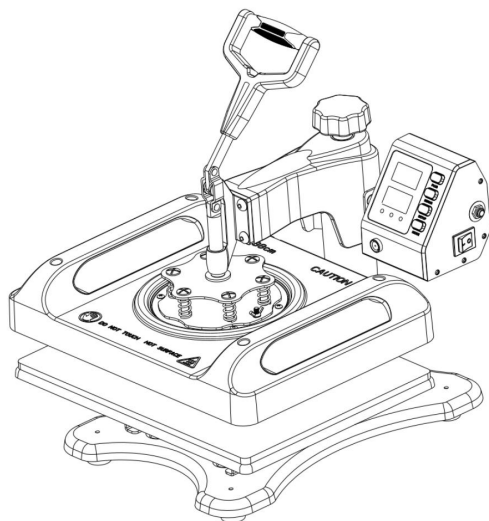






NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

Technical Support and E-Warranty Certificate
www.vevor.com/support

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

Symbol	Symbol Description
	Warning-To reduce the risk of injury, the user must read the instructions manual carefully.
	Alternating current
	This symbol, placed before a safety comment, indicates a kind of precaution, warning, or danger. Ignoring this warning may lead to an accident. To reduce the risk of injury, fire, or electrocution, please always follow the recommendations shown below.
	Danger! Risk of personal injury or environmental damage! Risk of electric shock! Risk of personal injury by electric shock!
	This product is subject to the provision of European Directive 2012/19/EC. The symbol showing a wheellie bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to a collection point for recycling electrical and electronic devices.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:



CAUTION

- Read all instructions carefully.
- CHECK the correct voltage before using the machine. Be SURE to operate with reliable grounded protection connections.
- TURN OFF the machine, and then DISCONNECT the power-supply

before

replacing the heat units. DO NOT forget to wear insulated gloves if the unit is still under high temperature.

- AVOID prolonged burning of the heating parts. If not turning the power off, please place a hot stamping replacement (it could be a scrap and can be used repeatedly). AVOID damaging the heating units with sharp parts of the stamping object.
 - AVOID touching the heating units and the compression spring without protection in case of potential damage to the body during use.
 - If it's hard to push the grasp, please adjust the rotation lock screw in order to reduce the pressure of compression spring. Or, it will damage the strength of the machine.
 - Before lifting the machine, please lock the machine head by rotation lock screw and loosen the handle (don't screw the rotation lock screw too tight). Besides do not put down the machine beyond the limit. When meeting the falling limit, you can feel an obvious pressure on the swiveling pressure adjustment wheel.
 - Keep children away from the machine!!!
 - DO NOT attempt to press products that are not intended for normal heat transfer. Baking pads should be avoided of empty burning.
 - Keep unplug when moving the machine.
 - Keep unplug when installing accessories.
 - Place on a flat and stable platform and operate under ventilated conditions.
 - Wear special protective equipment when operating the machine.
- Please turn off the power when plug or unplug the connector





WARNING

- Keep unplugged when moving the machine.
- keep unplugged when installing accessories.
- Place on a flat and stable platform and operate under ventilated conditions.
- Wear special protective equipment when operating the machine.
- Do not use this machine in a hazardous location.
- Only use it when the machine is working correctly.
- Do not disassemble and repair this machine.
- Do not use an unsuitable AC outlet.
- Do not touch the heating plate when the machine heating.
- Do not use in humid environments or in contact with water. Also, do not infiltrate liquid in the machine to prevent fire or electric shock caused by a short circuit
- Do not use the power supply that does not meet the rated voltage. The power supply that does not meet the specified voltage may cause fire or electric shock.
- Ensure that the machine is grounded so as not to cause harm to body.
- Do not touch the rotating rod or bearing part with your fingers during use in case of injuries.
- If the machine is not in use for a long time, please unplug the power cord from the socket.
- Do not use the machine during thunderstorms or lightning to avoid damage to the machine.
- Place the machine smoothly on the flame-retardant table and keep away from flammable and explosive items.
- Please stop using it if the machine smokes, emits a peculiar smell, or becomes noisy and in other abnormal conditions.
- This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning

and user maintenance shall not be made by children without supervision

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- In order to avoid a hazard due to inadvertent resetting of the thermal cutout, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
- Do not use this machine in a hazardous location
- Do not use it when the machine is not working properly!
- Do not allow children or adults who do not understand this manual to operate this machine.
- Do not disassemble and repair this machine.
- Do not use an unsuitable AC outlet.
- Do not touch the heating plate when the machine is heating.

SAVE THESE INSTRUCTIONS

FCC INFORMATION

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment!

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This product may cause harmful interference.
- 2) This product must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this product not expressly approved by the party. Responsible for compliance could void the user's authority to operate the product.

Note: This product has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules, These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This product generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the distance between the product and receiver.
- Connect the product to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for assistance.

DETAILED PRODUCT DESCRIPTION

Model	P8001	P8001
Voltage	120V~ 60Hz	220-240V~ 50Hz
Power	800W	1000W
Temperature	104-410°F/40-210°C	104-410°F/40-210°C
Time Range	1~ 999 second	1~ 999 second
Printing Area	29*38cm	29*38cm

SETTING TEMPERATURE & TIME

- +** Plus
- Minus
-  Setup
-  Mode




1. How to turn on/off and how to start?

Press the switch button on the side of the temperature control box to turn it on.

Countdown start button, press once to start the countdown; press again to reset.

2. How to set the temperature/time?


Press  once to set the temperature, press twice to set the time and press again to exit. (It will automatically exit the temperature/time setup state in case of no operation within 5sec.).

3. How to set the temperature/time to increase or decrease?

- +** Set the time/temperature increase
- Set the time/temperature decrease

4. How to change the temperature unit from °C to °F?

In the power-on state, press "+" and "-" at the same time to change the temperature unit between °C and °F.

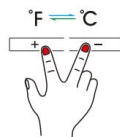

5. How to set auto shutdown time?

Press and hold for 5 sec.to set the auto shutdown time. (The factory default is 60min and the range is from 10min to 120min)

6. How to do temperature correction?

Press  and hold for 5 seconds to enter the temperature correction setting

(Range +30°C, initial value is 0)


7. How to turn on/off the beep sound?

In the shutdown state, press "_" to turn off the sound and OFF is shown;

Press again to turn on the sound and ON is shown.

8. Tips: The max. set temperature of this machine is 210°C and the longest time is 999sec.

MAIN SPARE PARTS

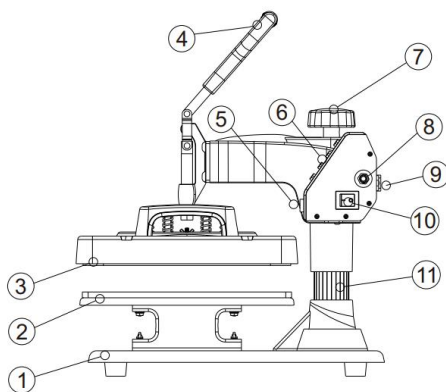

Number	Part name	Number	Part name
1	Pedestal	7	Lift knob
2	Placement	8	Overload protector
3	Heating plate	9	Power socket
4	Handle	10	Power switch
5	Aviation connector	11	Column
6	Button	12	


ATTACHMENT INSTALLATION INSTRUCTIONS

Please perform all operations after the power is off.




Warning

Plate transfer process

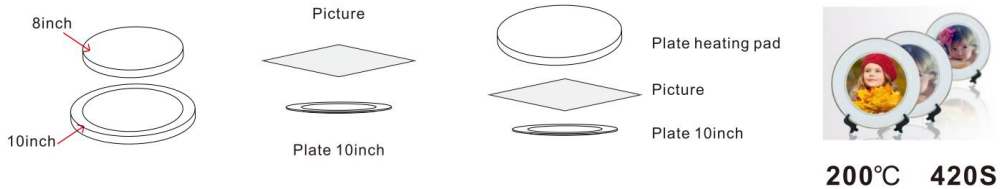

1. Select one side that matches the size of the plate to be sleeved with a silica gel pad, and remove the silica gel pad on the other side. Keep the side without the silica gel pad facing upwards and heat it on the machine for 15 minutes;
2. Put the hot stamping paper on the plate that wants to print the pattern.
3. Remove the heating plate and place it on the plate, keeping the side without the silica gel pad facing upward.


This mug heat press machine is matched with 5 in 1 and 6 in 1.

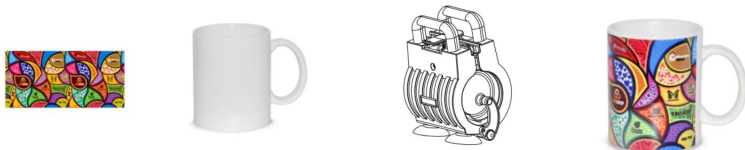

180°C (360°F) 180S

1. Connect the cap baking machine to the main machine and set the time and temperature.
2. Stick the transferred picture on the hat.
3. When the temperature reaches, place the hat into the hat baking machine and press tightly.

This mug heat press machine is matched with 8 in 1,10 in 1,11 in 1

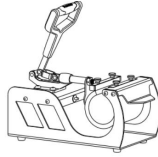

180°C (360°F) 180S

1. Connect the cap baking machine to the main machine and set the time and temperature.
2. Stick the transferred picture on the hat.
3. When the temperature reaches, place the hat into the hat baking machine and press tightly.

TRANSFER PARAMETER (FOR REFERENCE)

			
T shirt (sublimation)	T shirt (PU flex film)	Pillow	Cap
200°C(390°F) 60S	170°C(338°F) 25S	200°C(390°F) 60S	200°C(390°F) 40S
			
Mug	Magic mug	Plate	Sport bottle
180°C (360°F) 180S	180°C (360°F) 180S	200°C(392°F)900S	180°C (360°F) 90S

		
Rock photo	Crystal	Aluminum sheet
190°C(380°F) 400S	190°C(380°F) 720S	170°C(338°F) 100S
		
Aluminum sheet	Glass frame	Pen
170°C(338°F) 100S	180°C(360°F) 300S	200°C(390°F) 35S

Additional: The above temperature and time parameters are for reference only; different paper and ink have an effect on the time and temperature of the printed product.

TRANSFER PARAMETER (FOR REFERENCE)

Machine body	Parts of the machine itself (excluding main parts)	Fault 1	The machine cannot be used normally according to the operating procedure
Main parts	29*38mm aluminum alloy heating plate	Fault 2	Heating plate not heating
	PCBA (circuit board)	Fault 3	Display error
	Mug heating element	Fault 4	Failure heating
	Pen heating element, cap heating element	Fault 5	Failure heating

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate

www.vevor.com/support

Made In China