

Technical Support and E-Warranty Certificate www.vevor.com/support

8x14 OPERATOR'S MANUAL

We continue to be committed to provide you tools with competitive price.

"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.





(The picture is for reference only, please refer to the actual object)

NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

Technical Support and E-Warranty Certificate www.vevor.com/support

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

NOTE

The information contained in this handbook is intended as a guide to the operation of these machines and does not form part of any contract. The data it contains has been obtained from the machine manufacturer and from other sources, Whilst every effort has been made to ensure the accuracy of these transcriptions it would be impracticable to verify each and every item. Furthermore, development of the machine may mean that the equipment supplied may differ in detail from the descriptions herein. The responsibility therefore lies with the user to satisfy himself that the equipment or process described is suitable for the purpose intended.

LIMITED WARRANTY

We makes every effort to assure that its products meet high quality and durability standards and warrants to the original retail consumer/purchaser of our products that each product be free from defects in materials and workmanship as follow; **one year limited warranty on all products unlessspecified otherwise.** This Warranty does not apply to defects due directly or indirectly to misuse, abuse. negligence or accidents,normal wear-and tear, repair or alterations outside our facilities, or to a lack of maintenance.

We shall in no event be liable for death, injuries to persons or property or for incidental, contingent, special, or consequential damages arising from the use of our products.

To take advantage of this warranty, the product or part must be returned to us for examintion, postage prepaid. Proof of purchase date and an explanation of the complaint must accompany the merc handise. If our inspection discloses a defect, we will either repair or replace the product, or refund the purchases price if we cannot readily and quickly provide a repair or replacement, if you are willing to accept a refund. We will return repaired product or replacement at our expense, but if it is determined there in no defect, or that the defect resulted from causes not within the scope of Herman's warranty, then the user must bear the cost of storing and returning the product.

The manufacturers reserve the right to change specifications at any time as they continually strive to achieve better quality equipment.

Copyright. The copyright of this instruction book is the property of us and may not be reproduced or copied without prior consent of us.

! WARNING!

Read and understand the entire instruction manual before attempting set-up or operation of this machine!

- 1. This machine is designed and intended for use by properly trained and experienced personnel only. If you are not familiar with the proper safe use of lathes, do not use this machine nutil proper training and knowledge has been obtained.
- 2. Keep guards in place. Safety guards must be 16. Always use safety glasses. Every day kept in place and in working order.
- 3. Remove adjusting keys and wrenches. Before turning on machine, check to see that any 17. Do not overreach. Keep proper footing and adjusting wrenches are removed from the tool.
- 4. Reduce the risk of unintentional starting. Make sure switch is in the OFF position before plugging in the tool.
- 5. **Do not force tool.** Always use a tool at the rate for which it was designed.
- 6. **Use the right tool.** Do not force a tool or attachment to do a job for which it was not designed.
- 7. Maintain tools with care. Keep tools sharp and clean for best and safest performance. Follow instructions for Jubrication and changing accessories.
- 8. Always disconnect the machine from the power source before adjusting or servicing.
- 9. Check for damaged parts. Check for alignment of moving parts, breakage of parts, mounting, and any other condition that may affect the tools operation. A guard or any part that is damaged should be repaired or replaced.
- 10. Turn power off. Never laave a machine unattended. Do not leave a machine until it comes to a complete stop.
- 11. Keep work area clean. Cluttered areas and bench invite accidents.
- 12. Do not use in a dangerous environment. Do not use power tools in damp or wet locations. or expose them to rain. Keep work area well lighted.

- 13. Keep children and visitors away. All visitors should be kept a safe distance from the work
- 14. Make the workshop child proof. Use padlocks, master switchies, and remove starter keys.
- 15. Wear proper apparel. Loose clothing, gloves, neckties, rings, bracelets or other jewelry may get caught in moving parts. Non-slip footwesr is recommended. Wear protective hair covering to contain long hair. Do not wear any type of glove.
- glasses only have impact resistant lenses; they are not safety glasses.
- balance at all times.
- 18. Do not put hands near the cutter while the machine is operating.
- 19. Do not perform any set-up work while machine is operating.
- 20. Read and understand all warnings posted on the machine.
- 21. This manual is intended to familiarize you with the technical aspects of this lathe. It is not, nor was it intended to be a training manual.
- 22. Failure to comply with all of these warnings may result in serious injury.
- 23. Some dust created by power sanding, sawing, grinding, drilling and other construction activities contains chemicals known to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are lead from lead based paint; crystalline silica from bricks and cement and other masonry products.
- 24 Your risk from those exposures Varies, depending on how often you do this type of work. To reduce your exposure to these chernicals: work in a well ventilafed area. and work with approved safedty equipment, such as those dust masks that are specifically designed to filter our microscopic particles.

SPECIFICATIONS:

	8x14
Capacities:	
Swing Over Bed	8x14
Swing Over Cross Slide	210mm
Distance Between Centers	350mm
Width of Bed	70mm
Headstock:	
Hole Through Spindle	21mm
Taper in Spindle Nose	MT3
Number of Spindle Speeds	Variable
Range of Spindle Speeds	0-2500RPM
Feeding and Threading:	·
Number of Metric Threads	10
Range of Metric Threads	0.5~3mm
Number of Imperial Threads	8
Range of Imperial Threads	8~44 T.P.I.
Range of Longitudinal Feed	0.1~0.20mm
Compound and Carrigage:	·
Tool Post Type	4-Way
Maximum Compound Slide Travel	55mm
Maximum Cross Slide Travel	75mm
Maximum Carriage Travel	276mm
Tailstock:	
Tailstock SPindle Travel	60mm
Taper in Tailstock Spindle	MT2
Miscellaneous:	·
Main Motor	
Dimension:	
Length:	740mm
Width:	390mm
Height:	370mm
Weight:	58KG/46KG


The specifications in this manual are given as general information and are not binding. We reserves the right to effect, at any time and without prior notice, changes or alterations to parts. fitting and accessory equipment deemed necessary for any reason whatsoever.

STUD GEAR BOX	THREAD PER INCH	STUD GEAR BOX			THREAD PER INCH	STUD GEAR BOX				
<u> </u>		Α	В	C	D		A	В	C	D
H B	12	40			30	26	40			65
	13	40			30	28	20			35
	14	40			35	32	20			40
п.	16	40			40	36	20			45
A	18	40			45	38	20	50	60	57
СПВ	19	40	50	60	57	40	20			50
	20	40			50	44	20			55
D	22	40			55	48	20			60
	24	40			60	52	20			65


INDICATOR TABLE							
PITCH	,	SCALE					
MM	14T	15T	16T				
0.5			3,6,9,12				
0.7	6、12						
0.8			6、12				
1			3,6,9,12				
1.25		4.8.12					
1.5			3,6,9,12				
1.75	6、12						
2			3,6,9,12				
2.5		4.8.12					



Rotating twist, stepless speed adjustment

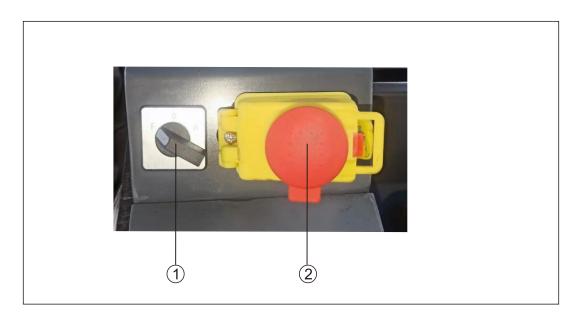

- 1,F(Forward rotation);o(Stop);R(Inverts)
- 2,Emergency Stop

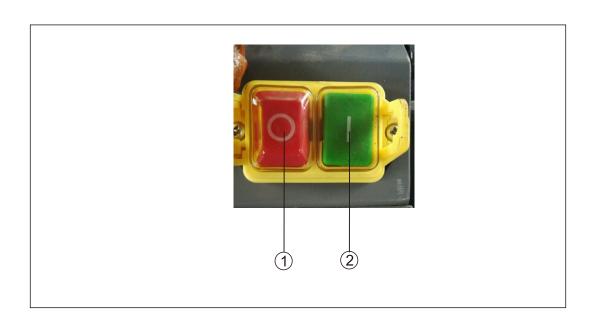

- 1,Stop
- 2,Start up

Manufacturer: Shanghaimuxinmuyeyouxiangongsi

Address: Shuangchenglu 803nong11hao1602A-1609shi, baoshanqu,

shanghai 200000 CN.

Imported to AUS: SIHAO PTY LTD, 1 ROKEVA STREETEASTWOOD NSW

2122 Australia

Imported to USA: Sanven Technology Ltd., Suite 250, 9166 Anaheim Place,

Rancho Cucamonga, CA 91730

EC REP

E-CrossStu GmbH

Mainzer Landstr.69, 60329 Frankfurt am Main.

UK REP

YH CONSULTING LIMITED.

C/O YH Consulting Limited Office 147, Centurion House, London Road, Staines-upon-Thames, Surrey, TW18 4AX



Technical Support and E-Warranty Certificate www.vevor.com/support



Assistance technique et certificat de garantie électronique www.vevor.com/support

8x14 MANUEL D'UTILISATION

Nous continuons à nous engager à vous fournir des outils à des prix compétitifs.

« Économisez la moitié », « Moitié prix » ou toute autre expression similaire utilisée par nous ne représente qu'une estimation des économies que vous pourriez réaliser en achetant certains outils chez nous par rapport aux grandes marques et ne couvre pas nécessairement toutes les catégories d'outils que nous proposons.

Nous vous rappelons de bien vouloir vérifier soigneusement lorsque vous passez une commande chez nous si vous économisez réellement la moitié par rapport aux grandes marques.





(L'image est à titre de référence uniquement, veuillez vous référer à l'objet réel)

BESOIN D'AIDE? CONTACTEZ-NOUS!

Vous avez des questions sur nos produits ? Vous avez besoin d'assistance technique ? N'hésitez pas

à nous contacter : Assistance technique et certificat de garantie électronique www.vevor.com/support

Il s'agit de la notice d'utilisation d'origine. Veuillez lire attentivement toutes les instructions du manuel avant de l'utiliser. VEVOR se réserve le droit d'interpréter clairement notre manuel d'utilisation. L'apparence du produit dépend du produit que vous avez reçu. Veuillez nous excuser, nous ne vous informerons plus en cas de mise à jour technologique ou logicielle de notre produit.

NOTE

The information contained in this handbook is intended as a guide to the operation of these machines and does not form part of any contract. The data it contains has been obtained from the machine manufacturer and from other sources, Whilst every effort has been made to ensure the accuracy of these transcriptions it would be impracticable to verify each and every item. Furthermore, development of the machine may mean that the equipment supplied may differ in detail from the descriptions herein. The responsibility therefore lies with the user to satisfy himself that the equipment or process described is suitable for the purpose intended.

LIMITED WARRANTY

We makes every effort to assure that its products meet high quality and durability standards and warrants to the original retail consumer/purchaser of our products that each product be free from defects in materials and workmanship as follow; **ONE YEAR LIMITED WARRANTY ON ALL PRODUCTS UNLESSSPECIFIED OTHERWISE.** This Warranty does not apply to defects due directly or indirectly to misuse, abuse. negligence or accidents,normal wear-and tear, repair or alterations outside our facilities, or to a lack of maintenance.

We shall in no event be liable for death, injuries to persons or property or for incidental, contingent, special, or consequential damages arising from the use of our products.

To take advantage of this warranty, the product or part must be returned to us for examintion, postage prepaid. Proof of purchase date and an explanation of the complaint must accompany the merc handise. If our inspection discloses a defect, we will either repair or replace the product, or refund the purchases price if we cannot readily and quickly provide a repair or replacement, if you are willing to accept a refund. We will return repaired product or replacement at our expense, but if it is determined there in no defect, or that the defect resulted from causes not within the scope of Herman's warranty, then the user must bear the cost of storing and returning the prodcut.

The manufacturers reserve the right to change specifications at any time as they continually strive to achieve better quality equipment.

Copyright. The copyright of this instruction book is the property of us and may not be reproduced or copied without prior consent of us.

!\ WARNING!

Read and understand the entire instruction manual before attempting set-up or operation of this machine!

- 1. This machine is designed and intended for use by properly trained and experienced personnel only. If you are not familiar with the proper safe use of lathes, do not use this machine nutil proper training and knowledge has been obtained.
- 2. Keep guards in place. Safety guards must be 16. Always use safety glasses. Every day kept in place and in working order.
- 3. Remove adjusting keys and wrenches. Before turning on machine, check to see that any 17. Do not overreach. Keep proper footing and adjusting wrenches are removed from the tool.
- 4. Reduce the risk of unintentional starting. Make sure switch is in the OFF position before plugging in the tool.
- 5. Do not force tool. Always use a tool at the rate for which it was designed.
- 6. Use the right tool. Do not force a tool or attachment to do a job for which it was not designed.
- 7. Maintain tools with care. Keep tools sharp and clean for best and safest performance. Follow instructions for lubrication and changing accessories.
- 8. Always disconnect the machine from the power source before adjusting or servicing.
- 9. Check for damaged parts. Check for alignment of moving parts, breakage of parts, mounting, and any other condition that may affect the tools operation. A guard or any part that is damaged should be repaired or replaced.
- 10. Turn power off. Never laave a machine unattended. Do not leave a machine until it comes to a complete stop.
- 11. Keep work area clean, Cluttered areas and bench invite accidents.
- 12. Do not use in a dangerous environment. Do not use power tools in damp or wet locations, or expose them to rain. Keep work area well lighted.

- 13. Keep children and visitors away. All visitors should be kept a safe distance from the work
- 14. Make the workshop child proof. Use padlocks, master switchies, and remove starter keys.
- 15. Wear proper apparel. Loose clothing, gloves, neckties, rings, bracelets or other jewelry may get caught in moving parts. Non-slip footwesr is recommended. Wear protective hair covering to contain long hair. Do not wear any type of glove.
- glasses only have impact resistant lenses; they are not safety glasses.
- balance at all times.
- 18. Do not put hands near the cutter while the machine is operating.
- 19. Do not perform any set-up work while machine is operating.
- 20. Read and understand all warnings posted on the machine.
- 21. This manual is intended to familiarize you with the technical aspects of this lathe. It is not, nor was it intended to be a training manual.
- 22. Failure to comply with all of these warnings may result in serious injury.
- 23. Some dust created by power sanding, sawing, grinding, drilling and other construction activities contains chemicals known to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are lead from lead based paint; crystalline silica from bricks and cement and other masonry products.
- 24 Your risk from those exposures Varies, depending on how often you do this type of work. To reduce your exposure to these chernicals: work in a well ventilafed area, and work with approved safedty equipment, such as those dust masks that are specifically designed to filter our microscopic particles.

SPECIFICATIONS:

	8x14
Capacities:	
Swing Over Bed	8x14
Swing Over Cross Slide	210mm
Distance Between Centers	350mm
Width of Bed	70mm
Headstock:	
Hole Through Spindle	21mm
Taper in Spindle Nose	MT3
Number of Spindle Speeds	Variable
Range of Spindle Speeds	0-2500RPM
Feeding and Threading:	
Number of Metric Threads	10
Range of Metric Threads	0.5~3mm
Number of Imperial Threads	8
Range of Imperial Threads	8~44 T.P.I.
Range of Longitudinal Feed	0.1~0.20mm
Compound and Carrigage:	
Tool Post Type	4-Way
Maximum Compound Slide Travel	55mm
Maximum Cross Slide Travel	75mm
Maximum Carriage Travel	276mm
Tailstock:	
Tailstock SPindle Travel	60mm
Taper in Tailstock Spindle	MT2
Miscellaneous:	·
Main Motor	
Dimension:	
Length:	740mm
Width:	390mm
Height:	370mm
Weight:	58KG/46KG


The specifications in this manual are given as general information and are not binding. We reserves the right to effect, at any time and without prior notice, changes or alterations to parts. fitting and accessory equipment deemed necessary for any reason whatsoever.

STUD GEAR BOX	THREAD PER INCH	STUD GEAR BOX			THREAD PER INCH	STUD GEAR BOX				
<u> </u>		Α	В	C	D		A	В	C	D
H HB	12	40			30	26	40			65
	13	40			30	28	20			35
	14	40			35	32	20			40
	16	40			40	36	20			45
A_	18	40			45	38	20	50	60	57
СПВ	19	40	50	60	57	40	20			50
	20	40			50	44	20			55
	22	40			55	48	20			60
	24	40			60	52	20			65


INDICATOR TABLE							
PITCH	,	SCALE					
MM	14T	15T	16T				
0.5			3,6,9,12				
0.7	6.12						
0.8			6、12				
1			3.6.9.12				
1.25		4.8.12					
1.5			3′6′3′15				
1.75	6.12						
2			3,6,9,12				
2.5		4.8.12					



Rotating twist, stepless speed adjustment

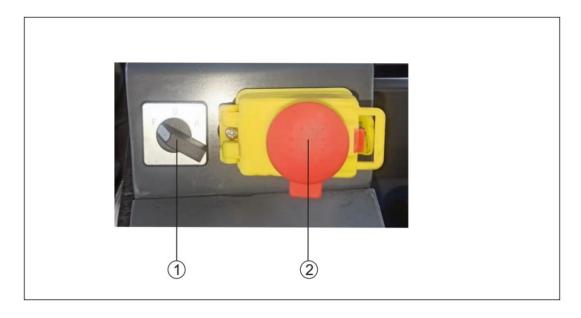

- 1,F(Forward rotation);o(Stop);R(Inverts)
- 2, Emergency Stop

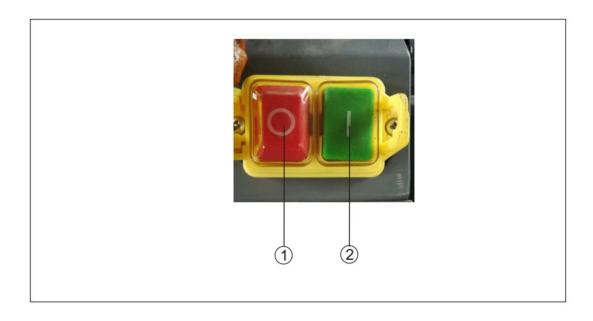

- 1,Stop
- 2,Start up

Fabricant : Shanghaimuxinmuyeyouxiangongsi

Adresse: Shuangchenglu 803nong11hao1602A-1609shi, baoshanqu, Shanghai

200000 CN.

Importé en Australie : SIHAO PTY LTD, 1 ROKEVA STREET, ASTWOOD NSW

2122 Australie

Importé aux États-Unis : Sanven Technology Ltd., Suite 250, 9166 Anaheim Place, Rancho

Cucamonga, CA 91730

REPRÉSENTAN [®] DE LA CE

E-CrossStu GmbH

Mainzer Landstr.69, 60329 Francfort-sur-le-Main.



YH CONSULTING LIMITÉE.

C/O YH Consulting Limited Bureau 147, Centurion House, Route de Londres, Staines-upon-Thames, Surrey, TW18 4AX



Assistance technique et certificat de garantie électronique www.vevor.com/support



Technischer Support und E-Garantie-Zertifikat www.vevor.com/support

8 x 14 **BEDIENUNGSANLEITUNG**

Wir sind weiterhin bestrebt, Ihnen Werkzeuge zu wettbewerbsfähigen Preisen anzubieten.
"Sparen Sie die Hälfte", "Halber Preis" oder andere ähnliche Ausdrücke, die wir verwenden, stellen nur eine Schätzung der Ersparnis dar, die Sie beim Kauf bestimmter Werkzeuge bei uns im Vergleich zu den großen Topmarken erzielen können, und decken nicht unbedingt alle von uns angebotenen Werkzeugkategorien ab. Wir möchten Sie freundlich daran erinnern, bei Ihrer Bestellung bei uns sorgfältig zu prüfen, ob Sie im Vergleich zu den großen Topmarken tatsächlich die Hälfte sparen.





(Das Bild dient nur als Referenz, bitte beziehen Sie sich auf das tatsächliche Objekt)

Brauchen Sie Hilfe? Kontaktieren Sie uns!

Haben Sie Fragen zum Produkt? Benötigen Sie technischen Support? Bitte kontaktieren Sie uns:

Technischer Support und E-Garantie-Zertifikat www.vevor.com/ support

Dies ist die Originalanleitung. Bitte lesen Sie alle Anweisungen sorgfältig durch, bevor Sie das Gerät in Betrieb nehmen. VEVOR behält sich eine klare Auslegung unserer Bedienungsanleitung vor. Das Erscheinungsbild des Produkts richtet sich nach dem Produkt, das Sie erhalten haben. Bitte verzeihen Sie uns, dass wir Sie nicht erneut informieren, wenn es Technologie- oder Software-Updates für unser Produkt gibt.

NOTE

The information contained in this handbook is intended as a guide to the operation of these machines and does not form part of any contract. The data it contains has been obtained from the machine manufacturer and from other sources, Whilst every effort has been made to ensure the accuracy of these transcriptions it would be impracticable to verify each and every item. Furthermore, development of the machine may mean that the equipment supplied may differ in detail from the descriptions herein. The responsibility therefore lies with the user to satisfy himself that the equipment or process described is suitable for the purpose intended.

LIMITED WARRANTY

We makes every effort to assure that its products meet high quality and durability standards and warrants to the original retail consumer/purchaser of our products that each product be free from defects in materials and workmanship as follow; **ONE YEAR LIMITED WARRANTY ON ALL PRODUCTS UNLESSSPECIFIED OTHERWISE.** This Warranty does not apply to defects due directly or indirectly to misuse, abuse. negligence or accidents,normal wear-and tear, repair or alterations outside our facilities, or to a lack of maintenance.

We shall in no event be liable for death, injuries to persons or property or for incidental, contingent, special, or consequential damages arising from the use of our products.

To take advantage of this warranty, the product or part must be returned to us for examintion, postage prepaid. Proof of purchase date and an explanation of the complaint must accompany the merc handise. If our inspection discloses a defect, we will either repair or replace the product, or refund the purchases price if we cannot readily and quickly provide a repair or replacement, if you are willing to accept a refund. We will return repaired product or replacement at our expense, but if it is determined there in no defect, or that the defect resulted from causes not within the scope of Herman's warranty, then the user must bear the cost of storing and returning the prodcut.

The manufacturers reserve the right to change specifications at any time as they continually strive to achieve better quality equipment.

Copyright. The copyright of this instruction book is the property of us and may not be reproduced or copied without prior consent of us.

!\ WARNING!

Read and understand the entire instruction manual before attempting set-up or operation of this machine!

- 1. This machine is designed and intended for use by properly trained and experienced personnel only. If you are not familiar with the proper safe use of lathes, do not use this machine nutil proper training and knowledge has been obtained.
- 2. Keep guards in place. Safety guards must be 16. Always use safety glasses. Every day kept in place and in working order.
- 3. Remove adjusting keys and wrenches. Before turning on machine, check to see that any 17. Do not overreach. Keep proper footing and adjusting wrenches are removed from the tool.
- 4. Reduce the risk of unintentional starting. Make sure switch is in the OFF position before plugging in the tool.
- 5. Do not force tool. Always use a tool at the rate for which it was designed.
- 6. Use the right tool. Do not force a tool or attachment to do a job for which it was not designed.
- 7. Maintain tools with care. Keep tools sharp and clean for best and safest performance. Follow instructions for lubrication and changing accessories.
- 8. Always disconnect the machine from the power source before adjusting or servicing.
- 9. Check for damaged parts. Check for alignment of moving parts, breakage of parts, mounting, and any other condition that may affect the tools operation. A guard or any part that is damaged should be repaired or replaced.
- 10. Turn power off. Never laave a machine unattended. Do not leave a machine until it comes to a complete stop.
- 11. Keep work area clean, Cluttered areas and bench invite accidents.
- 12. Do not use in a dangerous environment. Do not use power tools in damp or wet locations, or expose them to rain. Keep work area well lighted.

- 13. Keep children and visitors away. All visitors should be kept a safe distance from the work
- 14. Make the workshop child proof. Use padlocks, master switchies, and remove starter keys.
- 15. Wear proper apparel. Loose clothing, gloves, neckties, rings, bracelets or other jewelry may get caught in moving parts. Non-slip footwesr is recommended. Wear protective hair covering to contain long hair. Do not wear any type of glove.
- glasses only have impact resistant lenses; they are not safety glasses.
- balance at all times.
- 18. Do not put hands near the cutter while the machine is operating.
- 19. Do not perform any set-up work while machine is operating.
- 20. Read and understand all warnings posted on the machine.
- 21. This manual is intended to familiarize you with the technical aspects of this lathe. It is not, nor was it intended to be a training manual.
- 22. Failure to comply with all of these warnings may result in serious injury.
- 23. Some dust created by power sanding, sawing, grinding, drilling and other construction activities contains chemicals known to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are lead from lead based paint; crystalline silica from bricks and cement and other masonry products.
- 24 Your risk from those exposures Varies, depending on how often you do this type of work. To reduce your exposure to these chernicals: work in a well ventilafed area, and work with approved safedty equipment, such as those dust masks that are specifically designed to filter our microscopic particles.

SPECIFICATIONS:

	8x14
Capacities:	
Swing Over Bed	8x14
Swing Over Cross Slide	210mm
Distance Between Centers	350mm
Width of Bed	70mm
Headstock:	
Hole Through Spindle	21mm
Taper in Spindle Nose	MT3
Number of Spindle Speeds	Variable
Range of Spindle Speeds	0-2500RPM
Feeding and Threading:	
Number of Metric Threads	10
Range of Metric Threads	0.5~3mm
Number of Imperial Threads	8
Range of Imperial Threads	8~44 T.P.I.
Range of Longitudinal Feed	0.1~0.20mm
Compound and Carrigage:	
Tool Post Type	4-Way
Maximum Compound Slide Travel	55mm
Maximum Cross Slide Travel	75mm
Maximum Carriage Travel	276mm
Tailstock:	
Tailstock SPindle Travel	60mm
Taper in Tailstock Spindle	MT2
Miscellaneous:	·
Main Motor	
Dimension:	
Length:	740mm
Width:	390mm
Height:	370mm
Weight:	58KG/46KG


The specifications in this manual are given as general information and are not binding. We reserves the right to effect, at any time and without prior notice, changes or alterations to parts. fitting and accessory equipment deemed necessary for any reason whatsoever.

STUD GEAR BOX	THREAD PER INCH	STUD GEAR BOX			THREAD PER INCH	STUD GEAR BOX				
<u> </u>		Α	В	C	D		A	В	C	D
H HB	12	40			30	26	40			65
	13	40			30	28	20			35
	14	40			35	32	20			40
	16	40			40	36	20			45
A_	18	40			45	38	20	50	60	57
СПВ	19	40	50	60	57	40	20			50
	20	40			50	44	20			55
	22	40			55	48	20			60
	24	40			60	52	20			65


INDICATOR TABLE							
PITCH	,	SCALE					
MM	14T	15T	16T				
0.5			3,6,9,12				
0.7	6.12						
0.8			6、12				
1			3.6.9.12				
1.25		4.8.12					
1.5			3′6′3′15				
1.75	6.12						
2			3,6,9,12				
2.5		4.8.12					



Rotating twist, stepless speed adjustment

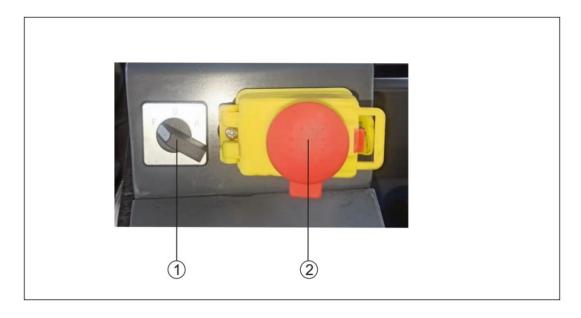

- 1,F(Forward rotation);o(Stop);R(Inverts)
- 2, Emergency Stop

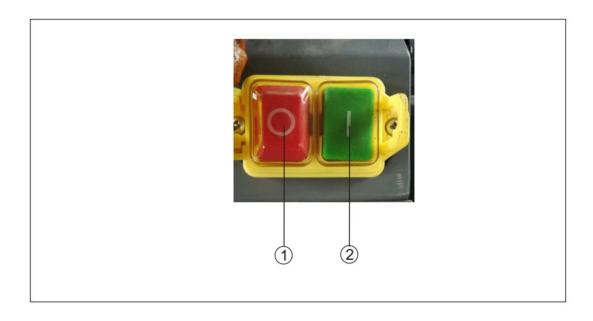

- 1,Stop
- 2,Start up

Hersteller: Shanghaimuxinmuyeyouxiangongsi

Adresse: Shuangchenglu 803nong11hao1602A-1609shi, baoshangu,

Shanghai 200000 CN.

Nach AUS importiert: SIHAO PTY LTD, 1 ROKEVA STREETEASTWOOD NSW

2122 Australien

Importiert in die USA: Sanven Technology Ltd., Suite 250, 9166 Anaheim Place,

Rancho Cucamonga, CA 91730



E-CrossStu GmbH

Mainzer Landstr.69, 60329 Frankfurt am Main.



YH CONSULTING LIMITED.

C/O YH Consulting Limited Office 147, Centurion House, London Road, Staines-upon-Thames, Surrey, TW18 4AX



Technischer Support und E-Garantie-Zertifikat www.vevor.com/support



Supporto tecnico e certificato di garanzia elettronica www.vevor.com/support

8x14 MANUALE DELL'OPERATORE

Continuiamo a impegnarci per fornirvi strumenti a prezzi competitivi.

"Risparmia la metà", "Metà prezzo" o qualsiasi altra espressione simile da noi utilizzata rappresenta solo una stima del risparmio che potresti ottenere acquistando determinati utensili con noi rispetto ai principali marchi principali e non significa necessariamente coprire tutte le categorie di utensili da noi offerti. Ti ricordiamo gentilmente di verificare attentamente quando effettui un ordine con noi se stai effettivamente risparmiando la metà rispetto ai principali marchi principali.





(L'immagine è solo di riferimento, fare riferimento all'oggetto reale)

HAI BISOGNO DI AIUTO? CONTATTACI!

Hai domande sul prodotto? Hai bisogno di supporto tecnico? Non esitare a contattarci: **Supporto**

tecnico e certificato di garanzia elettronica www.vevor.com/ support

Questa è l'istruzione originale, si prega di leggere attentamente tutte le istruzioni del manuale prima di utilizzare. VEVOR si riserva una chiara interpretazione del nostro manuale utente. L'aspetto del prodotto sarà soggetto al prodotto ricevuto. Vi preghiamo di perdonarci se non vi informeremo di nuovo se ci sono aggiornamenti tecnologici o software sul nostro prodotto.

NOTE

The information contained in this handbook is intended as a guide to the operation of these machines and does not form part of any contract. The data it contains has been obtained from the machine manufacturer and from other sources, Whilst every effort has been made to ensure the accuracy of these transcriptions it would be impracticable to verify each and every item. Furthermore, development of the machine may mean that the equipment supplied may differ in detail from the descriptions herein. The responsibility therefore lies with the user to satisfy himself that the equipment or process described is suitable for the purpose intended.

LIMITED WARRANTY

We makes every effort to assure that its products meet high quality and durability standards and warrants to the original retail consumer/purchaser of our products that each product be free from defects in materials and workmanship as follow; **ONE YEAR LIMITED WARRANTY ON ALL PRODUCTS UNLESSSPECIFIED OTHERWISE.** This Warranty does not apply to defects due directly or indirectly to misuse, abuse. negligence or accidents,normal wear-and tear, repair or alterations outside our facilities, or to a lack of maintenance.

We shall in no event be liable for death, injuries to persons or property or for incidental, contingent, special, or consequential damages arising from the use of our products.

To take advantage of this warranty, the product or part must be returned to us for examintion, postage prepaid. Proof of purchase date and an explanation of the complaint must accompany the merc handise. If our inspection discloses a defect, we will either repair or replace the product, or refund the purchases price if we cannot readily and quickly provide a repair or replacement, if you are willing to accept a refund. We will return repaired product or replacement at our expense, but if it is determined there in no defect, or that the defect resulted from causes not within the scope of Herman's warranty, then the user must bear the cost of storing and returning the prodcut.

The manufacturers reserve the right to change specifications at any time as they continually strive to achieve better quality equipment.

Copyright. The copyright of this instruction book is the property of us and may not be reproduced or copied without prior consent of us.

!\ WARNING!

Read and understand the entire instruction manual before attempting set-up or operation of this machine!

- 1. This machine is designed and intended for use by properly trained and experienced personnel only. If you are not familiar with the proper safe use of lathes, do not use this machine nutil proper training and knowledge has been obtained.
- 2. Keep guards in place. Safety guards must be 16. Always use safety glasses. Every day kept in place and in working order.
- 3. Remove adjusting keys and wrenches. Before turning on machine, check to see that any 17. Do not overreach. Keep proper footing and adjusting wrenches are removed from the tool.
- 4. Reduce the risk of unintentional starting. Make sure switch is in the OFF position before plugging in the tool.
- 5. Do not force tool. Always use a tool at the rate for which it was designed.
- 6. Use the right tool. Do not force a tool or attachment to do a job for which it was not designed.
- 7. Maintain tools with care. Keep tools sharp and clean for best and safest performance. Follow instructions for lubrication and changing accessories.
- 8. Always disconnect the machine from the power source before adjusting or servicing.
- 9. Check for damaged parts. Check for alignment of moving parts, breakage of parts, mounting, and any other condition that may affect the tools operation. A guard or any part that is damaged should be repaired or replaced.
- 10. Turn power off. Never laave a machine unattended. Do not leave a machine until it comes to a complete stop.
- 11. Keep work area clean, Cluttered areas and bench invite accidents.
- 12. Do not use in a dangerous environment. Do not use power tools in damp or wet locations, or expose them to rain. Keep work area well lighted.

- 13. Keep children and visitors away. All visitors should be kept a safe distance from the work
- 14. Make the workshop child proof. Use padlocks, master switchies, and remove starter keys.
- 15. Wear proper apparel. Loose clothing, gloves, neckties, rings, bracelets or other jewelry may get caught in moving parts. Non-slip footwesr is recommended. Wear protective hair covering to contain long hair. Do not wear any type of glove.
- glasses only have impact resistant lenses; they are not safety glasses.
- balance at all times.
- 18. Do not put hands near the cutter while the machine is operating.
- 19. Do not perform any set-up work while machine is operating.
- 20. Read and understand all warnings posted on the machine.
- 21. This manual is intended to familiarize you with the technical aspects of this lathe. It is not, nor was it intended to be a training manual.
- 22. Failure to comply with all of these warnings may result in serious injury.
- 23. Some dust created by power sanding, sawing, grinding, drilling and other construction activities contains chemicals known to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are lead from lead based paint; crystalline silica from bricks and cement and other masonry products.
- 24 Your risk from those exposures Varies, depending on how often you do this type of work. To reduce your exposure to these chernicals: work in a well ventilafed area, and work with approved safedty equipment, such as those dust masks that are specifically designed to filter our microscopic particles.

SPECIFICATIONS:

	8x14
Capacities:	
Swing Over Bed	8x14
Swing Over Cross Slide	210mm
Distance Between Centers	350mm
Width of Bed	70mm
Headstock:	
Hole Through Spindle	21mm
Taper in Spindle Nose	MT3
Number of Spindle Speeds	Variable
Range of Spindle Speeds	0-2500RPM
Feeding and Threading:	
Number of Metric Threads	10
Range of Metric Threads	0.5~3mm
Number of Imperial Threads	8
Range of Imperial Threads	8~44 T.P.I.
Range of Longitudinal Feed	0.1~0.20mm
Compound and Carrigage:	
Tool Post Type	4-Way
Maximum Compound Slide Travel	55mm
Maximum Cross Slide Travel	75mm
Maximum Carriage Travel	276mm
Tailstock:	
Tailstock SPindle Travel	60mm
Taper in Tailstock Spindle	MT2
Miscellaneous:	·
Main Motor	
Dimension:	
Length:	740mm
Width:	390mm
Height:	370mm
Weight:	58KG/46KG


The specifications in this manual are given as general information and are not binding. We reserves the right to effect, at any time and without prior notice, changes or alterations to parts. fitting and accessory equipment deemed necessary for any reason whatsoever.

STUD GEAR BOX	THREAD PER INCH	STUD GEAR BOX			THREAD PER INCH	STUD GEAR BOX				
<u> </u>		Α	В	C	D		A	В	C	D
H HB	12	40			30	26	40			65
	13	40			30	28	20			35
	14	40			35	32	20			40
	16	40			40	36	20			45
A_	18	40			45	38	20	50	60	57
СПВ	19	40	50	60	57	40	20			50
	20	40			50	44	20			55
	22	40			55	48	20			60
	24	40			60	52	20			65


IND	CATO)R TA	BLE
PITCH	,	SCALE	
MM	14T	15T	16T
0.5			3,6,9,12
0.7	6.12		
0.8			6、12
1			3.6.9.12
1.25		4.8.12	
1.5			3′6′3′15
1.75	6.12		
2			3,6,9,12
2.5		4.8.12	



Rotating twist, stepless speed adjustment

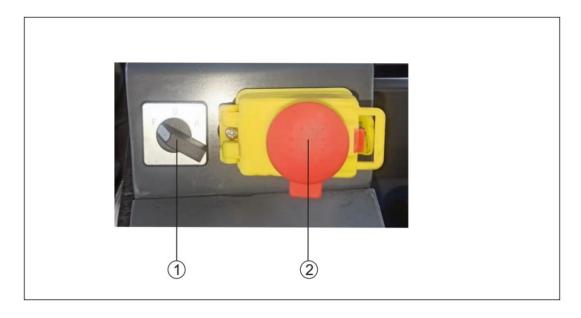

- 1,F(Forward rotation);o(Stop);R(Inverts)
- 2, Emergency Stop

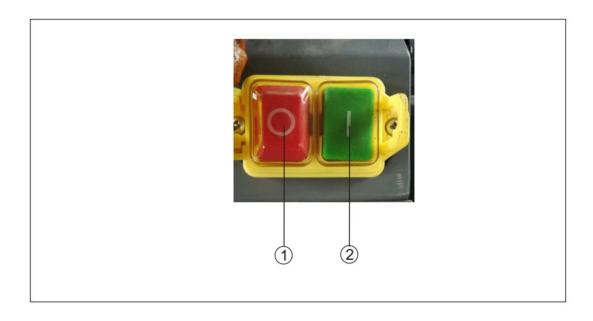

- 1,Stop
- 2,Start up

Produttore: Shanghaimuxinmuyeyouxiangongsi

Indirizzo: Shuangchenglu 803nong11hao1602A-1609shi, baoshanqu,

shanghai 200000 CN.

Importato in AUS: SIHAO PTY LTD, 1 ROKEVA STREETEASTWOOD NSW

2122 Australia

Importato negli USA: Sanven Technology Ltd., Suite 250, 9166 Anaheim Place,

Rancho Cucamonga, CA 91730

|--|

E-CrossStu GmbH

Mainzer Landstr.69, 60329 Francoforte sul Meno.



CONSULENZA YH LIMITATA.

C/O YH Consulting Limited Ufficio 147, Centurion House, Via Roma, 101, 00186 Roma, Italia



Supporto tecnico e certificato di garanzia elettronica www.vevor.com/support



Soporte técnico y certificado de garantía electrónica www.vevor.com/support

8x14 MANUAL DEL OPERADOR

Seguimos comprometidos a brindarle herramientas a precios competitivos.

"Ahorre la mitad", "mitad de precio" o cualquier otra expresión similar que utilicemos solo representa una estimación del ahorro que podría obtener al comprar ciertas herramientas con nosotros en comparación con las principales marcas y no necesariamente significa que cubra todas las categorías de herramientas que ofrecemos. Le recordamos que, al realizar un pedido con nosotros, verifique cuidadosamente si realmente está ahorrando la mitad en comparación con las principales marcas.





(La imagen es solo de referencia, consulte el objeto real)

¿NECESITA AYUDA? ¡CONTÁCTENOS!

¿Tiene preguntas sobre el producto? ¿Necesita asistencia técnica? No dude en ponerse en contacto con

nosotros: Asistencia técnica y certificado de garantía electrónica www.vevor.com/support

Estas son las instrucciones originales, lea atentamente todas las instrucciones del manual antes de utilizar el producto. VEVOR se reserva una interpretación clara de nuestro manual de usuario. La apariencia del producto estará sujeta al producto que recibió. Perdónenos por no informarle nuevamente si hay actualizaciones de tecnología o software en nuestro producto.

NOTE

The information contained in this handbook is intended as a guide to the operation of these machines and does not form part of any contract. The data it contains has been obtained from the machine manufacturer and from other sources, Whilst every effort has been made to ensure the accuracy of these transcriptions it would be impracticable to verify each and every item. Furthermore, development of the machine may mean that the equipment supplied may differ in detail from the descriptions herein. The responsibility therefore lies with the user to satisfy himself that the equipment or process described is suitable for the purpose intended.

LIMITED WARRANTY

We makes every effort to assure that its products meet high quality and durability standards and warrants to the original retail consumer/purchaser of our products that each product be free from defects in materials and workmanship as follow; **ONE YEAR LIMITED WARRANTY ON ALL PRODUCTS UNLESSSPECIFIED OTHERWISE.** This Warranty does not apply to defects due directly or indirectly to misuse, abuse. negligence or accidents,normal wear-and tear, repair or alterations outside our facilities, or to a lack of maintenance.

We shall in no event be liable for death, injuries to persons or property or for incidental, contingent, special, or consequential damages arising from the use of our products.

To take advantage of this warranty, the product or part must be returned to us for examintion, postage prepaid. Proof of purchase date and an explanation of the complaint must accompany the merc handise. If our inspection discloses a defect, we will either repair or replace the product, or refund the purchases price if we cannot readily and quickly provide a repair or replacement, if you are willing to accept a refund. We will return repaired product or replacement at our expense, but if it is determined there in no defect, or that the defect resulted from causes not within the scope of Herman's warranty, then the user must bear the cost of storing and returning the prodcut.

The manufacturers reserve the right to change specifications at any time as they continually strive to achieve better quality equipment.

Copyright. The copyright of this instruction book is the property of us and may not be reproduced or copied without prior consent of us.

!\ WARNING!

Read and understand the entire instruction manual before attempting set-up or operation of this machine!

- 1. This machine is designed and intended for use by properly trained and experienced personnel only. If you are not familiar with the proper safe use of lathes, do not use this machine nutil proper training and knowledge has been obtained.
- 2. Keep guards in place. Safety guards must be 16. Always use safety glasses. Every day kept in place and in working order.
- 3. Remove adjusting keys and wrenches. Before turning on machine, check to see that any 17. Do not overreach. Keep proper footing and adjusting wrenches are removed from the tool.
- 4. Reduce the risk of unintentional starting. Make sure switch is in the OFF position before plugging in the tool.
- 5. Do not force tool. Always use a tool at the rate for which it was designed.
- 6. Use the right tool. Do not force a tool or attachment to do a job for which it was not designed.
- 7. Maintain tools with care. Keep tools sharp and clean for best and safest performance. Follow instructions for lubrication and changing accessories.
- 8. Always disconnect the machine from the power source before adjusting or servicing.
- 9. Check for damaged parts. Check for alignment of moving parts, breakage of parts, mounting, and any other condition that may affect the tools operation. A guard or any part that is damaged should be repaired or replaced.
- 10. Turn power off. Never laave a machine unattended. Do not leave a machine until it comes to a complete stop.
- 11. Keep work area clean, Cluttered areas and bench invite accidents.
- 12. Do not use in a dangerous environment. Do not use power tools in damp or wet locations, or expose them to rain. Keep work area well lighted.

- 13. Keep children and visitors away. All visitors should be kept a safe distance from the work
- 14. Make the workshop child proof. Use padlocks, master switchies, and remove starter keys.
- 15. Wear proper apparel. Loose clothing, gloves, neckties, rings, bracelets or other jewelry may get caught in moving parts. Non-slip footwesr is recommended. Wear protective hair covering to contain long hair. Do not wear any type of glove.
- glasses only have impact resistant lenses; they are not safety glasses.
- balance at all times.
- 18. Do not put hands near the cutter while the machine is operating.
- 19. Do not perform any set-up work while machine is operating.
- 20. Read and understand all warnings posted on the machine.
- 21. This manual is intended to familiarize you with the technical aspects of this lathe. It is not, nor was it intended to be a training manual.
- 22. Failure to comply with all of these warnings may result in serious injury.
- 23. Some dust created by power sanding, sawing, grinding, drilling and other construction activities contains chemicals known to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are lead from lead based paint; crystalline silica from bricks and cement and other masonry products.
- 24 Your risk from those exposures Varies, depending on how often you do this type of work. To reduce your exposure to these chernicals: work in a well ventilafed area, and work with approved safedty equipment, such as those dust masks that are specifically designed to filter our microscopic particles.

SPECIFICATIONS:

	8x14
Capacities:	
Swing Over Bed	8x14
Swing Over Cross Slide	210mm
Distance Between Centers	350mm
Width of Bed	70mm
Headstock:	
Hole Through Spindle	21mm
Taper in Spindle Nose	MT3
Number of Spindle Speeds	Variable
Range of Spindle Speeds	0-2500RPM
Feeding and Threading:	
Number of Metric Threads	10
Range of Metric Threads	0.5~3mm
Number of Imperial Threads	8
Range of Imperial Threads	8~44 T.P.I.
Range of Longitudinal Feed	0.1~0.20mm
Compound and Carrigage:	
Tool Post Type	4-Way
Maximum Compound Slide Travel	55mm
Maximum Cross Slide Travel	75mm
Maximum Carriage Travel	276mm
Tailstock:	
Tailstock SPindle Travel	60mm
Taper in Tailstock Spindle	MT2
Miscellaneous:	·
Main Motor	
Dimension:	
Length:	740mm
Width:	390mm
Height:	370mm
Weight:	58KG/46KG


The specifications in this manual are given as general information and are not binding. We reserves the right to effect, at any time and without prior notice, changes or alterations to parts. fitting and accessory equipment deemed necessary for any reason whatsoever.

STUD GEAR BOX	THREAD PER INCH	STUD GEAR BOX			THREAD PER INCH		STUD GEAR BOX			
<u> </u>		Α	В	C	D		Α	В	C	D
B	12	40			30	26	40			65
	13	40			30	28	20			35
	14	40			35	32	20			40
	16	40			40	36	20			45
A	18	40			45	38	20	50	60	57
СПВ	19	40	50	60	57	40	20			50
	20	40			50	44	20			55
D	22	40			55	48	20			60
	24	40			60	52	20			65


INDICATOR TABLE							
PITCH	,	SCALE					
MM	14T	15T	16T				
0.5			3/6/3/15				
0.7	6.12						
0.8			6、12				
1			3.6.9.12				
1.25		4.8.12					
1.5			3/6/3/15				
1.75	6.12						
2			3,6,9,12				
2.5		4,8,12					



Rotating twist, stepless speed adjustment

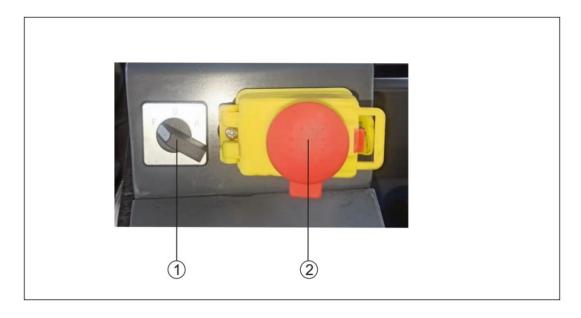

- 1,F(Forward rotation);o(Stop);R(Inverts)
- 2, Emergency Stop

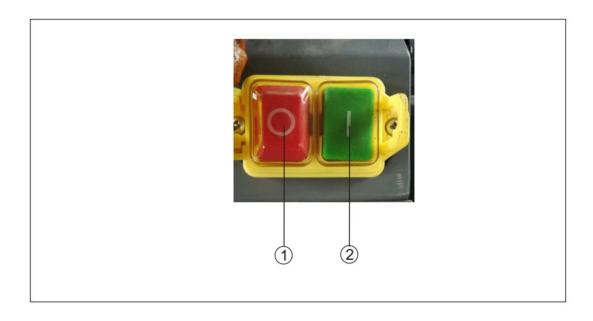

- 1,Stop
- 2,Start up

Fabricante: Shanghaimuxinmuyeyouxiangongsi

Dirección: Shuangchenglu 803nong11hao1602A-1609shi, baoshanqu, shanghai

200000 CN.

Importado a Australia: SIHAO PTY LTD. 1 ROKEVA STREETEASTWOOD NSW

2122 Australia

Importado a EE. UU.: Sanven Technology Ltd., Suite 250, 9166 Anaheim Place, Rancho

Cucamonga, CA 91730

REPRESEN	TANTE CE
----------	----------

E-CrossStu GmbH

Mainzer Landstr.69, 60329 Fráncfort del Meno.



YH CONSULTING LIMITADA.

C/O YH Consulting Limited Oficina 147, Centurion House, Carretera de Londres, Staines-upon-Thames, Surrey, TW18 4AX



Soporte técnico y certificado de garantía electrónica www.vevor.com/support



Wsparcie techniczne i certyfikat gwarancji elektronicznej www.vevor.com/support

8x14 INSTRUKCJA OBSŁUGI

Nadal staramy się oferować Państwu narzędzia w konkurencyjnych cenach.
"Oszczędź połowę", "Połowa ceny" lub inne podobne wyrażenia używane przez nas stanowią
jedynie szacunkowe oszczędności, jakie możesz uzyskać, kupując u nas określone narzędzia w
porównaniu z głównymi markami i niekoniecznie oznaczają one objęcie wszystkich kategorii narzędzi
oferowanych przez nas. Uprzejmie przypominamy, aby dokładnie sprawdzić, czy składając u nas
zamówienie faktycznie oszczędzasz połowę w porównaniu z głównymi markami.





(Zdjęcie ma charakter poglądowy, proszę odnosić się do rzeczywistego obiektu)

POTRZEBUJESZ POMOCY? SKONTAKTUJ SIĘ Z NAMI!

Masz pytania dotyczące produktu? Potrzebujesz wsparcia technicznego? Skontaktuj się z nami: Wsparcie

techniczne i certyfikat E-Gwarancji www.vevor.com/support

To jest oryginalna instrukcja, przed użyciem należy uważnie przeczytać wszystkie instrukcje. VEVOR zastrzega sobie jasną interpretację naszej instrukcji obsługi. Wygląd produktu będzie zależał od produktu, który otrzymałeś. Prosimy o wybaczenie, że nie poinformujemy Cię ponownie, jeśli w naszym produkcie pojawią się jakiekolwiek aktualizacje technologiczne lub oprogramowania.

NOTE

The information contained in this handbook is intended as a guide to the operation of these machines and does not form part of any contract. The data it contains has been obtained from the machine manufacturer and from other sources, Whilst every effort has been made to ensure the accuracy of these transcriptions it would be impracticable to verify each and every item. Furthermore, development of the machine may mean that the equipment supplied may differ in detail from the descriptions herein. The responsibility therefore lies with the user to satisfy himself that the equipment or process described is suitable for the purpose intended.

LIMITED WARRANTY

We makes every effort to assure that its products meet high quality and durability standards and warrants to the original retail consumer/purchaser of our products that each product be free from defects in materials and workmanship as follow; **ONE YEAR LIMITED WARRANTY ON ALL PRODUCTS UNLESSSPECIFIED OTHERWISE.** This Warranty does not apply to defects due directly or indirectly to misuse, abuse. negligence or accidents,normal wear-and tear, repair or alterations outside our facilities, or to a lack of maintenance.

We shall in no event be liable for death, injuries to persons or property or for incidental, contingent, special, or consequential damages arising from the use of our products.

To take advantage of this warranty, the product or part must be returned to us for examintion, postage prepaid. Proof of purchase date and an explanation of the complaint must accompany the merc handise. If our inspection discloses a defect, we will either repair or replace the product, or refund the purchases price if we cannot readily and quickly provide a repair or replacement, if you are willing to accept a refund. We will return repaired product or replacement at our expense, but if it is determined there in no defect, or that the defect resulted from causes not within the scope of Herman's warranty, then the user must bear the cost of storing and returning the prodcut.

The manufacturers reserve the right to change specifications at any time as they continually strive to achieve better quality equipment.

Copyright. The copyright of this instruction book is the property of us and may not be reproduced or copied without prior consent of us.

!\ WARNING!

Read and understand the entire instruction manual before attempting set-up or operation of this machine!

- 1. This machine is designed and intended for use by properly trained and experienced personnel only. If you are not familiar with the proper safe use of lathes, do not use this machine nutil proper training and knowledge has been obtained.
- 2. Keep guards in place. Safety guards must be 16. Always use safety glasses. Every day kept in place and in working order.
- 3. Remove adjusting keys and wrenches. Before turning on machine, check to see that any 17. Do not overreach. Keep proper footing and adjusting wrenches are removed from the tool.
- 4. Reduce the risk of unintentional starting. Make sure switch is in the OFF position before plugging in the tool.
- 5. Do not force tool. Always use a tool at the rate for which it was designed.
- 6. Use the right tool. Do not force a tool or attachment to do a job for which it was not designed.
- 7. Maintain tools with care. Keep tools sharp and clean for best and safest performance. Follow instructions for lubrication and changing accessories.
- 8. Always disconnect the machine from the power source before adjusting or servicing.
- 9. Check for damaged parts. Check for alignment of moving parts, breakage of parts, mounting, and any other condition that may affect the tools operation. A guard or any part that is damaged should be repaired or replaced.
- 10. Turn power off. Never laave a machine unattended. Do not leave a machine until it comes to a complete stop.
- 11. Keep work area clean, Cluttered areas and bench invite accidents.
- 12. Do not use in a dangerous environment. Do not use power tools in damp or wet locations, or expose them to rain. Keep work area well lighted.

- 13. Keep children and visitors away. All visitors should be kept a safe distance from the work
- 14. Make the workshop child proof. Use padlocks, master switchies, and remove starter keys.
- 15. Wear proper apparel. Loose clothing, gloves, neckties, rings, bracelets or other jewelry may get caught in moving parts. Non-slip footwesr is recommended. Wear protective hair covering to contain long hair. Do not wear any type of glove.
- glasses only have impact resistant lenses; they are not safety glasses.
- balance at all times.
- 18. Do not put hands near the cutter while the machine is operating.
- 19. Do not perform any set-up work while machine is operating.
- 20. Read and understand all warnings posted on the machine.
- 21. This manual is intended to familiarize you with the technical aspects of this lathe. It is not, nor was it intended to be a training manual.
- 22. Failure to comply with all of these warnings may result in serious injury.
- 23. Some dust created by power sanding, sawing, grinding, drilling and other construction activities contains chemicals known to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are lead from lead based paint; crystalline silica from bricks and cement and other masonry products.
- 24 Your risk from those exposures Varies, depending on how often you do this type of work. To reduce your exposure to these chernicals: work in a well ventilafed area, and work with approved safedty equipment, such as those dust masks that are specifically designed to filter our microscopic particles.

SPECIFICATIONS:

	8x14
Capacities:	
Swing Over Bed	8x14
Swing Over Cross Slide	210mm
Distance Between Centers	350mm
Width of Bed	70mm
Headstock:	
Hole Through Spindle	21mm
Taper in Spindle Nose	MT3
Number of Spindle Speeds	Variable
Range of Spindle Speeds	0-2500RPM
Feeding and Threading:	
Number of Metric Threads	10
Range of Metric Threads	0.5~3mm
Number of Imperial Threads	8
Range of Imperial Threads	8~44 T.P.I.
Range of Longitudinal Feed	0.1~0.20mm
Compound and Carrigage:	
Tool Post Type	4-Way
Maximum Compound Slide Travel	55mm
Maximum Cross Slide Travel	75mm
Maximum Carriage Travel	276mm
Tailstock:	
Tailstock SPindle Travel	60mm
Taper in Tailstock Spindle	MT2
Miscellaneous:	·
Main Motor	
Dimension:	
Length:	740mm
Width:	390mm
Height:	370mm
Weight:	58KG/46KG


The specifications in this manual are given as general information and are not binding. We reserves the right to effect, at any time and without prior notice, changes or alterations to parts. fitting and accessory equipment deemed necessary for any reason whatsoever.

STUD GEAR BOX	THREAD PER INCH	STUD GEAR BOX			THREAD PER INCH		STUD GEAR BOX			
<u> </u>		Α	В	C	D		Α	В	C	D
B	12	40			30	26	40			65
	13	40			30	28	20			35
	14	40			35	32	20			40
	16	40			40	36	20			45
A	18	40			45	38	20	50	60	57
СПВ	19	40	50	60	57	40	20			50
	20	40			50	44	20			55
D	22	40			55	48	20			60
	24	40			60	52	20			65


INDICATOR TABLE							
PITCH	,	SCALE					
MM	14T	15T	16T				
0.5			3/6/3/15				
0.7	6.12						
0.8			6、12				
1			3.6.9.12				
1.25		4.8.12					
1.5			3/6/3/15				
1.75	6.12						
2			3,6,9,12				
2.5		4,8,12					



Rotating twist, stepless speed adjustment

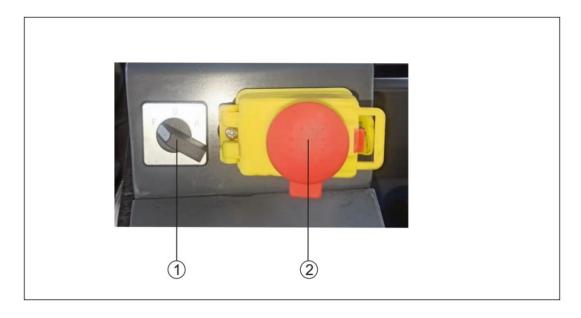

- 1,F(Forward rotation);o(Stop);R(Inverts)
- 2, Emergency Stop

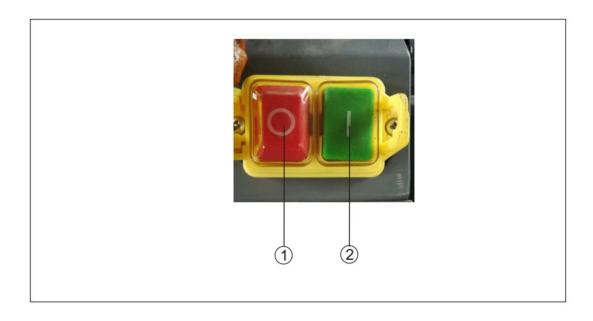

- 1,Stop
- 2,Start up

Producent: Shanghaimuxinmuyeyouxiangongsi

Adres: Shuangchenglu 803nong11hao1602A-1609shi, baoshanqu, szanghaj 200000 CN.

Importowane do AUS: SIHAO PTY LTD, 1 ROKEVA STREETEASTWOOD NSW 2122 Australia

Importowane do USA: Sanven Technology Ltd., Suite 250, 9166 Anaheim Place, Rancho Cucamonga, CA 91730



E-CrossStu GmbH

Mainzer Landstr.69, 60329 Frankfurt nad Menem.



YH CONSULTING LIMITED.

C/O YH Consulting Limited Biuro 147, Centurion House, London Road, Staines-upon-Thames, Surrey, TW18 4AX



Wsparcie techniczne i certyfikat e-gwarancji www.vevor.com/support



Technische ondersteuning en e-garantiecertificaat www.vevor.com/support

8x14 **GEBRUIKSAANWIJZING**

Wij streven er voortdurend naar om u gereedschappen tegen concurrerende prijzen te leveren.

"Save Half", "Half Price" of andere soortgelijke uitdrukkingen die wij gebruiken, geven alleen een schatting weer
van de besparingen die u kunt behalen door bepaalde gereedschappen bij ons te kopen in vergelijking met de grote
topmerken en betekent niet noodzakelijkerwijs dat alle categorieën gereedschappen die wij aanbieden, worden gedekt.

Wij herinneren u eraan om zorgvuldig te controleren of u daadwerkelijk de helft bespaart in vergelijking met de
grote topmerken wanneer u een bestelling bij ons plaatst.





(De afbeelding is alleen ter referentie, kijk naar het daadwerkelijke object)

HULP NODIG? NEEM CONTACT MET ONS OP!

Heeft u vragen over het product? Heeft u technische ondersteuning nodig? Neem dan gerust contact met

ons op: Technische ondersteuning en E-garantiecertificaat www.vevor.com/support

Dit is de originele instructie, lees alle handleidingen zorgvuldig door voordat u het product gebruikt. VEVOR behoudt zich een duidelijke interpretatie van onze gebruikershandleiding voor. Het uiterlijk van het product is afhankelijk van het product dat u hebt ontvangen. Vergeef ons dat we u niet opnieuw zullen informeren als er technologie- of software-updates voor ons product zijn.

NOTE

The information contained in this handbook is intended as a guide to the operation of these machines and does not form part of any contract. The data it contains has been obtained from the machine manufacturer and from other sources, Whilst every effort has been made to ensure the accuracy of these transcriptions it would be impracticable to verify each and every item. Furthermore, development of the machine may mean that the equipment supplied may differ in detail from the descriptions herein. The responsibility therefore lies with the user to satisfy himself that the equipment or process described is suitable for the purpose intended.

LIMITED WARRANTY

We makes every effort to assure that its products meet high quality and durability standards and warrants to the original retail consumer/purchaser of our products that each product be free from defects in materials and workmanship as follow; **ONE YEAR LIMITED WARRANTY ON ALL PRODUCTS UNLESSSPECIFIED OTHERWISE.** This Warranty does not apply to defects due directly or indirectly to misuse, abuse. negligence or accidents,normal wear-and tear, repair or alterations outside our facilities, or to a lack of maintenance.

We shall in no event be liable for death, injuries to persons or property or for incidental, contingent, special, or consequential damages arising from the use of our products.

To take advantage of this warranty, the product or part must be returned to us for examintion, postage prepaid. Proof of purchase date and an explanation of the complaint must accompany the merc handise. If our inspection discloses a defect, we will either repair or replace the product, or refund the purchases price if we cannot readily and quickly provide a repair or replacement, if you are willing to accept a refund. We will return repaired product or replacement at our expense, but if it is determined there in no defect, or that the defect resulted from causes not within the scope of Herman's warranty, then the user must bear the cost of storing and returning the prodcut.

The manufacturers reserve the right to change specifications at any time as they continually strive to achieve better quality equipment.

Copyright. The copyright of this instruction book is the property of us and may not be reproduced or copied without prior consent of us.

!\ WARNING!

Read and understand the entire instruction manual before attempting set-up or operation of this machine!

- 1. This machine is designed and intended for use by properly trained and experienced personnel only. If you are not familiar with the proper safe use of lathes, do not use this machine nutil proper training and knowledge has been obtained.
- 2. Keep guards in place. Safety guards must be 16. Always use safety glasses. Every day kept in place and in working order.
- 3. Remove adjusting keys and wrenches. Before turning on machine, check to see that any 17. Do not overreach. Keep proper footing and adjusting wrenches are removed from the tool.
- 4. Reduce the risk of unintentional starting. Make sure switch is in the OFF position before plugging in the tool.
- 5. Do not force tool. Always use a tool at the rate for which it was designed.
- 6. Use the right tool. Do not force a tool or attachment to do a job for which it was not designed.
- 7. Maintain tools with care. Keep tools sharp and clean for best and safest performance. Follow instructions for lubrication and changing accessories.
- 8. Always disconnect the machine from the power source before adjusting or servicing.
- 9. Check for damaged parts. Check for alignment of moving parts, breakage of parts, mounting, and any other condition that may affect the tools operation. A guard or any part that is damaged should be repaired or replaced.
- 10. Turn power off. Never laave a machine unattended. Do not leave a machine until it comes to a complete stop.
- 11. Keep work area clean, Cluttered areas and bench invite accidents.
- 12. Do not use in a dangerous environment. Do not use power tools in damp or wet locations, or expose them to rain. Keep work area well lighted.

- 13. Keep children and visitors away. All visitors should be kept a safe distance from the work
- 14. Make the workshop child proof. Use padlocks, master switchies, and remove starter keys.
- 15. Wear proper apparel. Loose clothing, gloves, neckties, rings, bracelets or other jewelry may get caught in moving parts. Non-slip footwesr is recommended. Wear protective hair covering to contain long hair. Do not wear any type of glove.
- glasses only have impact resistant lenses; they are not safety glasses.
- balance at all times.
- 18. Do not put hands near the cutter while the machine is operating.
- 19. Do not perform any set-up work while machine is operating.
- 20. Read and understand all warnings posted on the machine.
- 21. This manual is intended to familiarize you with the technical aspects of this lathe. It is not, nor was it intended to be a training manual.
- 22. Failure to comply with all of these warnings may result in serious injury.
- 23. Some dust created by power sanding, sawing, grinding, drilling and other construction activities contains chemicals known to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are lead from lead based paint; crystalline silica from bricks and cement and other masonry products.
- 24 Your risk from those exposures Varies, depending on how often you do this type of work. To reduce your exposure to these chernicals: work in a well ventilafed area, and work with approved safedty equipment, such as those dust masks that are specifically designed to filter our microscopic particles.

SPECIFICATIONS:

	8x14
Capacities:	
Swing Over Bed	8x14
Swing Over Cross Slide	210mm
Distance Between Centers	350mm
Width of Bed	70mm
Headstock:	
Hole Through Spindle	21mm
Taper in Spindle Nose	MT3
Number of Spindle Speeds	Variable
Range of Spindle Speeds	0-2500RPM
Feeding and Threading:	
Number of Metric Threads	10
Range of Metric Threads	0.5~3mm
Number of Imperial Threads	8
Range of Imperial Threads	8~44 T.P.I.
Range of Longitudinal Feed	0.1~0.20mm
Compound and Carrigage:	
Tool Post Type	4-Way
Maximum Compound Slide Travel	55mm
Maximum Cross Slide Travel	75mm
Maximum Carriage Travel	276mm
Tailstock:	
Tailstock SPindle Travel	60mm
Taper in Tailstock Spindle	MT2
Miscellaneous:	·
Main Motor	
Dimension:	
Length:	740mm
Width:	390mm
Height:	370mm
Weight:	58KG/46KG


The specifications in this manual are given as general information and are not binding. We reserves the right to effect, at any time and without prior notice, changes or alterations to parts. fitting and accessory equipment deemed necessary for any reason whatsoever.

STUD GEAR BOX	THREAD PER INCH	STUD GEAR BOX			THREAD PER INCH		STUD GEAR BOX			
<u> </u>		Α	В	C	D		A	В	C	D
H HB	12	40			30	26	40			65
	13	40			30	28	20			35
	14	40			35	32	20			40
	16	40			40	36	20			45
A_	18	40			45	38	20	50	60	57
СПВ	19	40	50	60	57	40	20			50
	20	40			50	44	20			55
	22	40			55	48	20			60
	24	40			60	52	20			65


INDICATOR TABLE							
PITCH	,	SCALE					
MM	14T	15T	16T				
0.5			3,6,9,12				
0.7	6.12						
0.8			6、12				
1			3.6.9.12				
1.25		4.8.12					
1.5			3′6′3′15				
1.75	6.12						
2			3,6,9,12				
2.5		4.8.12					



Rotating twist, stepless speed adjustment

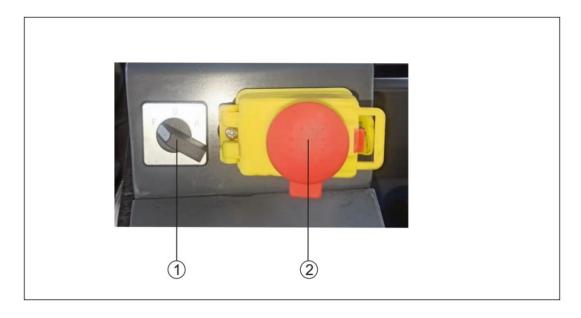

- 1,F(Forward rotation);o(Stop);R(Inverts)
- 2, Emergency Stop

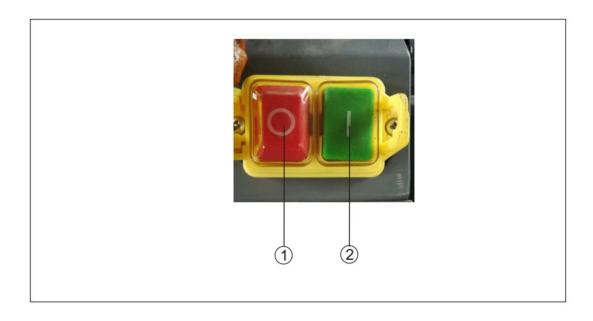

- 1,Stop
- 2,Start up

Fabrikant: Shanghaimuxinmuyeyouxiangongsi

Adres: Shuangchenglu 803nong11hao1602A-1609shi, baoshanqu, shanghai

200000 CN.

Geimporteerd naar AUS: SIHAO PTY LTD, 1 ROKEVA STREETEASTWOOD NSW

2122 Australië

Geïmporteerd naar de VS: Sanven Technology Ltd., Suite 250, 9166 Anaheim

Place, Rancho Cucamonga, CA 91730



E-CrossStu GmbH

Mainzer Landstr.69, 60329 Frankfurt am Main.



YH CONSULTING LIMITED.

C/O YH Consulting Limited Kantoor 147, Centurion House, Londen Road, Staines-upon-Thames, Surrey, TW18 4AX



Technische ondersteuning en e-garantiecertificaat www.vevor.com/support



Teknisk support och e-garanticertifikat www.vevor.com/support

8x14 BRUKSANVISNING

Vi fortsätter att vara engagerade i att ge dig verktyg till konkurrenskraftiga priser.

"Spara hälften", "halva priset" eller andra liknande uttryck som används av oss representerar
bara en uppskattning av besparingar du kan dra nytta av att köpa vissa verktyg hos oss jämfört med
de stora toppmärkena och betyder inte nödvändigtvis att täcka alla kategorier av verktyg som erbjuds
av oss. Du påminns vänligen om att noggrant kontrollera när du gör en beställning hos oss om
du faktiskt sparar hälften i jämförelse med de främsta stora varumärkena.





(Bilden är endast för referens, se det faktiska objektet)

BEHÖVER HJÄLP? KONTAKTA OSS!

Har du produktfrågor? Behöver du teknisk support? Kontakta oss gärna: **Teknisk support och e-**

garanticertifikat www.vevor.com/support

Detta är den ursprungliga instruktionen, läs alla instruktioner noggrant innan du använder den. VEVOR reserverar sig för en tydlig tolkning av vår användarmanual. Utseendet på produkten är beroende av den produkt du fått. Ursäkta oss att vi inte kommer att informera dig igen om det finns någon teknik eller mjukvaruuppdateringar på vår produkt.

NOTE

The information contained in this handbook is intended as a guide to the operation of these machines and does not form part of any contract. The data it contains has been obtained from the machine manufacturer and from other sources, Whilst every effort has been made to ensure the accuracy of these transcriptions it would be impracticable to verify each and every item. Furthermore, development of the machine may mean that the equipment supplied may differ in detail from the descriptions herein. The responsibility therefore lies with the user to satisfy himself that the equipment or process described is suitable for the purpose intended.

LIMITED WARRANTY

We makes every effort to assure that its products meet high quality and durability standards and warrants to the original retail consumer/purchaser of our products that each product be free from defects in materials and workmanship as follow; **ONE YEAR LIMITED WARRANTY ON ALL PRODUCTS UNLESSSPECIFIED OTHERWISE.** This Warranty does not apply to defects due directly or indirectly to misuse, abuse. negligence or accidents,normal wear-and tear, repair or alterations outside our facilities, or to a lack of maintenance.

We shall in no event be liable for death, injuries to persons or property or for incidental, contingent, special, or consequential damages arising from the use of our products.

To take advantage of this warranty, the product or part must be returned to us for examintion, postage prepaid. Proof of purchase date and an explanation of the complaint must accompany the merc handise. If our inspection discloses a defect, we will either repair or replace the product, or refund the purchases price if we cannot readily and quickly provide a repair or replacement, if you are willing to accept a refund. We will return repaired product or replacement at our expense, but if it is determined there in no defect, or that the defect resulted from causes not within the scope of Herman's warranty, then the user must bear the cost of storing and returning the prodcut.

The manufacturers reserve the right to change specifications at any time as they continually strive to achieve better quality equipment.

Copyright. The copyright of this instruction book is the property of us and may not be reproduced or copied without prior consent of us.

!\ WARNING!

Read and understand the entire instruction manual before attempting set-up or operation of this machine!

- 1. This machine is designed and intended for use by properly trained and experienced personnel only. If you are not familiar with the proper safe use of lathes, do not use this machine nutil proper training and knowledge has been obtained.
- 2. Keep guards in place. Safety guards must be 16. Always use safety glasses. Every day kept in place and in working order.
- 3. Remove adjusting keys and wrenches. Before turning on machine, check to see that any 17. Do not overreach. Keep proper footing and adjusting wrenches are removed from the tool.
- 4. Reduce the risk of unintentional starting. Make sure switch is in the OFF position before plugging in the tool.
- 5. Do not force tool. Always use a tool at the rate for which it was designed.
- 6. Use the right tool. Do not force a tool or attachment to do a job for which it was not designed.
- 7. Maintain tools with care. Keep tools sharp and clean for best and safest performance. Follow instructions for lubrication and changing accessories.
- 8. Always disconnect the machine from the power source before adjusting or servicing.
- 9. Check for damaged parts. Check for alignment of moving parts, breakage of parts, mounting, and any other condition that may affect the tools operation. A guard or any part that is damaged should be repaired or replaced.
- 10. Turn power off. Never laave a machine unattended. Do not leave a machine until it comes to a complete stop.
- 11. Keep work area clean, Cluttered areas and bench invite accidents.
- 12. Do not use in a dangerous environment. Do not use power tools in damp or wet locations, or expose them to rain. Keep work area well lighted.

- 13. Keep children and visitors away. All visitors should be kept a safe distance from the work
- 14. Make the workshop child proof. Use padlocks, master switchies, and remove starter keys.
- 15. Wear proper apparel. Loose clothing, gloves, neckties, rings, bracelets or other jewelry may get caught in moving parts. Non-slip footwesr is recommended. Wear protective hair covering to contain long hair. Do not wear any type of glove.
- glasses only have impact resistant lenses; they are not safety glasses.
- balance at all times.
- 18. Do not put hands near the cutter while the machine is operating.
- 19. Do not perform any set-up work while machine is operating.
- 20. Read and understand all warnings posted on the machine.
- 21. This manual is intended to familiarize you with the technical aspects of this lathe. It is not, nor was it intended to be a training manual.
- 22. Failure to comply with all of these warnings may result in serious injury.
- 23. Some dust created by power sanding, sawing, grinding, drilling and other construction activities contains chemicals known to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are lead from lead based paint; crystalline silica from bricks and cement and other masonry products.
- 24 Your risk from those exposures Varies, depending on how often you do this type of work. To reduce your exposure to these chernicals: work in a well ventilafed area, and work with approved safedty equipment, such as those dust masks that are specifically designed to filter our microscopic particles.

SPECIFICATIONS:

	8x14
Capacities:	
Swing Over Bed	8x14
Swing Over Cross Slide	210mm
Distance Between Centers	350mm
Width of Bed	70mm
Headstock:	
Hole Through Spindle	21mm
Taper in Spindle Nose	MT3
Number of Spindle Speeds	Variable
Range of Spindle Speeds	0-2500RPM
Feeding and Threading:	
Number of Metric Threads	10
Range of Metric Threads	0.5~3mm
Number of Imperial Threads	8
Range of Imperial Threads	8~44 T.P.I.
Range of Longitudinal Feed	0.1~0.20mm
Compound and Carrigage:	
Tool Post Type	4-Way
Maximum Compound Slide Travel	55mm
Maximum Cross Slide Travel	75mm
Maximum Carriage Travel	276mm
Tailstock:	
Tailstock SPindle Travel	60mm
Taper in Tailstock Spindle	MT2
Miscellaneous:	·
Main Motor	
Dimension:	
Length:	740mm
Width:	390mm
Height:	370mm
Weight:	58KG/46KG


The specifications in this manual are given as general information and are not binding. We reserves the right to effect, at any time and without prior notice, changes or alterations to parts. fitting and accessory equipment deemed necessary for any reason whatsoever.

STUD GEAR BOX	THREAD PER INCH	STUD GEAR BOX			THREAD PER INCH		STUD GEAR BOX			
<u> </u>		Α	В	C	D		A	В	C	D
H HB	12	40			30	26	40			65
	13	40			30	28	20			35
	14	40			35	32	20			40
	16	40			40	36	20			45
A_	18	40			45	38	20	50	60	57
СПВ	19	40	50	60	57	40	20			50
	20	40			50	44	20			55
	22	40			55	48	20			60
	24	40			60	52	20			65


INDICATOR TABLE			
PITCH	SCALE		
MM	14T	15T	16T
0.5			3,6,9,12
0.7	6.12		
0.8			6、12
1			3.6.9.12
1.25		4.8.12	
1.5			3′6′3′15
1.75	6.12		
2			3,6,9,12
2.5		4.8.12	



Rotating twist, stepless speed adjustment

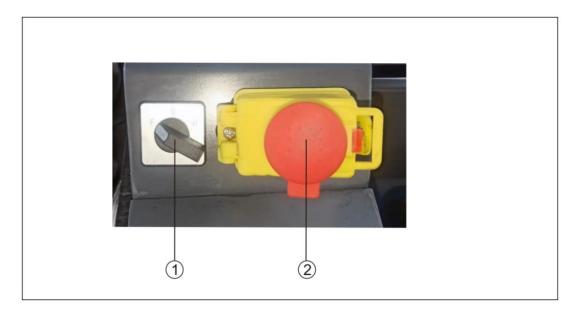

- 1,F(Forward rotation);o(Stop);R(Inverts)
- 2, Emergency Stop

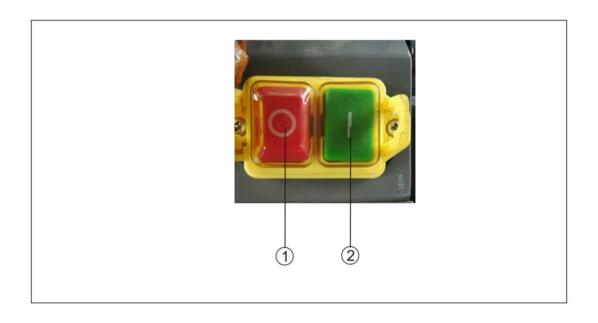

- 1,Stop
- 2,Start up

Tillverkare: Shanghaimuxinmuyeyouxiangongsi

Adress: Shuangchenglu 803nong11hao1602A-1609shi, baoshangu.

shanghai 200000 CN.

Importerad till AUS: SIHAO PTY LTD, 1 ROKEVA STREETEASTWOOD NSW

2122 Australien

Importerad till USA: Sanven Technology Ltd., Suite 250, 9166 Anaheim Place,

Rancho Cucamonga, CA 91730



E-CrossStu GmbH

Mainzer Landstr.69, 60329 Frankfurt am Main.



YH CONSULTING LIMITED.

C/O YH Consulting Limited Office 147, Centurion House, London Road, Staines-upon-Thames, Surrey, TW18 4AX



Teknisk support och e-garanticertifikat www.vevor.com/support